



Venturer CR20 Front Screen Replacement

Replace your front screen to bring back a clear display to that alarm clock.

Written By: Robert Myers



INTRODUCTION

In this guide, you will learn how to remove and install the front screen of your alarm clock. The process is quick and easy, with a simple unscrewing followed by popping off the screen.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Front Screen



- Locate and unscrew the single 2mm Phillips screw from the clock.

Step 2



- Using a moderate amount of force, position the screwdriver in the crack of the front screen (as shown) and push away from the clock.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-22 09:29:55 AM (MST).

