



# Verizon Ellipsis Jetpack MHS800L Screen Replacement

This guide will show the user how to replace the LCD screen on your Verizon Ellipsis Jetpack MHS800L

Written By: Richard J Porras



This document was generated on 2020-03-13 03:06:19 AM (MST).

## INTRODUCTION

What you can expect from this guide is a step by step process on how to remove the LCD display screen on a Verizon Ellipsis Jetpack MHS800L.

### TOOLS:

- [64 Bit Driver Kit \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [Tweezers \(1\)](#)

## Step 1 — Plastic Case



- Remove the SIM card, that is located on top of the Jetpack.


## Step 2



- With the device on its back and the label facing you, remove the rubber screw cover on the top left corner of the device.
- Under the rubber circle, remove the 1.25 mm screw using a Philips #00 screwdriver.

ⓘ You may need to peel back a piece of double sided tape covering the screw hole.

## Step 3

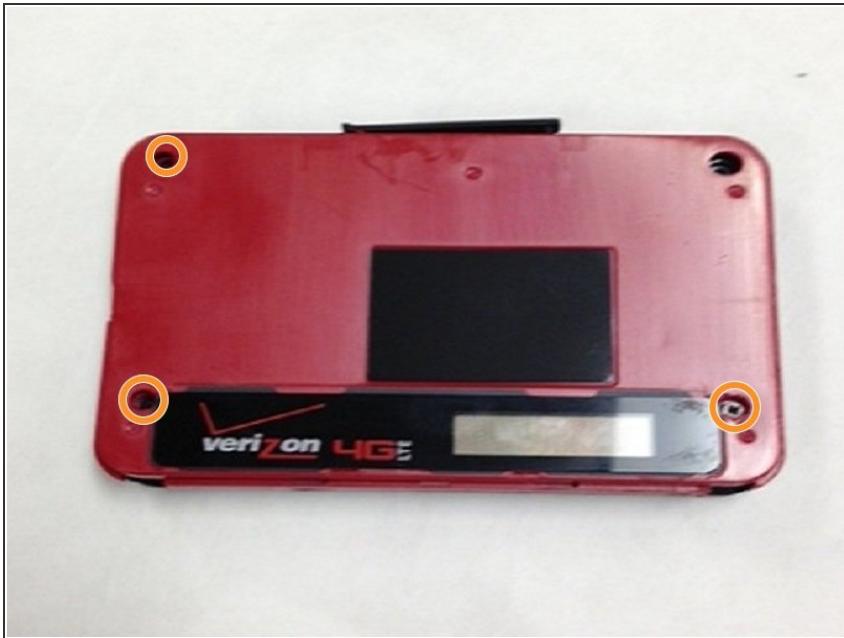


- Remove three 1.25 mm screws.

## Step 4



- Use a plastic opening tool at the seams and pry open the case.

## Step 5

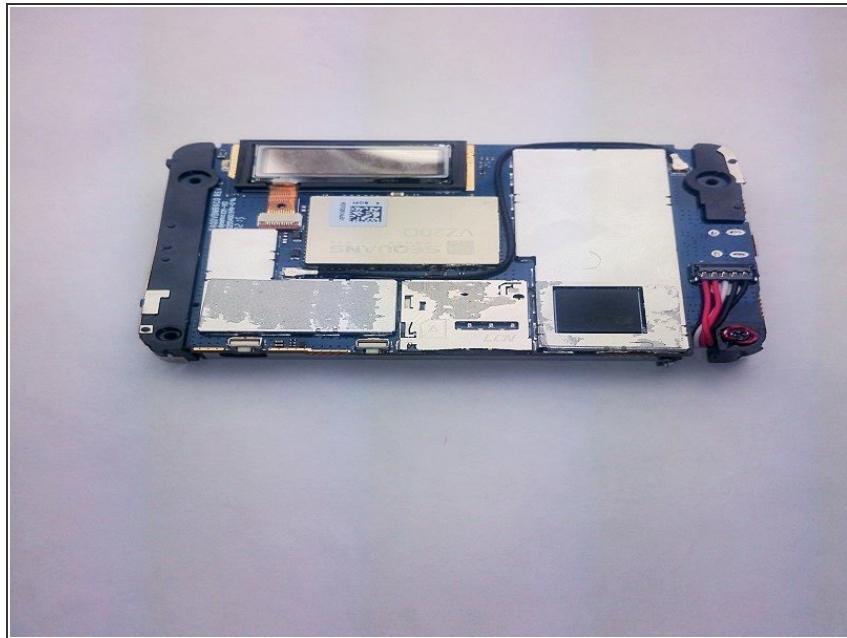

- Once the cover is off, this is what your device will look like.


## Step 6 — Battery



- Once you have the case off of your device gently pull your battery away from the device.


**⚠** Do not attempt to completely remove the battery, as it is still attached to the motherboard by wires.

## Step 7

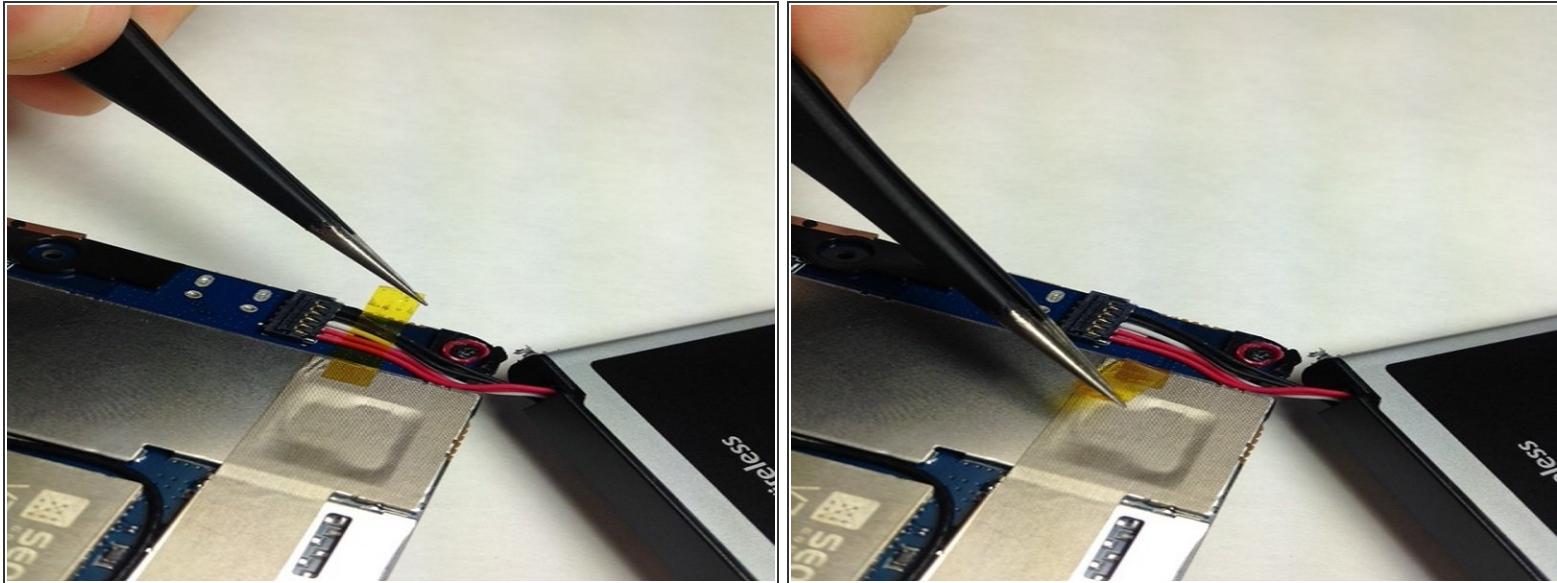

- With a pair of ESD Tweezers remove the yellow tape covering the battery wires.


## Step 8

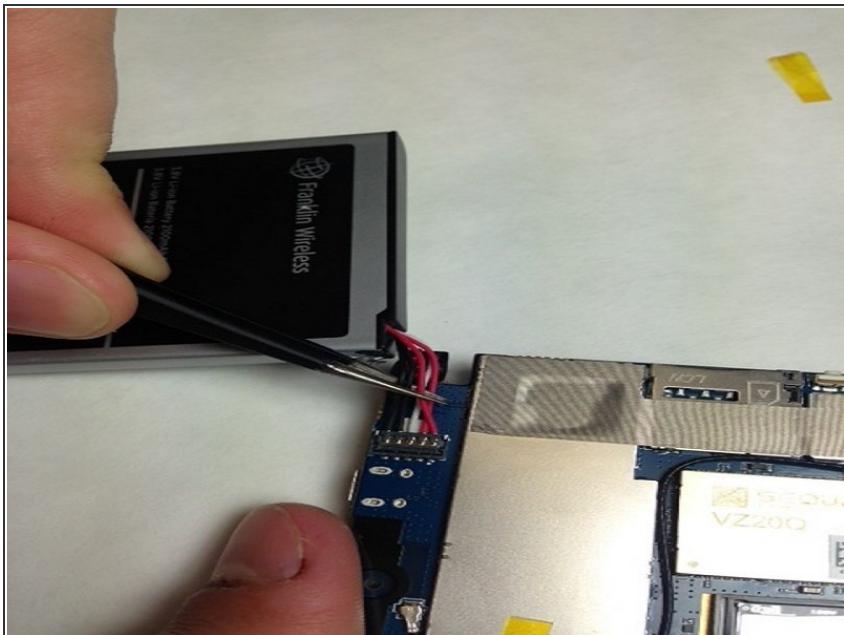

- After removing the tape you may use the ESD Tweezers to remove the wiring harness from the circuit board.


**⚠** Do not squeeze the wires to hard you may damage them and cause a short.

## Step 9

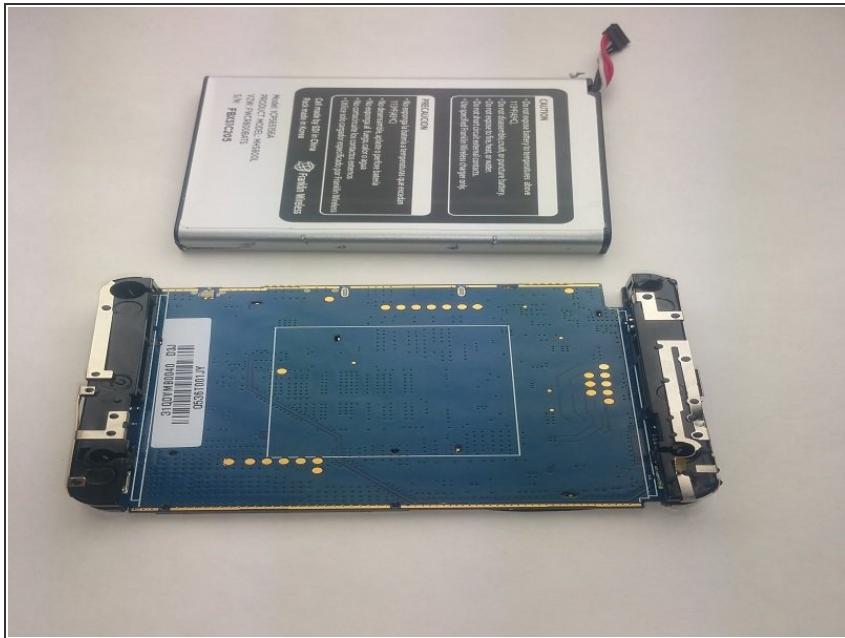



- You may now replace the battery in your Verizon Ellipsis Jetpack MHS800L.

## Step 10 — Screen

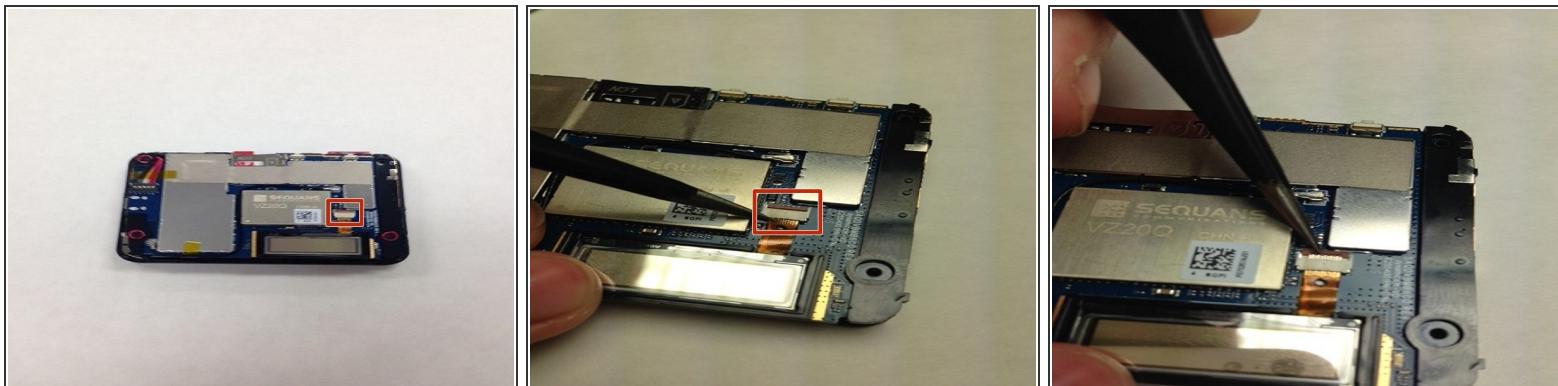

- Locate the LCD screen cable and unlatch the harness connection from the circuit board.


## Step 11

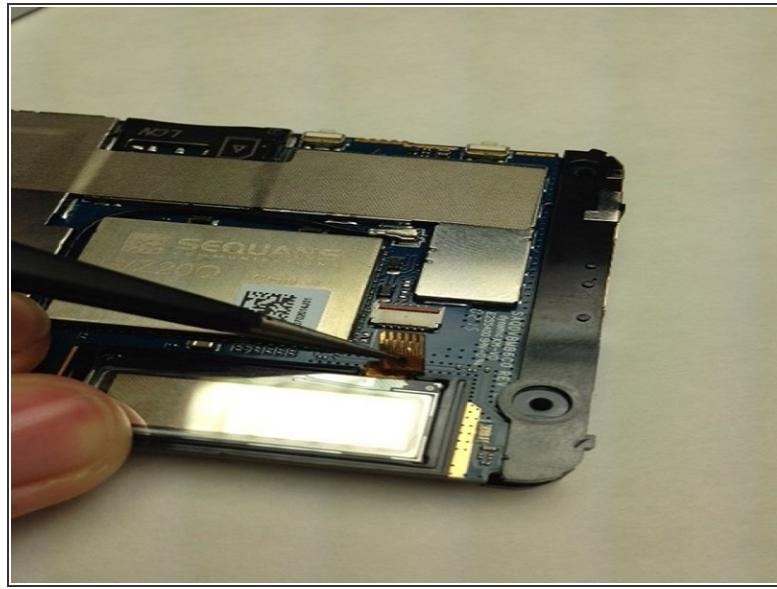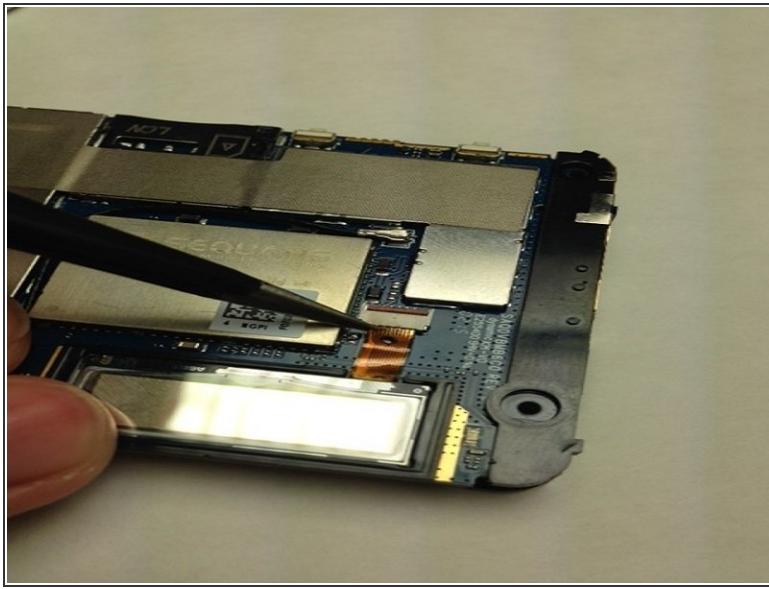

- Using the ESD Tweezers gently coax the display data cable out of circuit board connector.

 Do not squeeze the display data cable to hard you may damage it and cause a short.

## Step 12

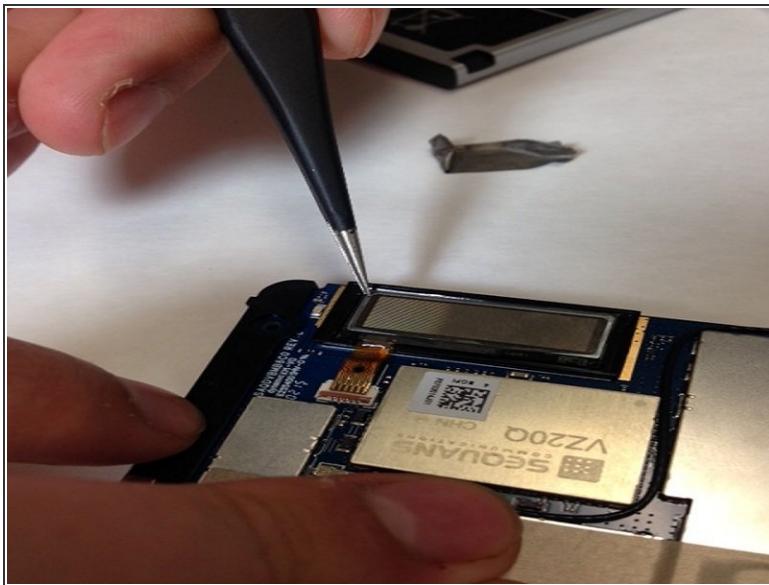

- Gently insert the ESD Tweezers underneath the LCD screen and lift the LCD screen off of the circuit board.

To reassemble your device, follow these instructions in reverse order.