


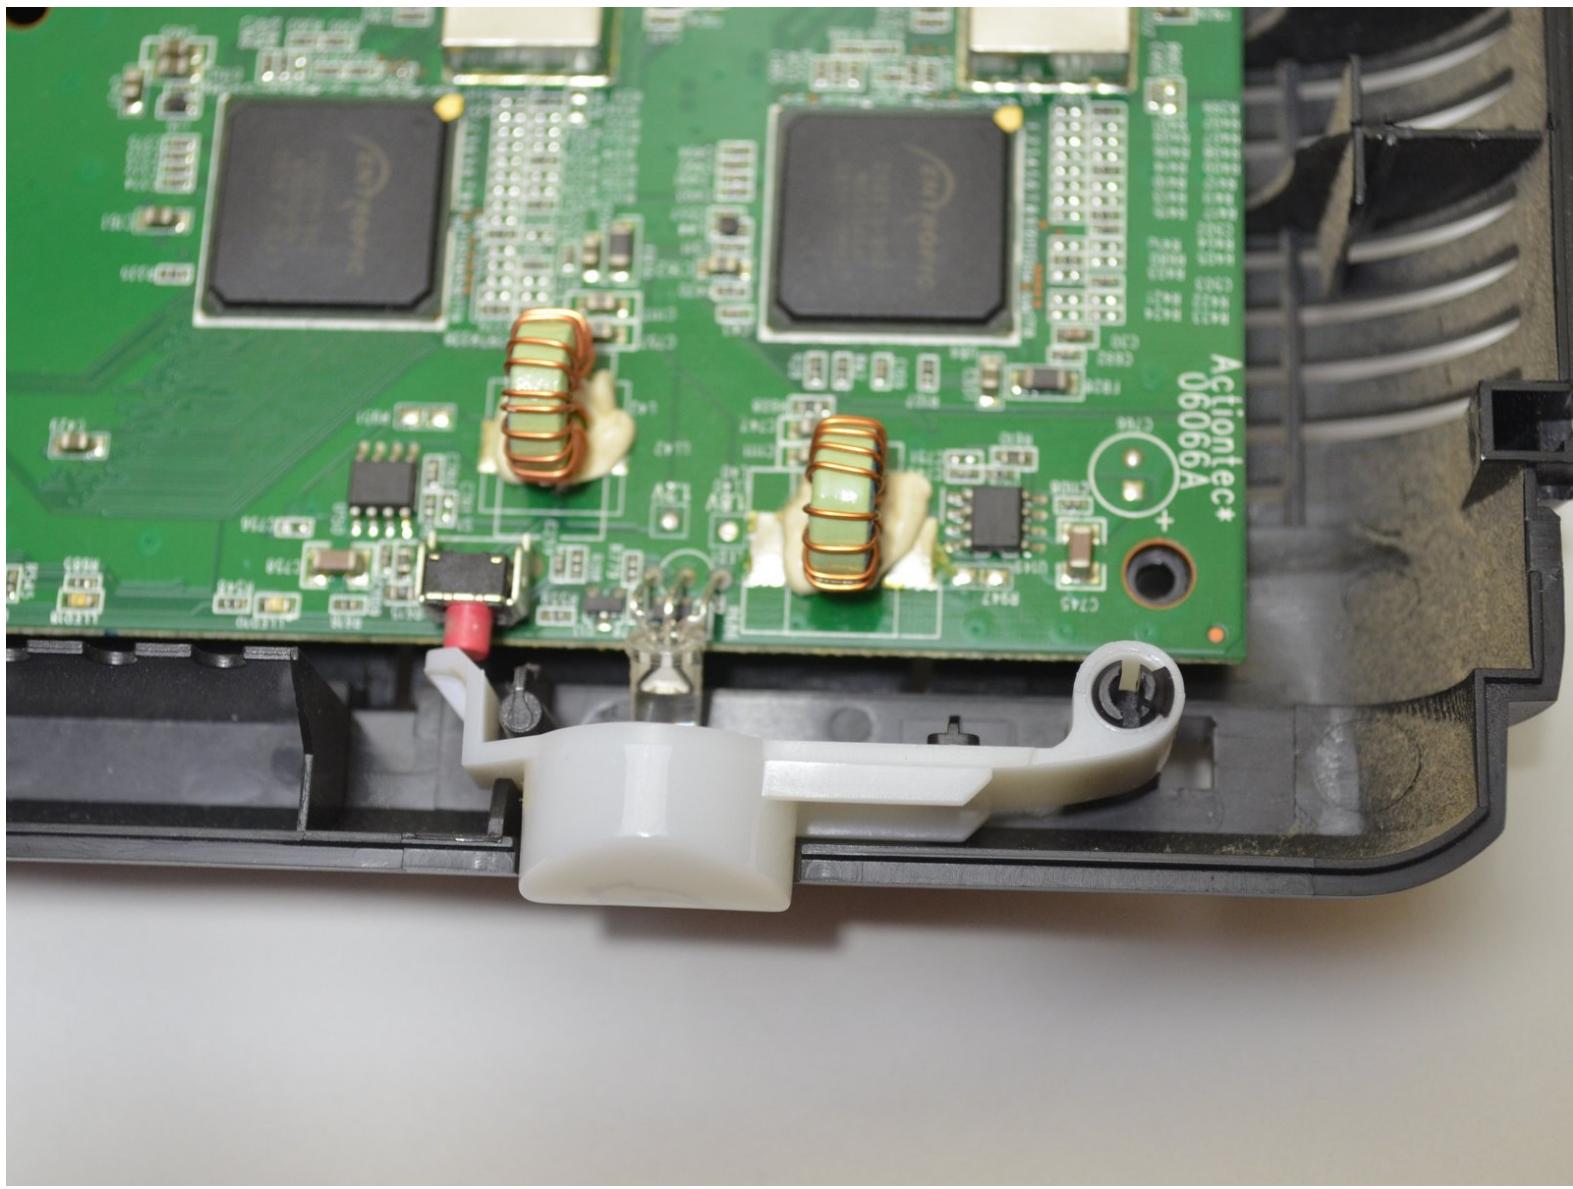

Verizon M1424WR Refresh Button Replacement

This guide will illustrate how to remove the refresh button from your Verizon M1424WR router in order to replace it.

Written By: Jeffrey Fox



This document was generated on 2019-09-20 07:00:22 AM (MST).

INTRODUCTION

To replace the refresh button, you will need to open the router's outer casings. This replacement is simple and will not take much time to complete.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Refresh Button



- Flip the device so that the bottom is facing up.

Step 2



- Insert the plastic-opening tool under the silver labeled casing.
- Carefully pry at different intervals around the silver labeled casing to separate the silver casing from the top and bottom casing.

Step 3




- Unscrew the five 10-mm screws on the bottom of the router using a Phillips #0 screwdriver.

Step 4




- Use a plastic-opening tool and pry the top casing from the bottom casing to expose the circuit board in the bottom half of the device.

Step 5

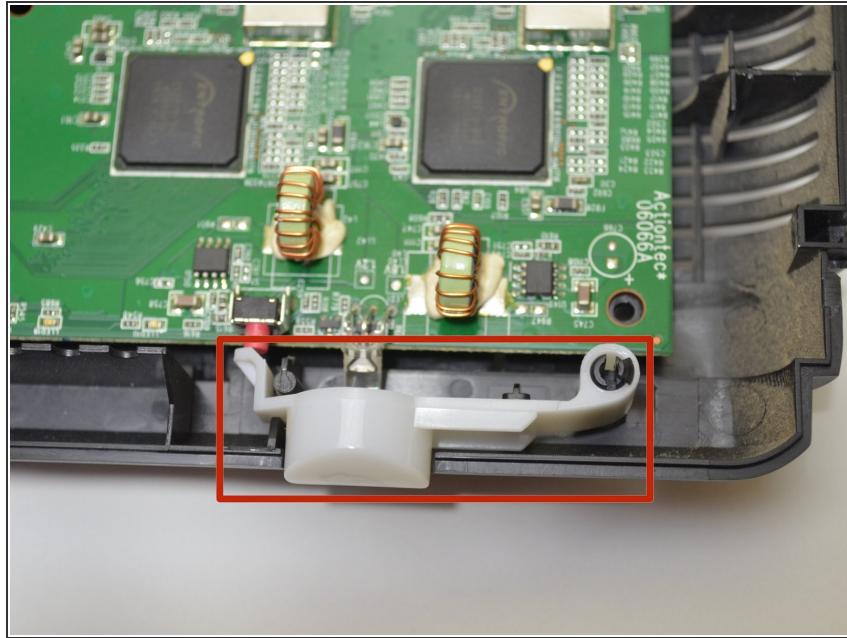

- Locate the refresh button.

Step 6

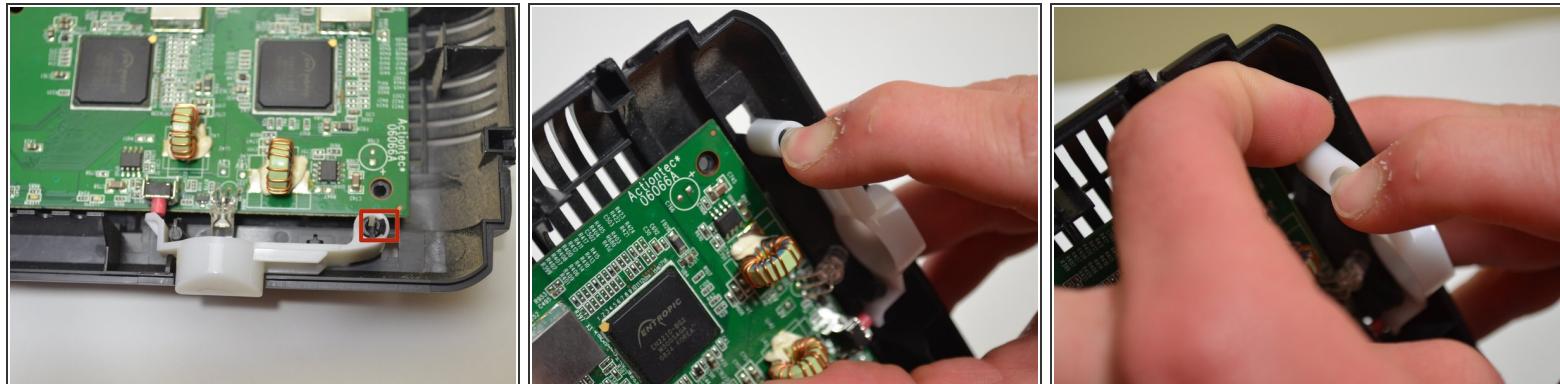

- Apply pressure with your finger to the black tab that retains the refresh button while using your other hand to pull the bottom of the refresh button from the post.

To reassemble your device, follow these instructions in reverse order.