


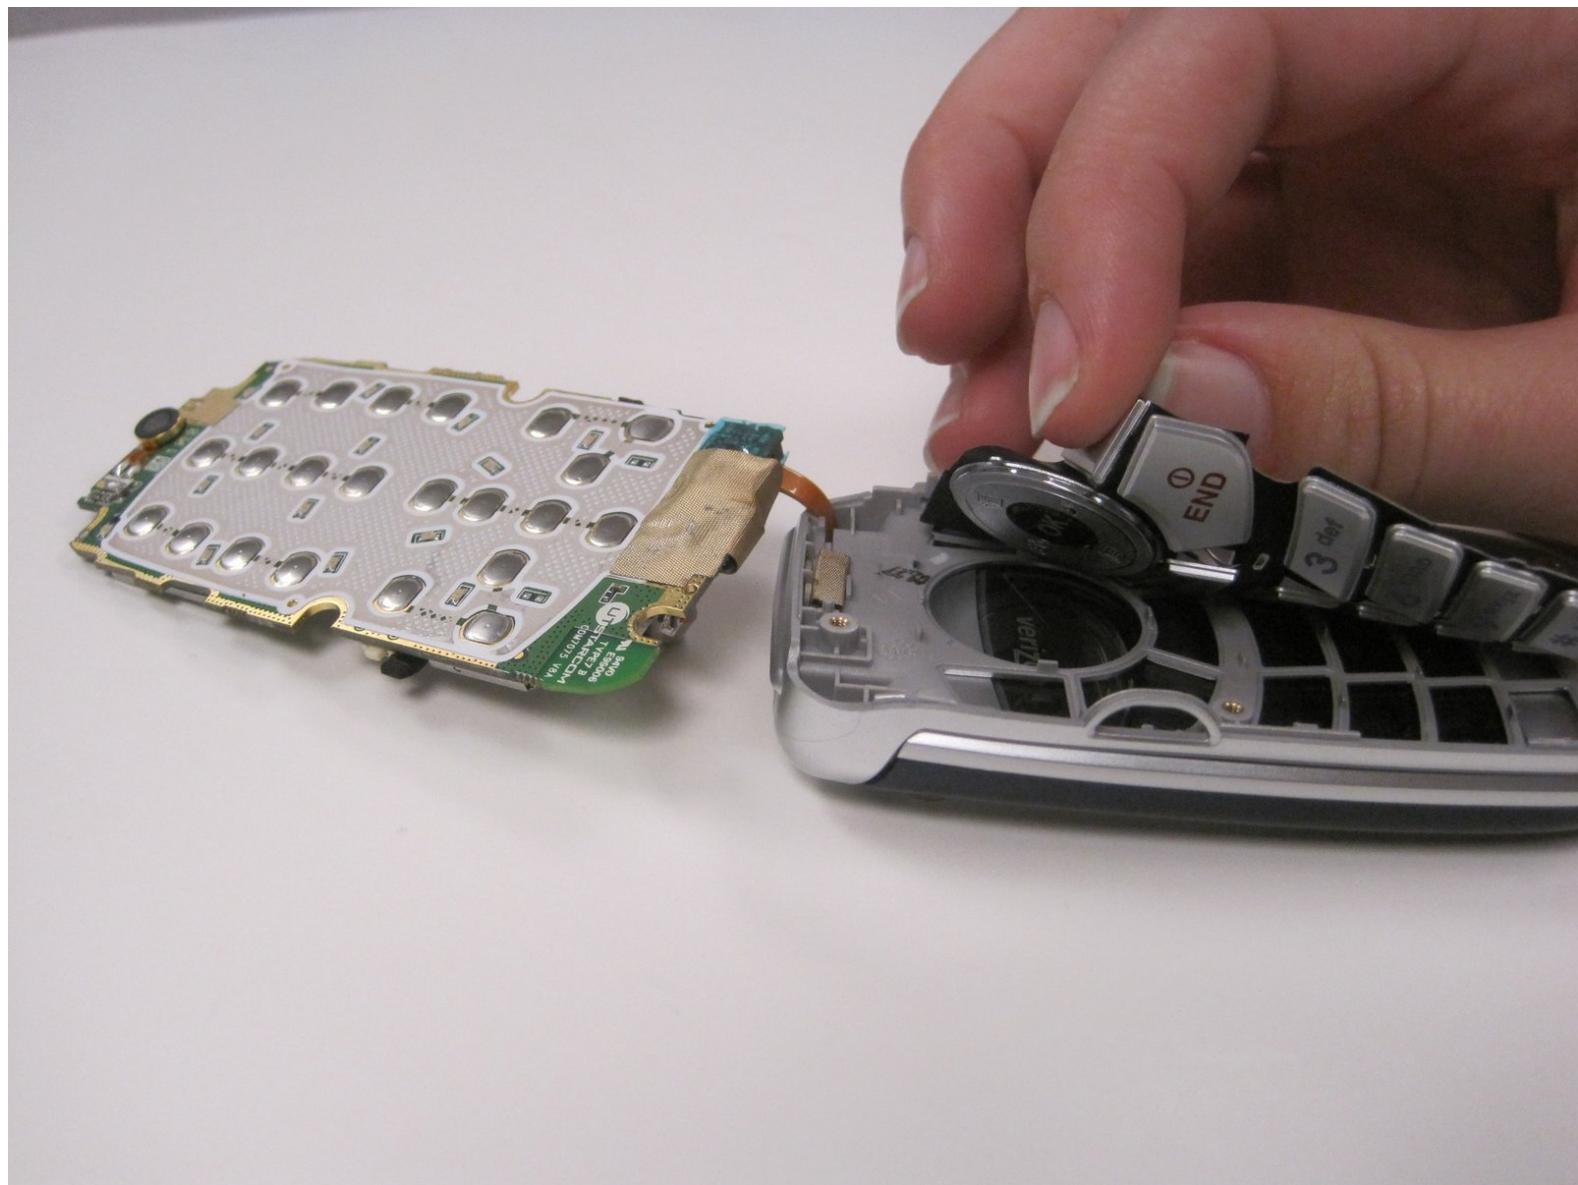

Verizon Wireless CDM 7075 Keypad Replacement

This guide will show you how to replace the keypad on a Verizon Wireless CDM 7075 cellular phone.

Written By: Corey Ryman



This document was generated on 2019-09-19 12:03:09 PM (MST).

INTRODUCTION

Make sure you have followed the prerequisite guide of removing the battery before proceeding with this guide.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery



- To remove the back panel, first press and hold the gray button on the back. While doing that also press and slide the panel down and off.

Step 2



- Carefully remove the battery from the phone by prying it from the top.

Step 3 — Keypad



- Pry off the top cover on the back of the phone.

Step 4



- You will then remove the screws from the back of the phone.

Step 5



- Next you will pry apart the two halves of the phone.


⚠ Make sure you do not damage the ribbon cable connecting both halves

Step 6



- Then use the plastic opening tool to remove the motherboard from the front half of the phone.

Step 7

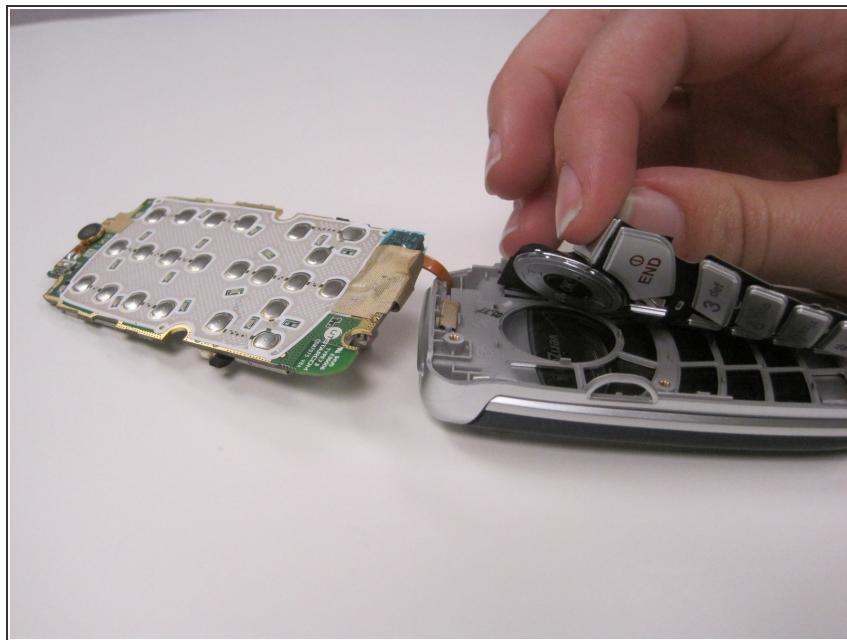

- Next you will peel off the keypad after the motherboard is removed.
- ⚠ Be sure you do not to tear the brown connector tape.
- Lastly insert the new keypad.

To reassemble your device follow these instructions in reverse order.