


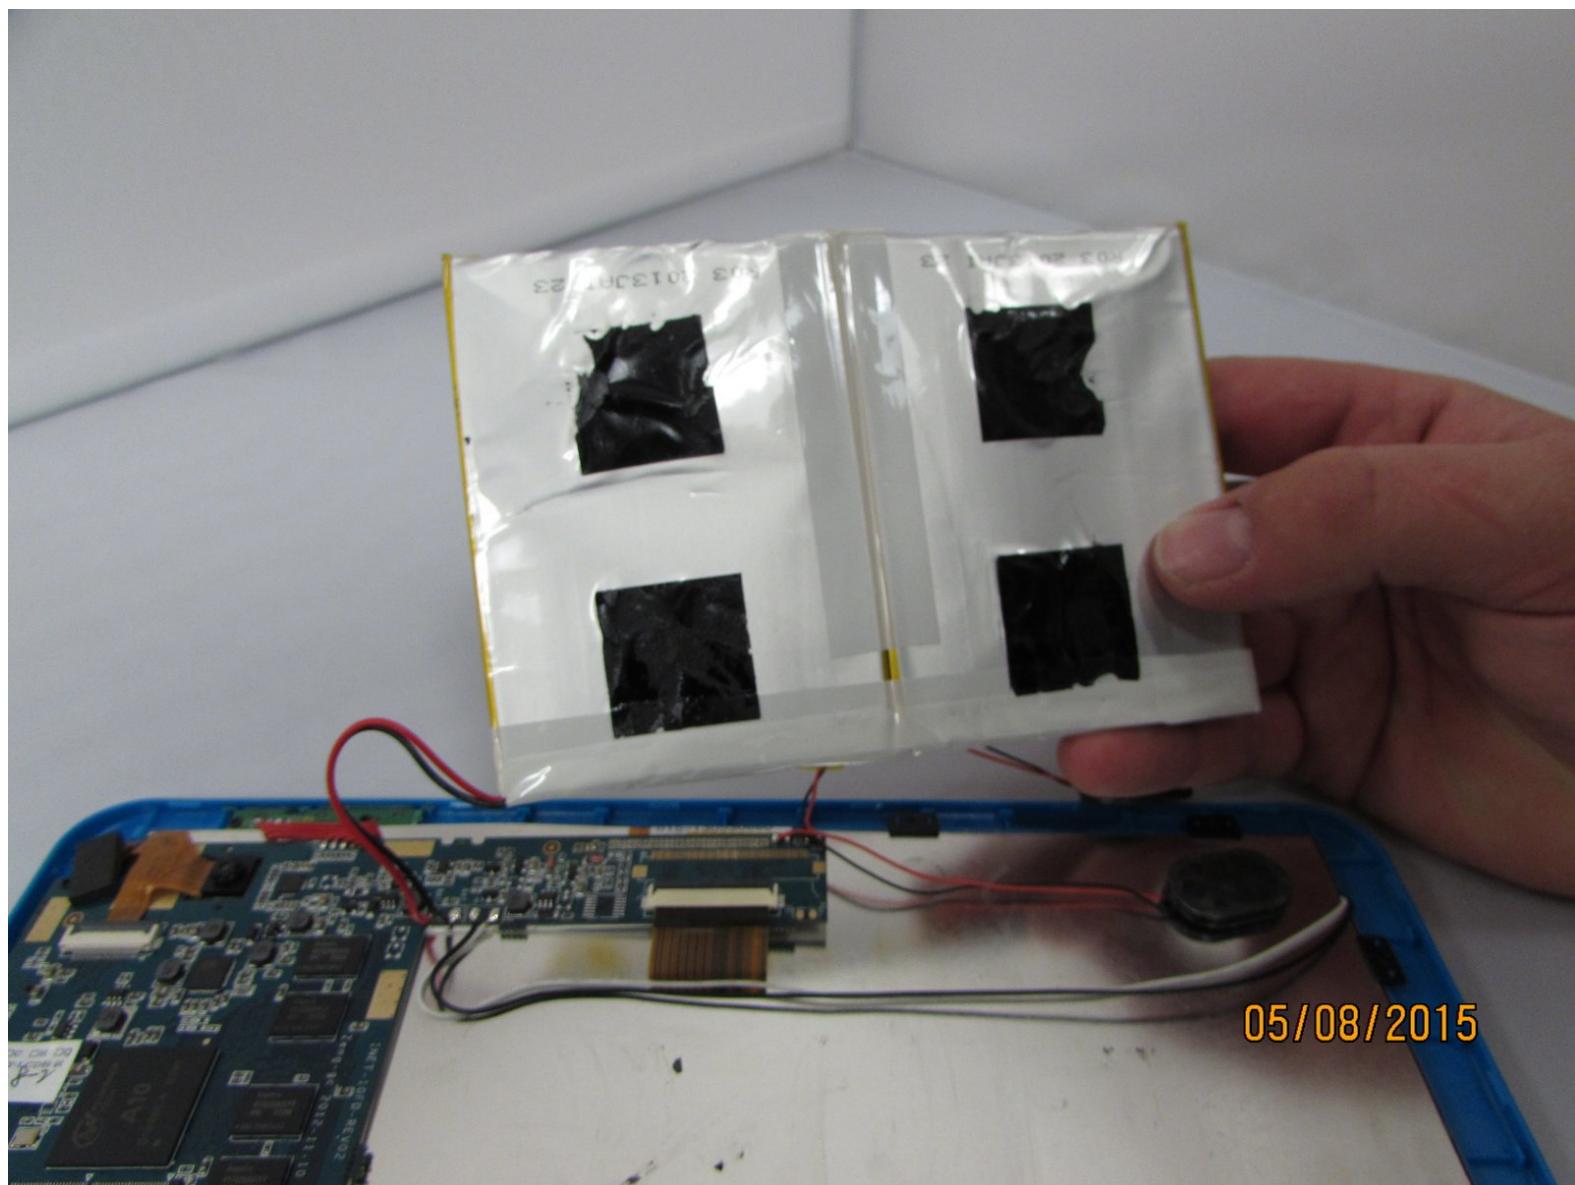

Visual Land Prestige 10 Battery Replacement

This guide will teach you how to remove and replace the battery of the Visual Land Prestige 10 Tablet.

Written By: Connor Reese



 **TOOLS:**

- [Magnetic Project Mat \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)
- [Soldering Iron \(1\)](#)

Step 1 — Back Case




- Remove the 3mm screws from bottom of tablet with the precision screwdriver and place on magnetic mat. label where they came from.
- All screws throughout this guide are the same 3mm size.

Step 2



- Using the spudger, create a small opening to be used to open the back case.
- While holding the case open, insert the plastic opening tool to get a larger opening.
- Once you have a slight opening, insert the spudger and work around the edges, separating the back plate from the front.

Step 3

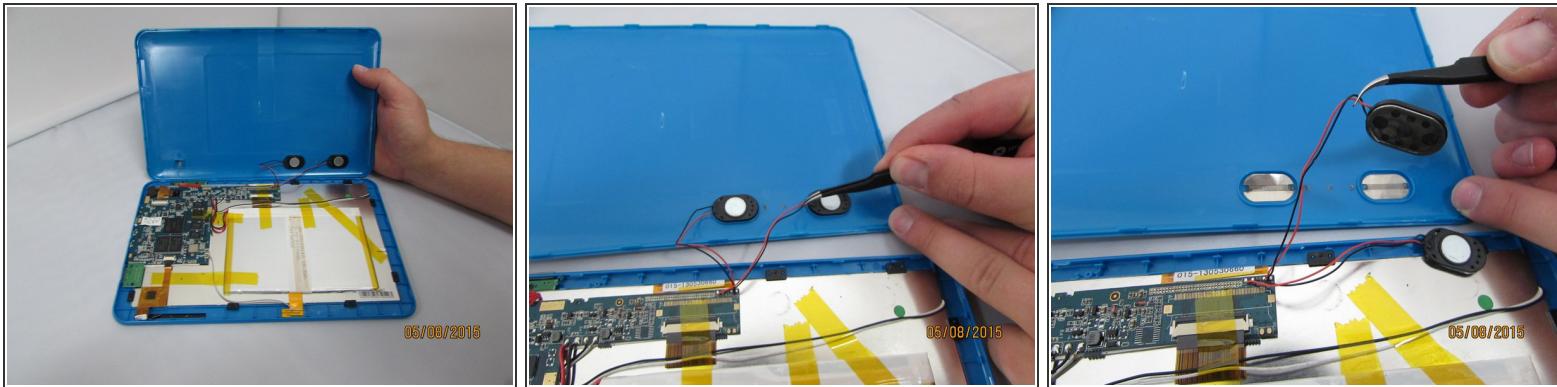




- now that the case is open, carefully remove the speakers and set aside.

Step 4






- Gently remove the speakers from the back case with tweezers and set the case aside.

Step 5 — Battery

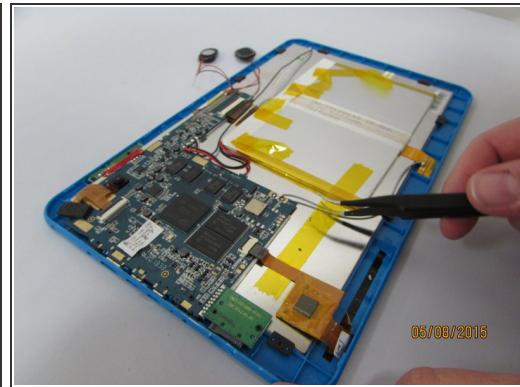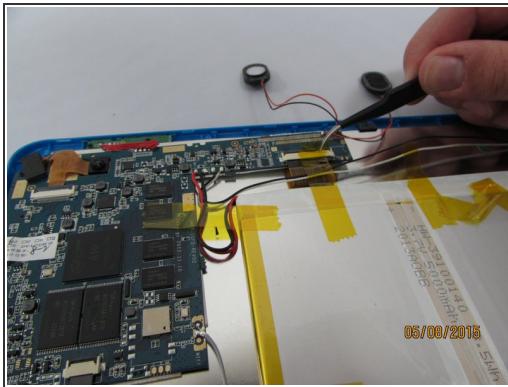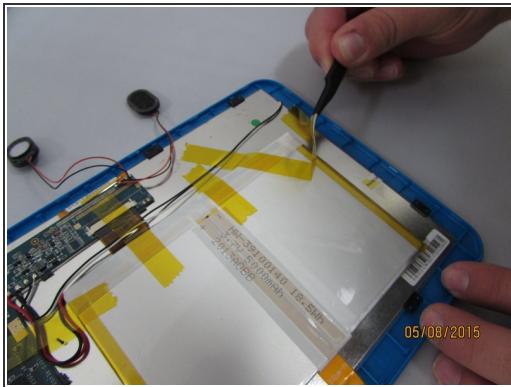

- Remove yellow tape from surrounding components.


Step 6

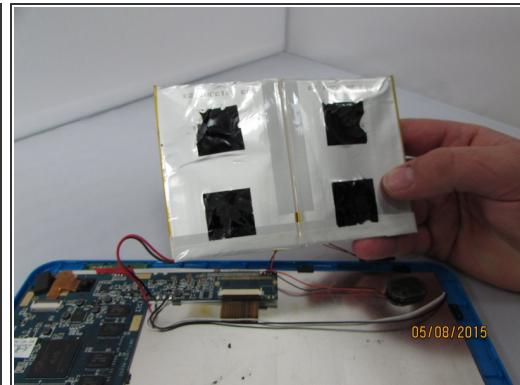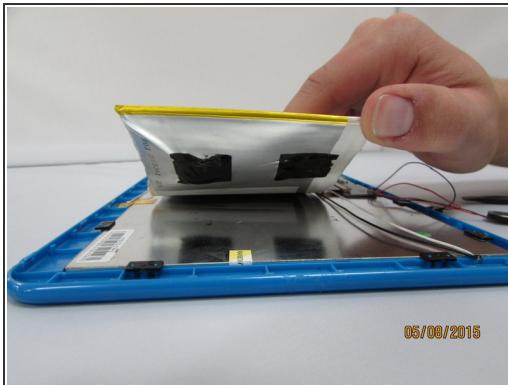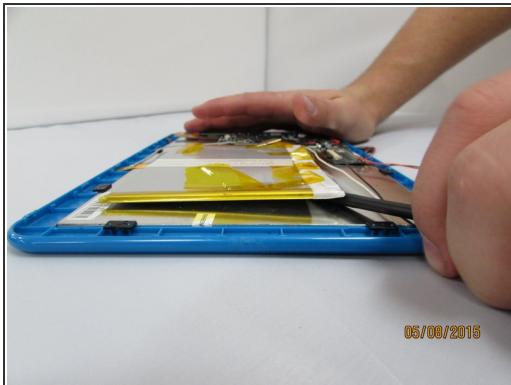

- insert the spudger and gently work around and underneath the battery.
- With the battery separated from the LCD Display, set it aside.

(i) The battery is held down by very strong adhesive.

Step 7

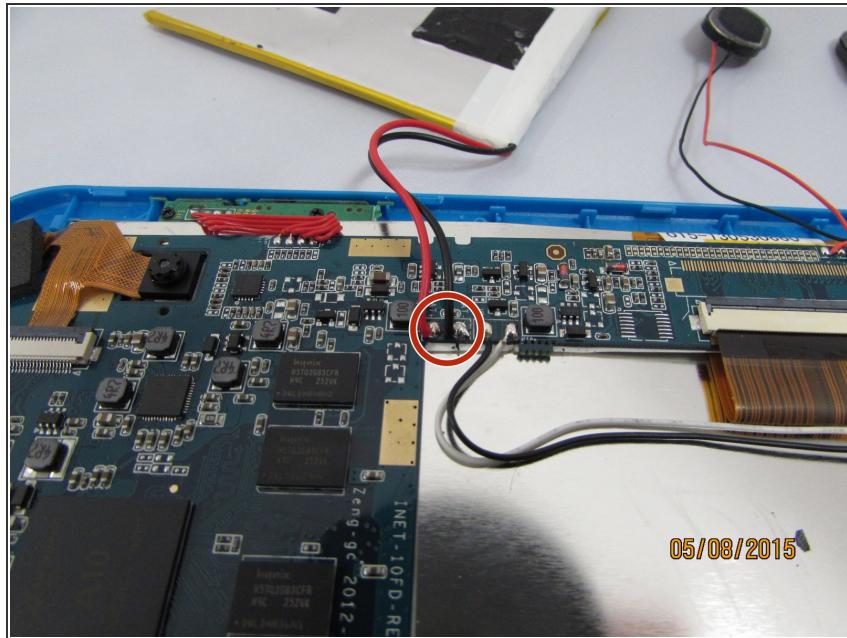

- Desolder and remove the 2 wires from the motherboard.

⚠ Use caution when desoldering to avoid damage to yourself or to the components.

To reassemble your device, follow these instructions in reverse order.