




# Visual Land Prestige 10 Front Facing Camera Replacement

This guide will teach you how to replace the camera housing in the Visual Land Prestige 10 Tablet

Written By: Connor Reese

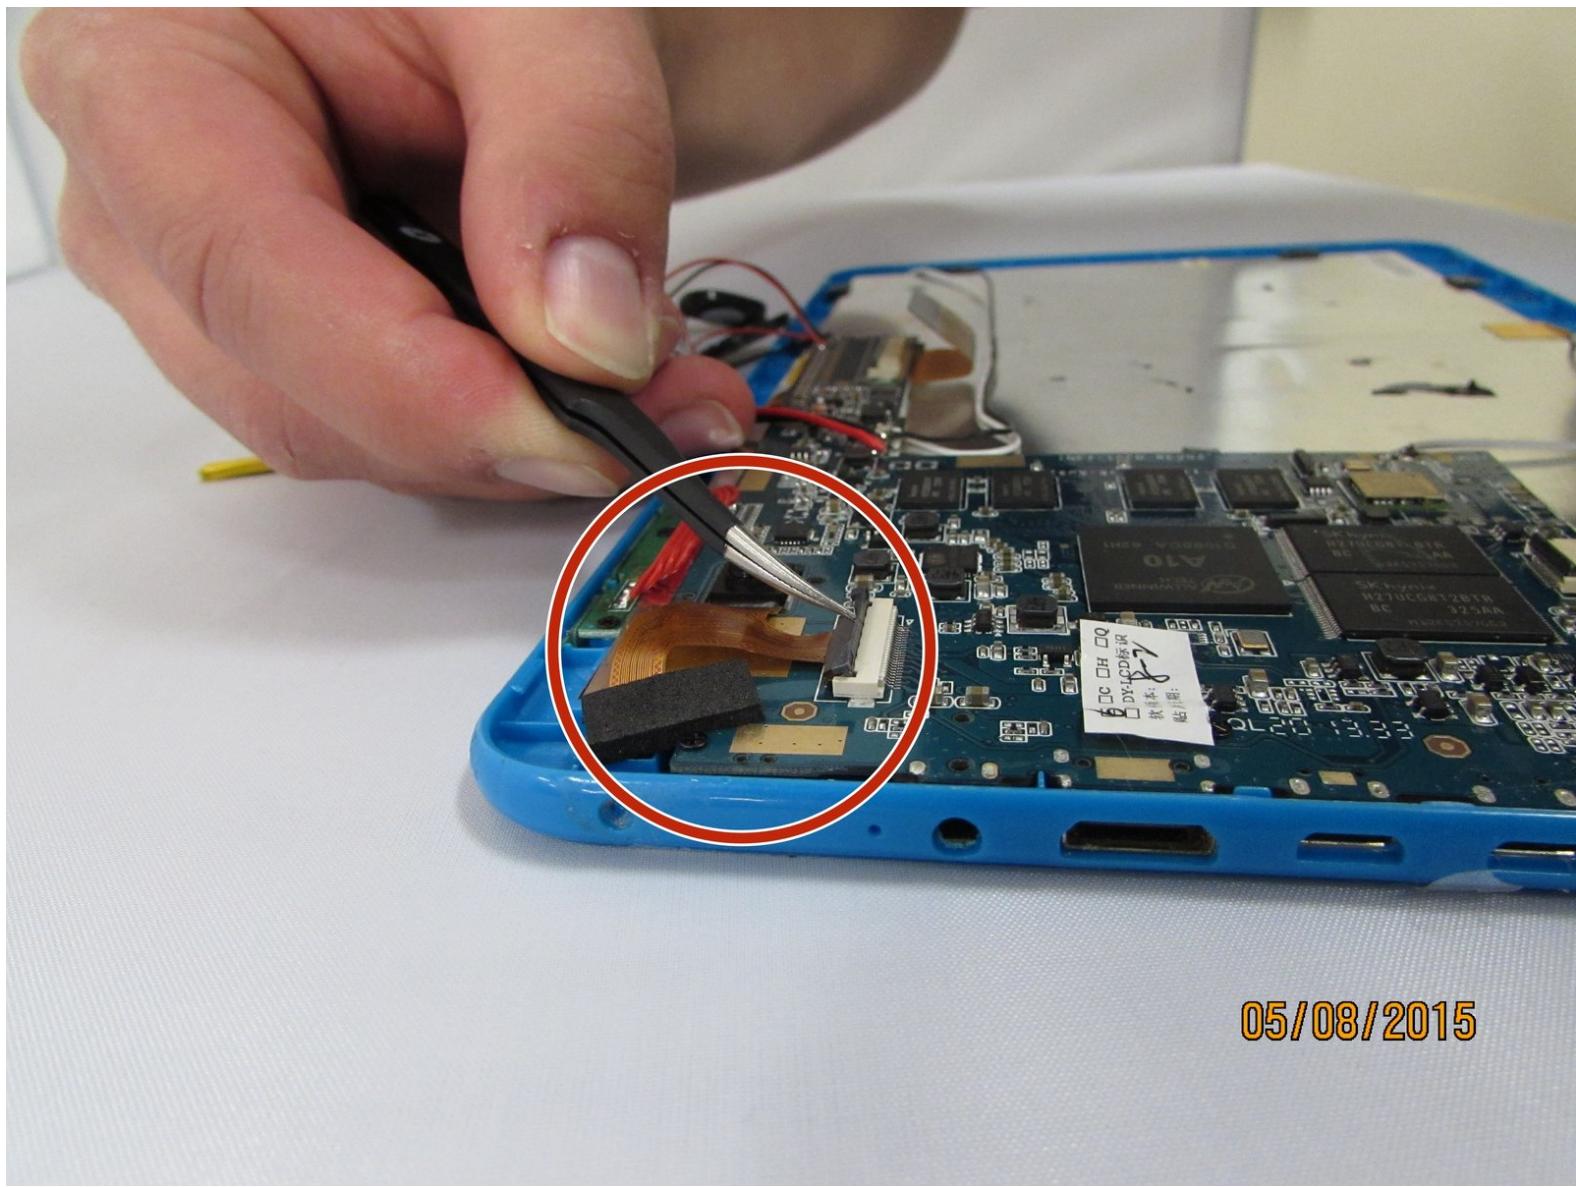

05/08/2015

 **TOOLS:**

- [Magnetic Project Mat \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Back Case




- Remove the 3mm screws from bottom of tablet with the precision screwdriver and place on magnetic mat. label where they came from.
- All screws throughout this guide are the same 3mm size.

## Step 2



- Using the spudger, create a small opening to be used to open the back case.
- While holding the case open, insert the plastic opening tool to get a larger opening.
- Once you have a slight opening, insert the spudger and work around the edges, separating the back plate from the front.

## Step 3

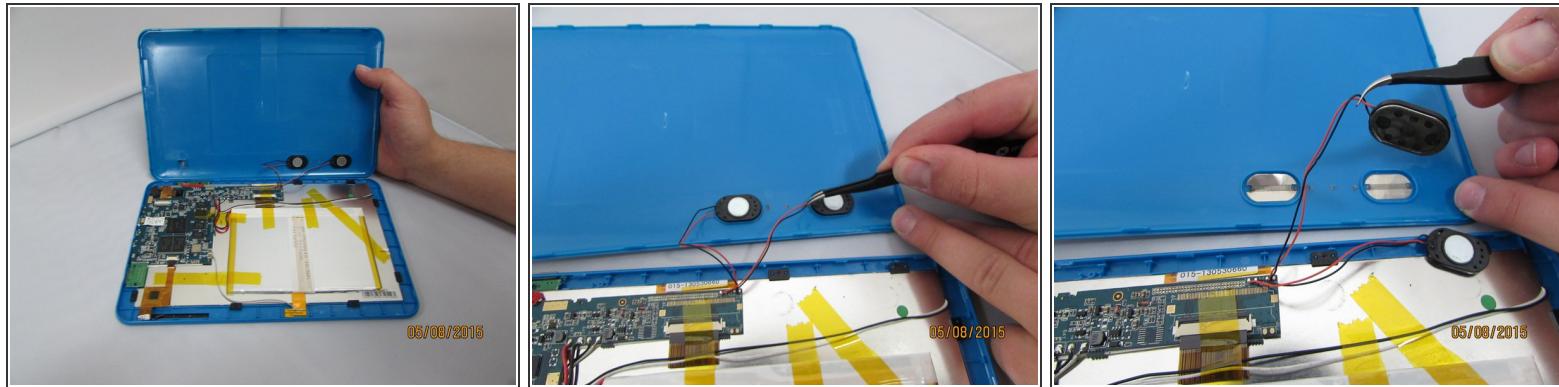


- now that the case is open, carefully remove the speakers and set aside.

## Step 4



- Gently remove the speakers from the back case with tweezers and set the case aside.

## Step 5 — Front Facing Camera

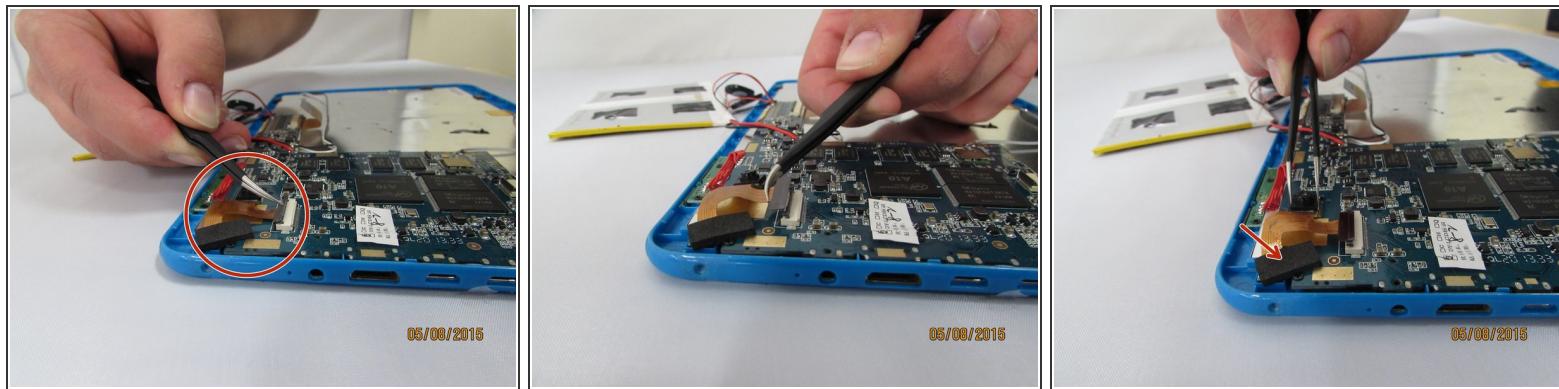

- Locate the Camera Housing. Gently grip and lift the small black tab until you feel an audible click.
- Gently remove the connector by pulling straight out, gripping the black connector head or as close as possible.
- Gently grip and pull up the front camera, covered by protective adhesive foam.
- Set aside the Camera housing.

To reassemble your device, follow these instructions in reverse order.