



Visual Land Prestige 10 Motherboard Replacement

This guide will teach you how to replace the Motherboard of the Visual Land Prestige 10 Tablet.

Written By: Connor Reese



 **TOOLS:**

- [Magnetic Project Mat \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Soldering Iron \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Back Case




- Remove the 3mm screws from bottom of tablet with the precision screwdriver and place on magnetic mat. label where they came from.
- All screws throughout this guide are the same 3mm size.

Step 2



- Using the spudger, create a small opening to be used to open the back case.
- While holding the case open, insert the plastic opening tool to get a larger opening.
- Once you have a slight opening, insert the spudger and work around the edges, separating the back plate from the front.

Step 3

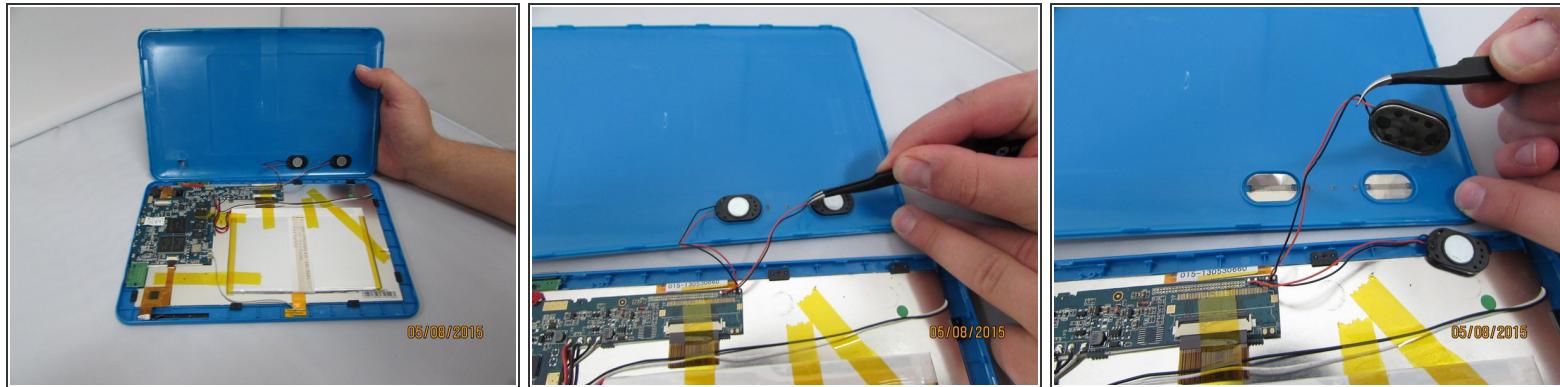




- now that the case is open, carefully remove the speakers and set aside.

Step 4





- Gently remove the speakers from the back case with tweezers and set the case aside.

Step 5 — Battery

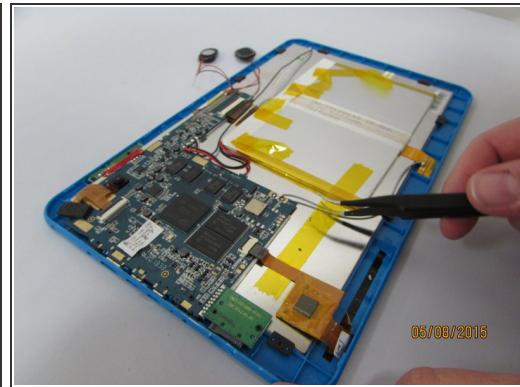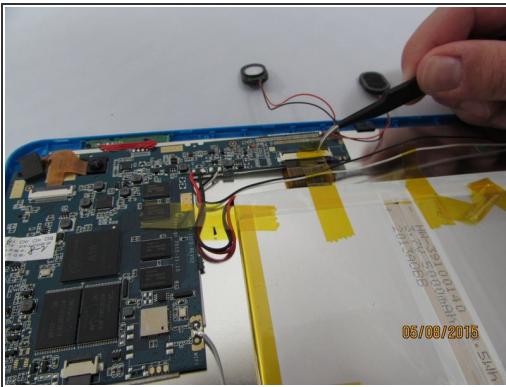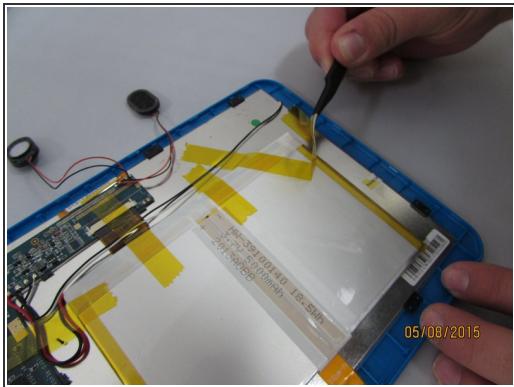

- Remove yellow tape from surrounding components.


Step 6

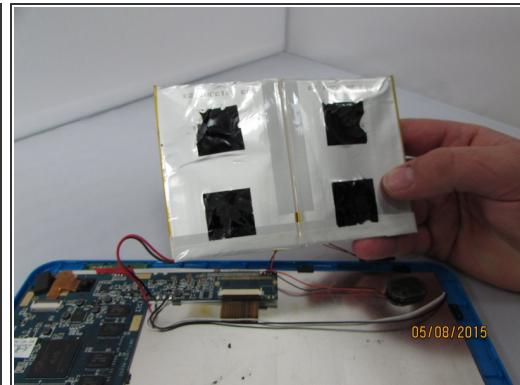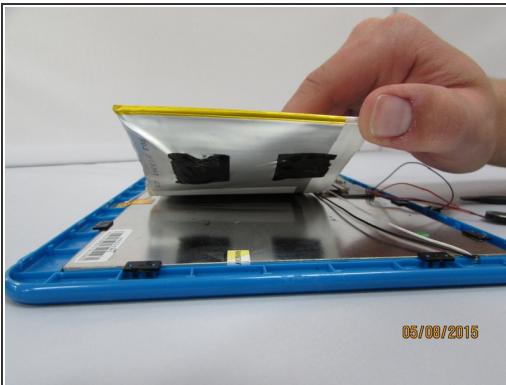

- insert the spudger and gently work around and underneath the battery.
- With the battery separated from the LCD Display, set it aside.

(i) The battery is held down by very strong adhesive.




Step 7

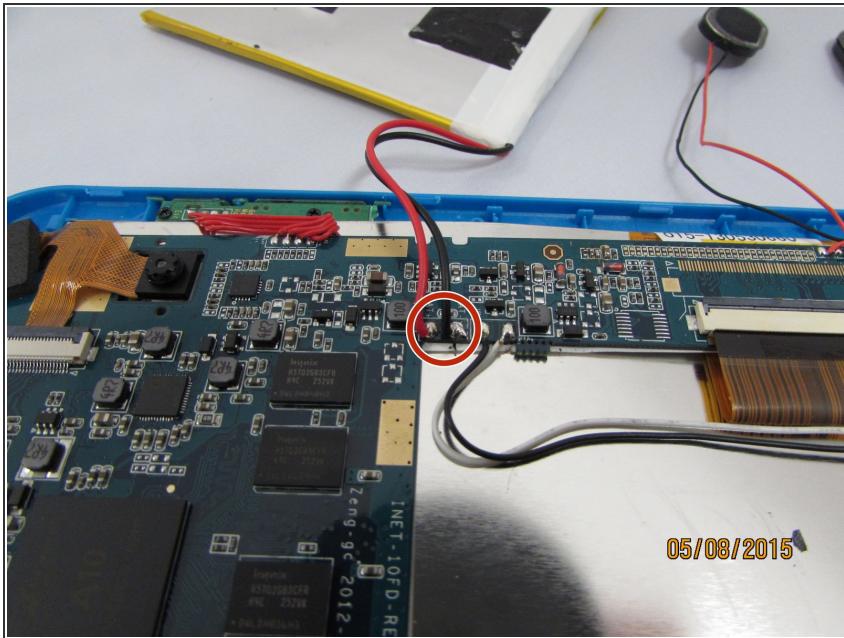

- Desolder and remove the 2 wires from the motherboard.


 Use caution when desoldering to avoid damage to yourself or to the components.

Step 8 — Front Facing Camera

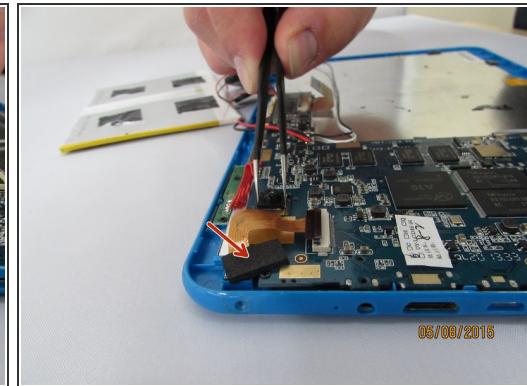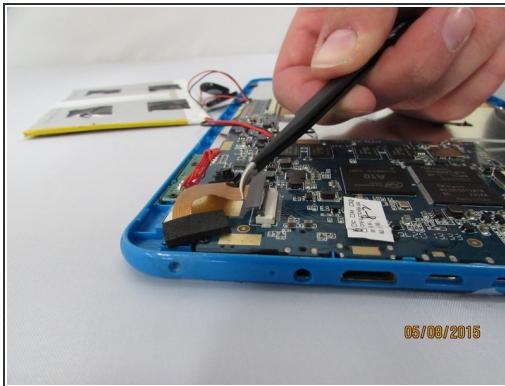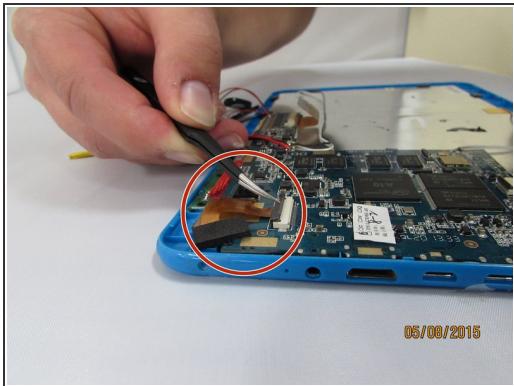


- Locate the Camera Housing. Gently grip and lift the small black tab until you feel an audible click.
- Gently remove the connector by pulling straight out, gripping the black connector head or as close as possible.
- Gently grip and pull up the front camera, covered by protective adhesive foam.
- Set aside the Camera housing.

Step 9 — Motherboard

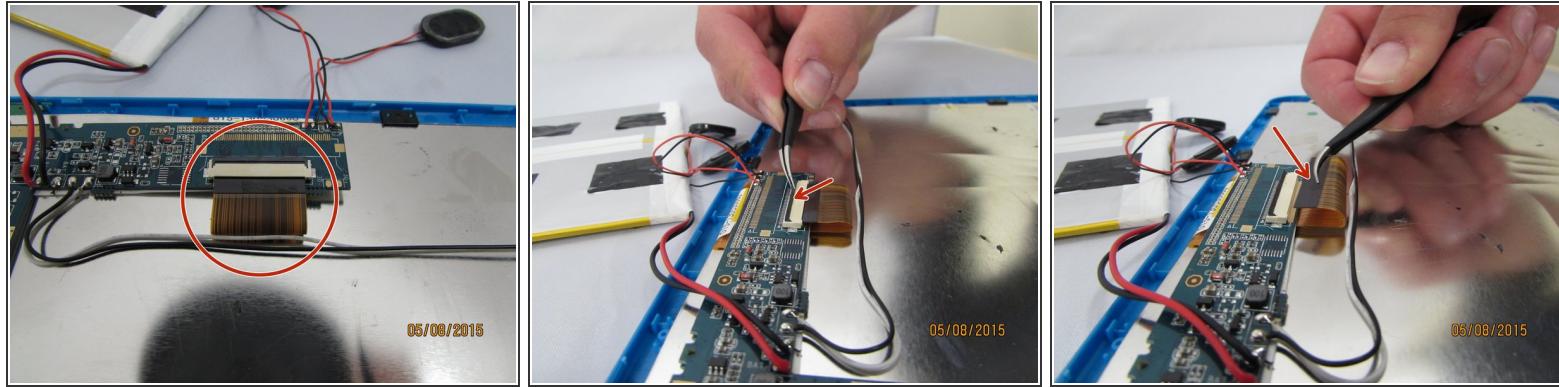


- Locate the LCD Connector.
- Using tweezers, grip the small black tab connected to the white plastic.
- Gently lift the tab towards you until it clicks.
- Remove the connector by pulling straight out, gripping the black connector head.

Step 10

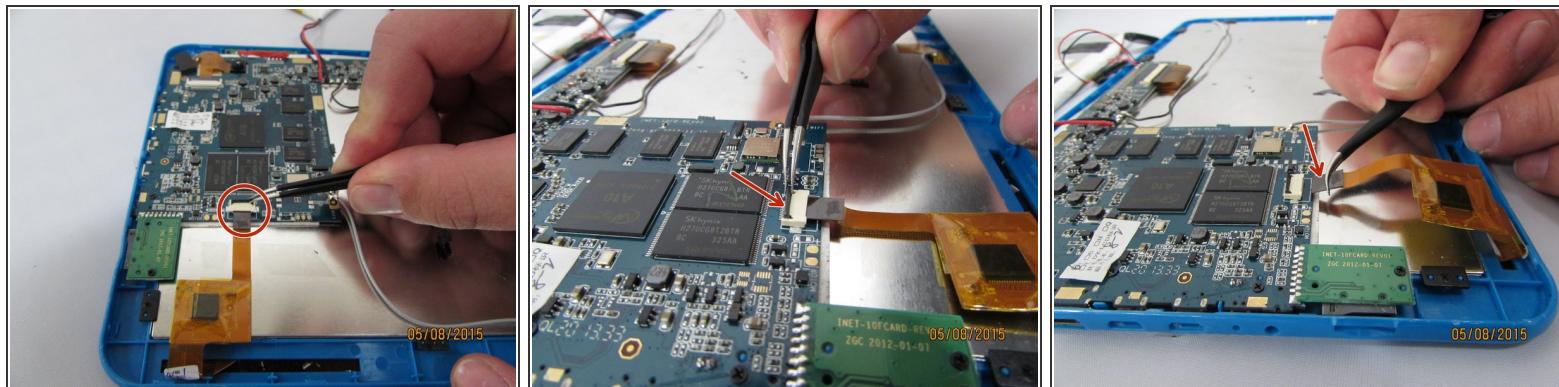


- Locate the Touchscreen connector and grip the forward-most black tab with the tweezers.
- Lift the tab towards you until you feel an audible click.
- Gently remove the connector by pulling straight out, gripping the black connector head.

Step 11

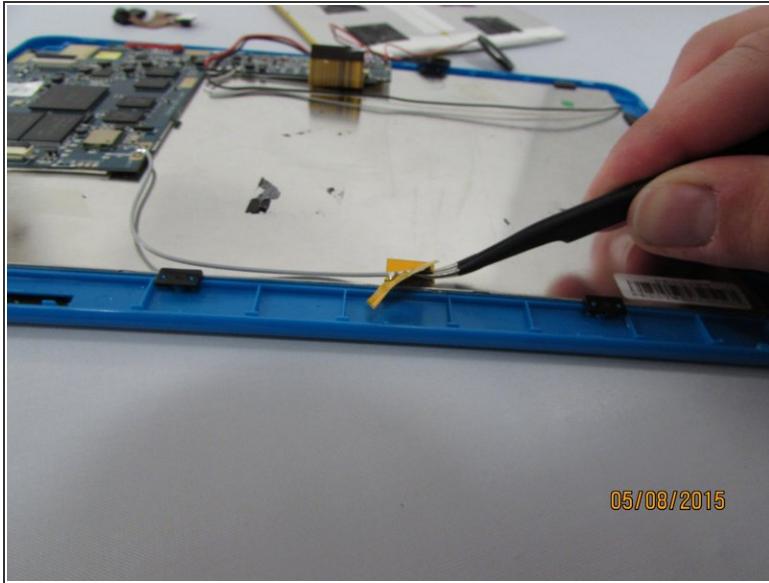


05/08/2015

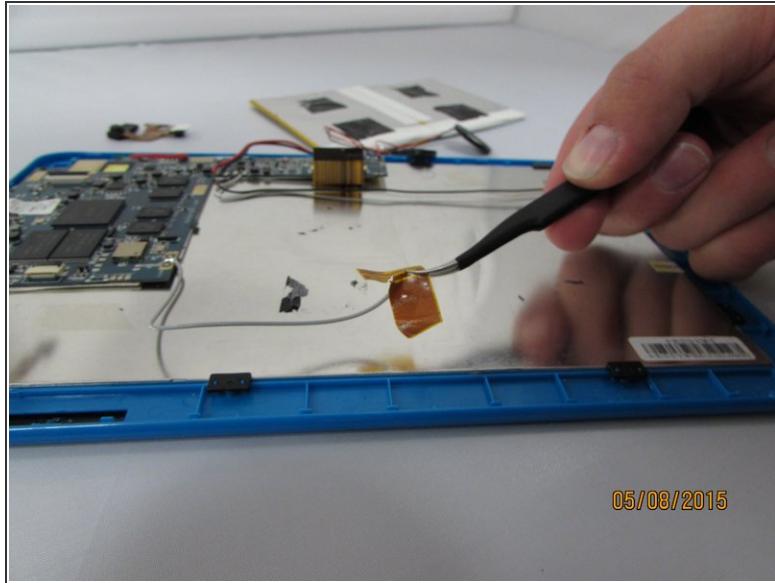


05/08/2015

- Gently lift up the WiFi antenna and set aside.

Step 12

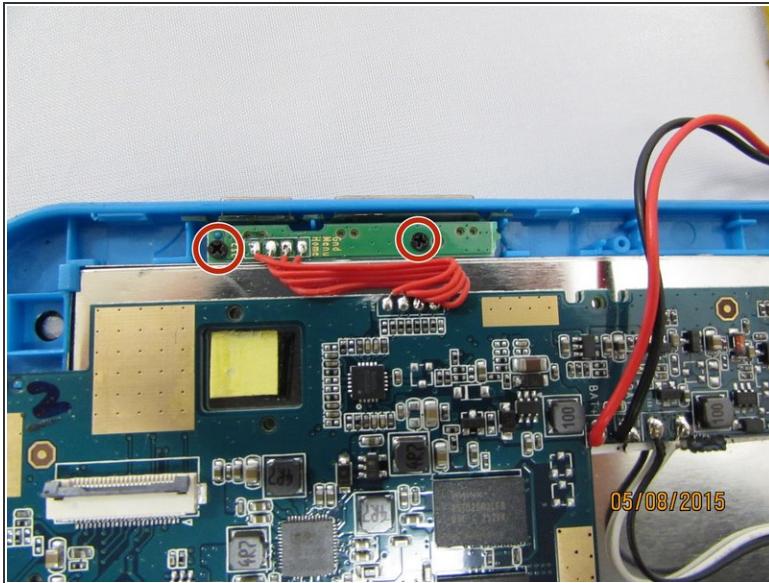



05/08/2015

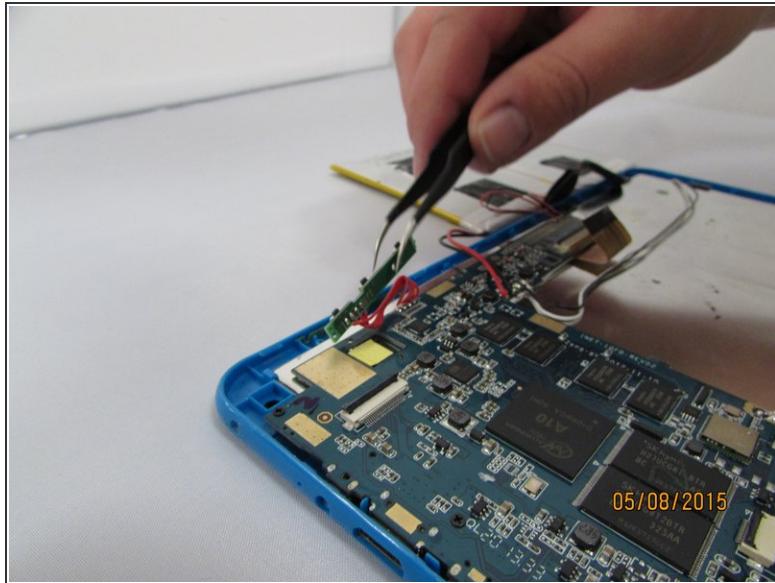

05/08/2015

- Locate and remove the screws holding the volume and hold button controller. Set screws aside on magnetic mat and label them.
- Gently lift up on the controller and leave it hanging loose.

Step 13

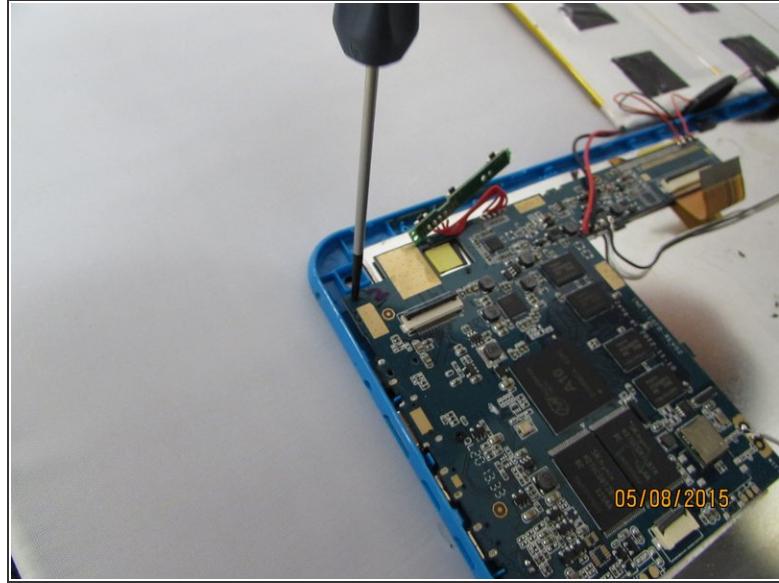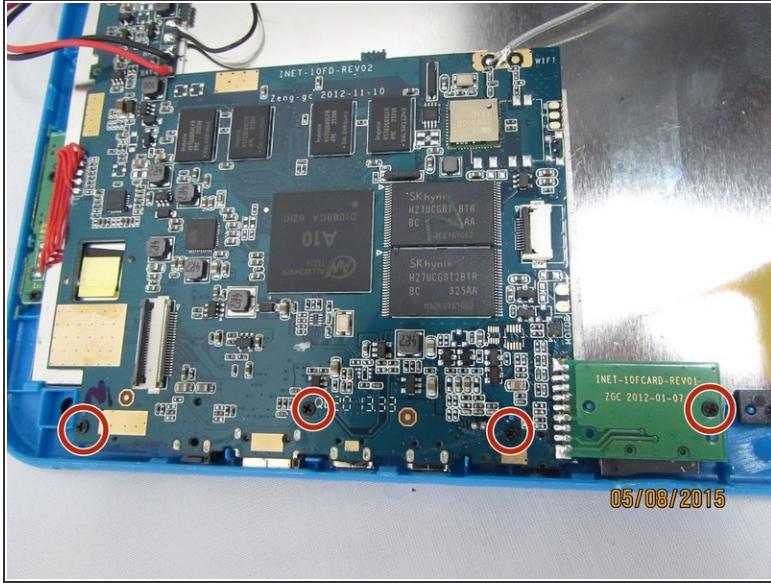

- Remove screws located on motherboard.
- Place on magnetic mat and label them
- Gently remove the Motherboard and any wires connected to it and set it aside on a static free surface.

To reassemble your device, follow these instructions in reverse order.