



Visual Land Prestige Elite 7Q Front Camera Replacement

Replace the front camera on your Visual Land Prestige Elite Q7.

Written By: Sabrina Scholten



INTRODUCTION

Complete the following guide to replace your tablet's front camera.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Front Camera



- At the bottom of the tablet, remove the two 3.6mm screws with a Phillips #000 screwdriver.

Step 2



- Wedge a plastic opening tool into the edges of the tablet to pry it open.

Step 3




- Use a plastic opening tool to lift the black tab holding down the ribbon cable.

Step 4






- Carefully use your finger to pull out the ribbon cable.

Step 5

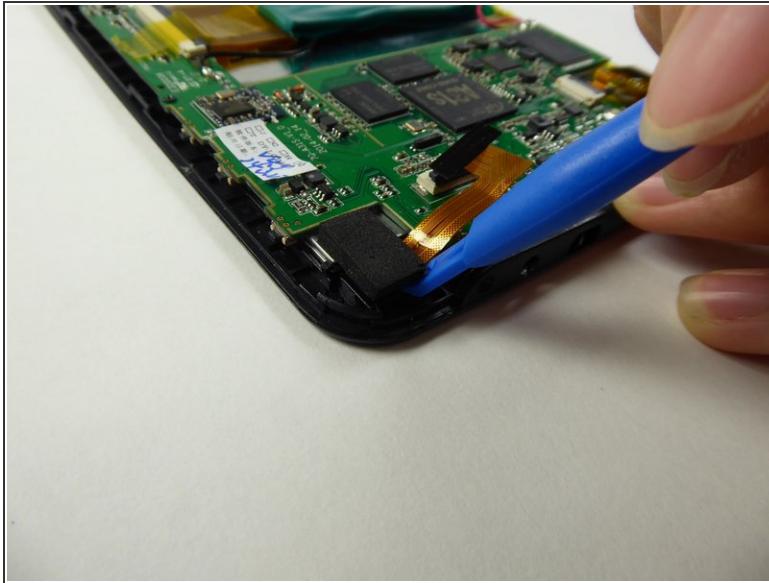

- Use a plastic opening tool to pull out the camera with the foam backing.

Step 6

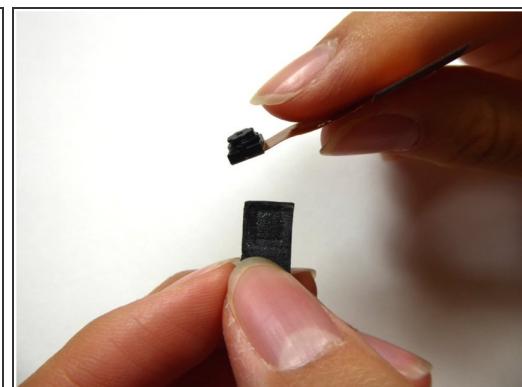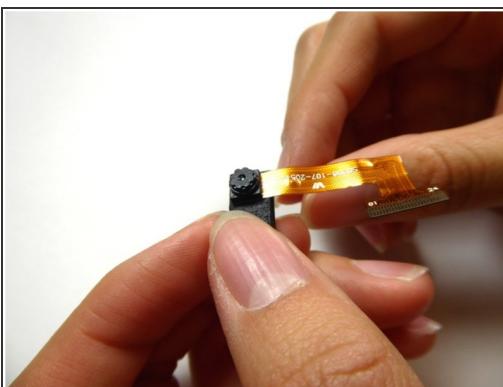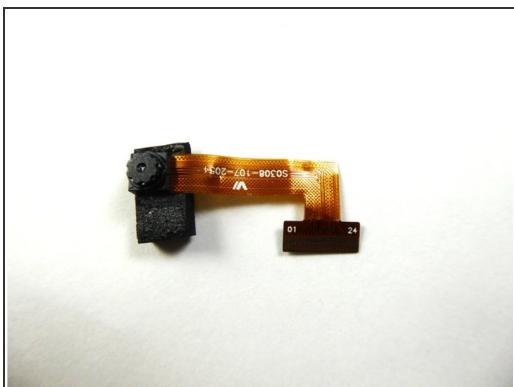

- Remove the camera from the foam backing.
- Replace the camera.

To reassemble your device, follow these instructions in reverse order.