



# Visual Land Prestige Elite 7Q LCD Screen Replacement

Replace the LCD screen on your Visual Land Prestige Elite 7Q.

Written By: Sabrina Scholten



## INTRODUCTION

Complete the following guide to replace a broken LCD screen on your tablet.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Plastic Cards](#) (1)
- [Metal Spudger Set](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — LCD Screen



- At the bottom of the tablet, remove the two 3.6mm screws with a Phillips #000 screwdriver.

## Step 2



- Wedge a plastic opening tool into the edges of the tablet to pry it open.

## Step 3



- Wedge a curved metal spudger to remove the speaker.

## Step 4



- Use a Phillips #000 screwdriver to remove the two 3.6mm screws.

## Step 5




- Use a plastic opening tool to lift the black tab.

## Step 6




- Carefully remove the ribbon cable from the black tab.

## Step 7

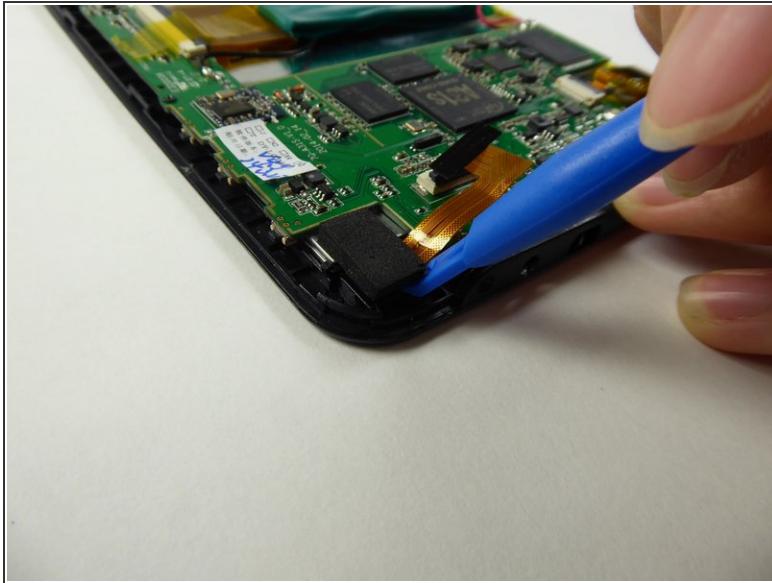


- Use a plastic opening tool to remove the camera.

## Step 8

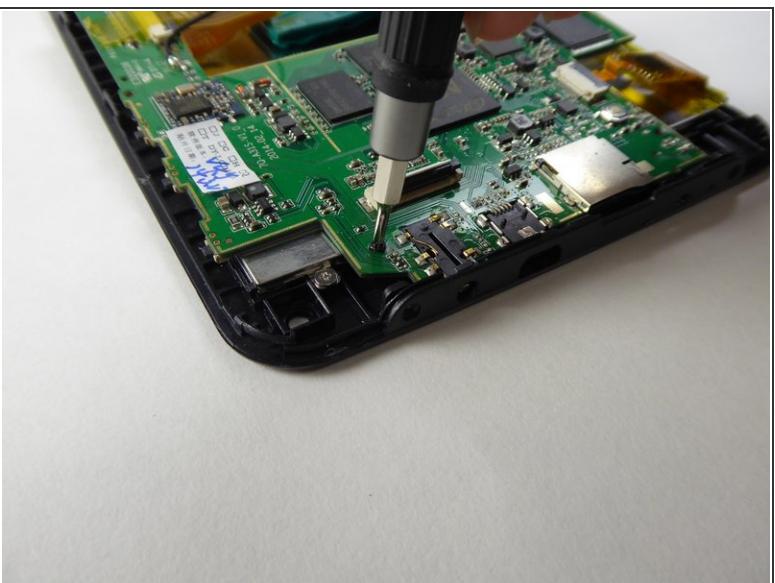


- Use a Phillips #000 screwdriver to remove the 3.6mm screw.

## Step 9

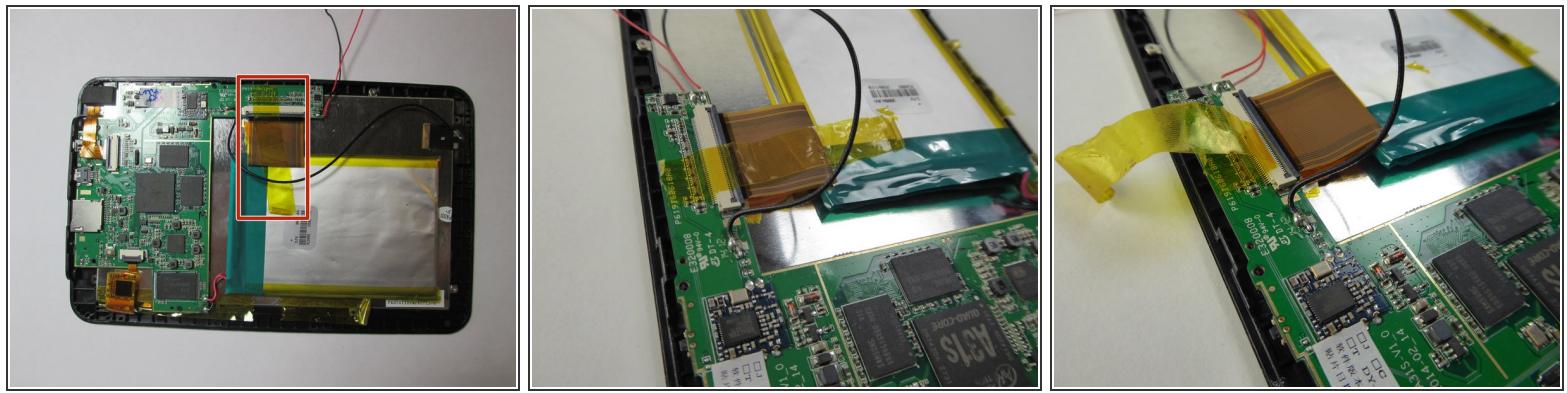


- Lift the tape holding down the battery.

## Step 10

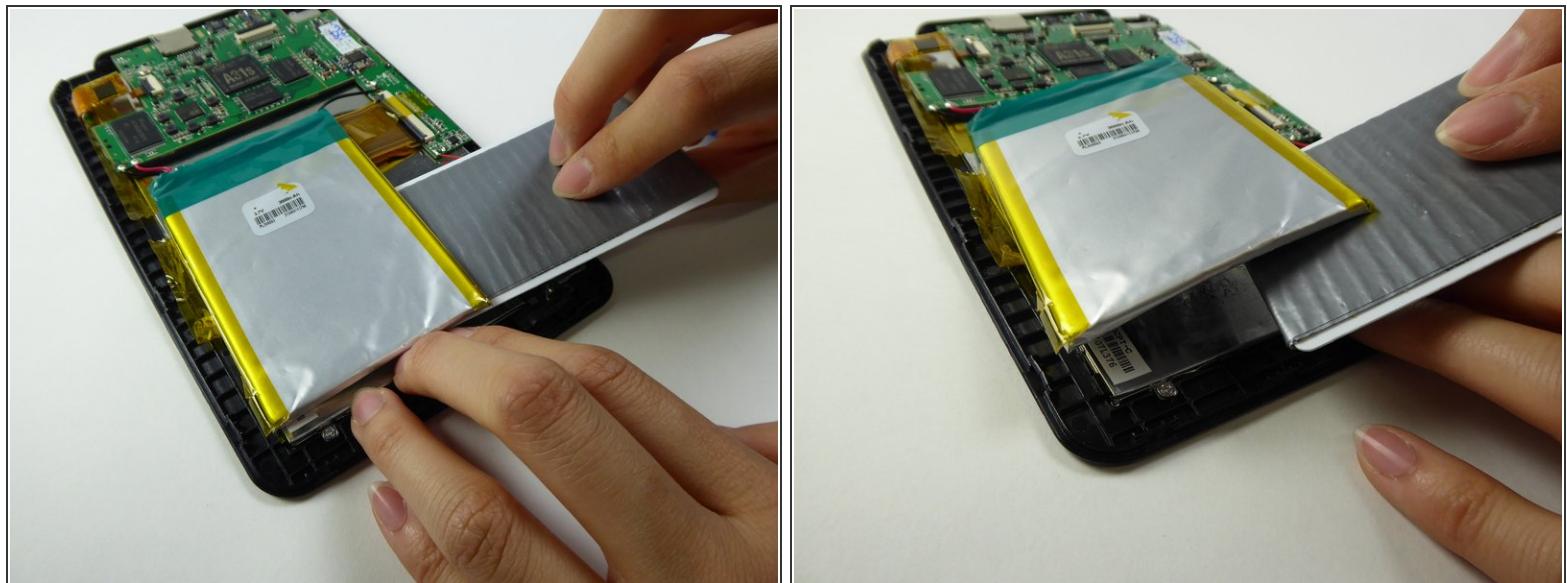


- Wedge a plastic card underneath the battery to remove it.

## Step 11

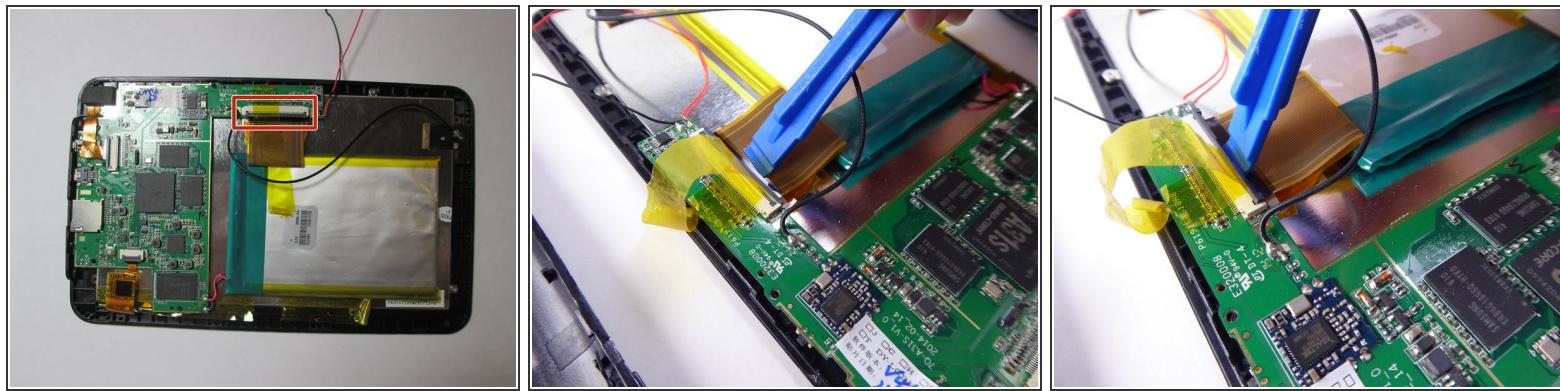


- Use a plastic opening tool to lift the black tab.

## Step 12

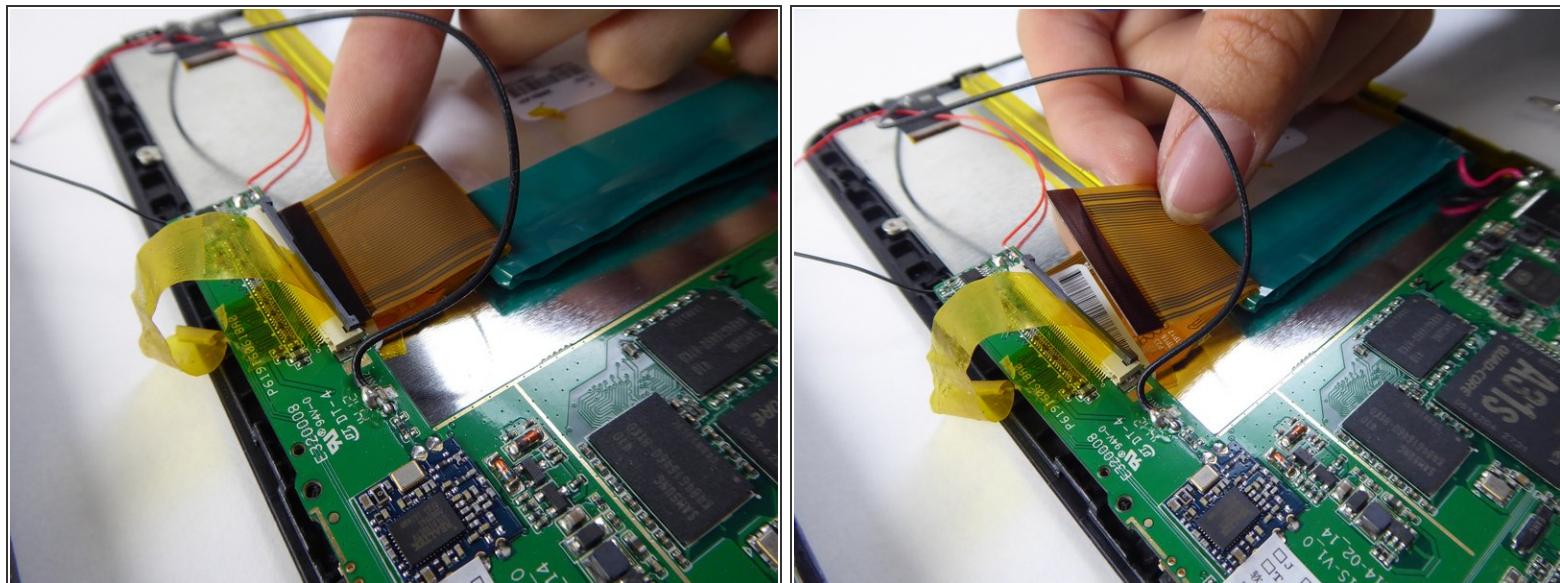

- Carefully remove the ribbon cable from the black tab.

## Step 13

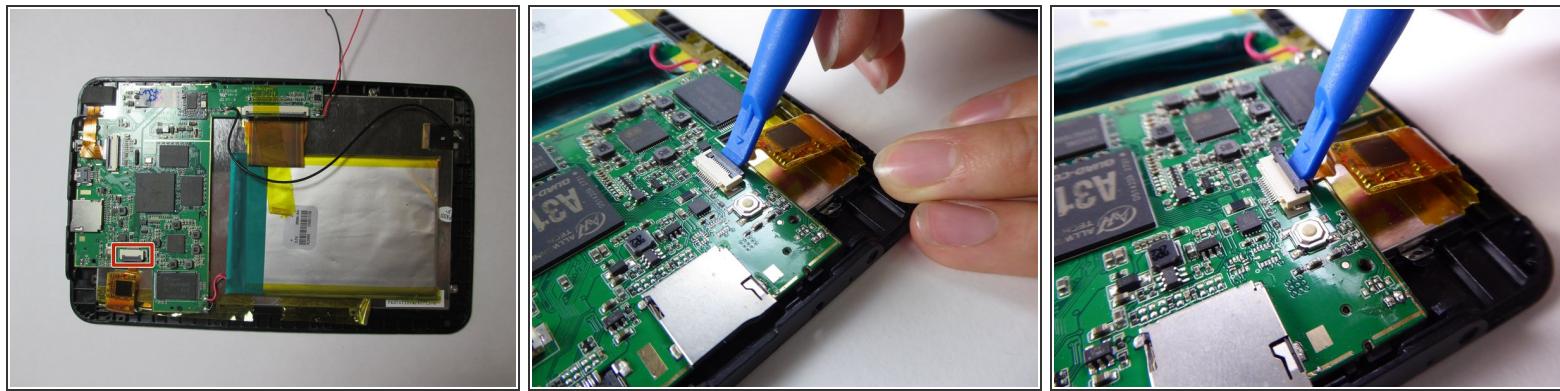


- Use a plastic opening tool to lift the black tab.

## Step 14



- Lift to remove the battery and motherboard from the tablet.

## Step 15

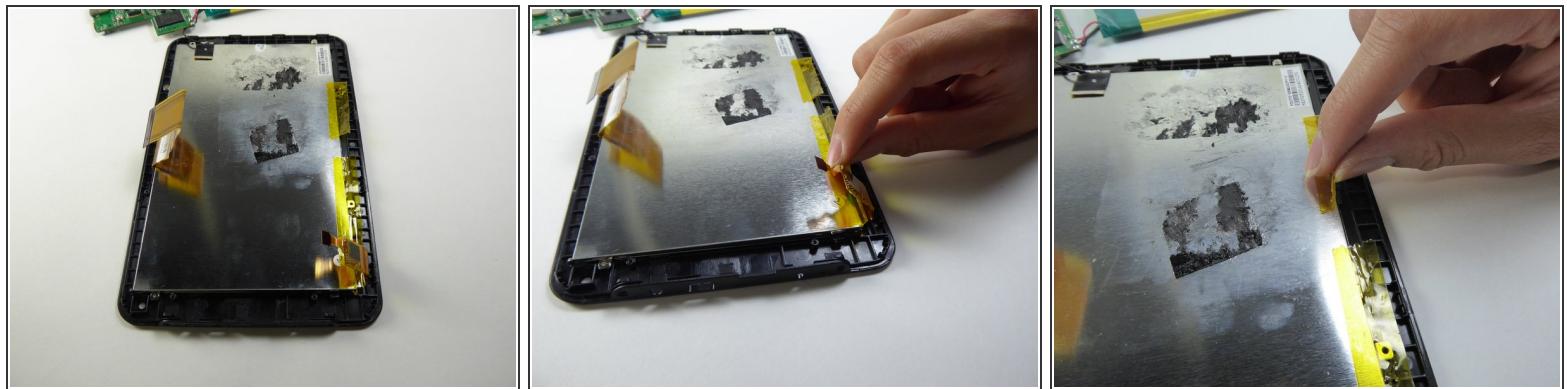


- Lift the tape on the sides.

## Step 16



- Use a Phillips #000 screwdriver to remove the three 2.5mm screws.

## Step 17

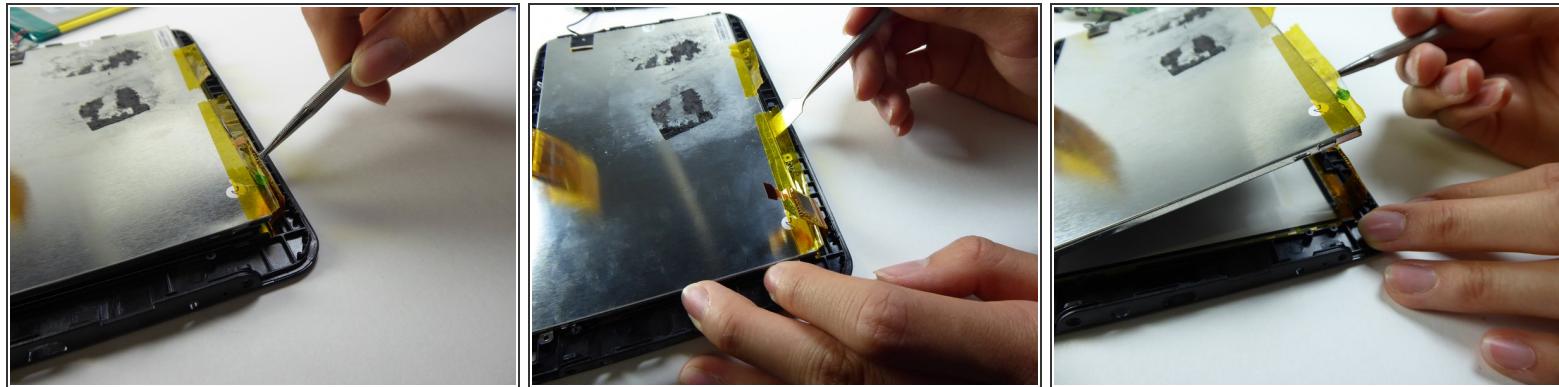

! Be careful on this step - the screen is fragile and can break easily.

- Wedge a metal spudger underneath the LCD to remove it.
- Replace the LCD.

To reassemble your device, follow these instructions in reverse order.