




# Vivitar DVR 781HD Front Case Replacement

Written By: Jordan Baum

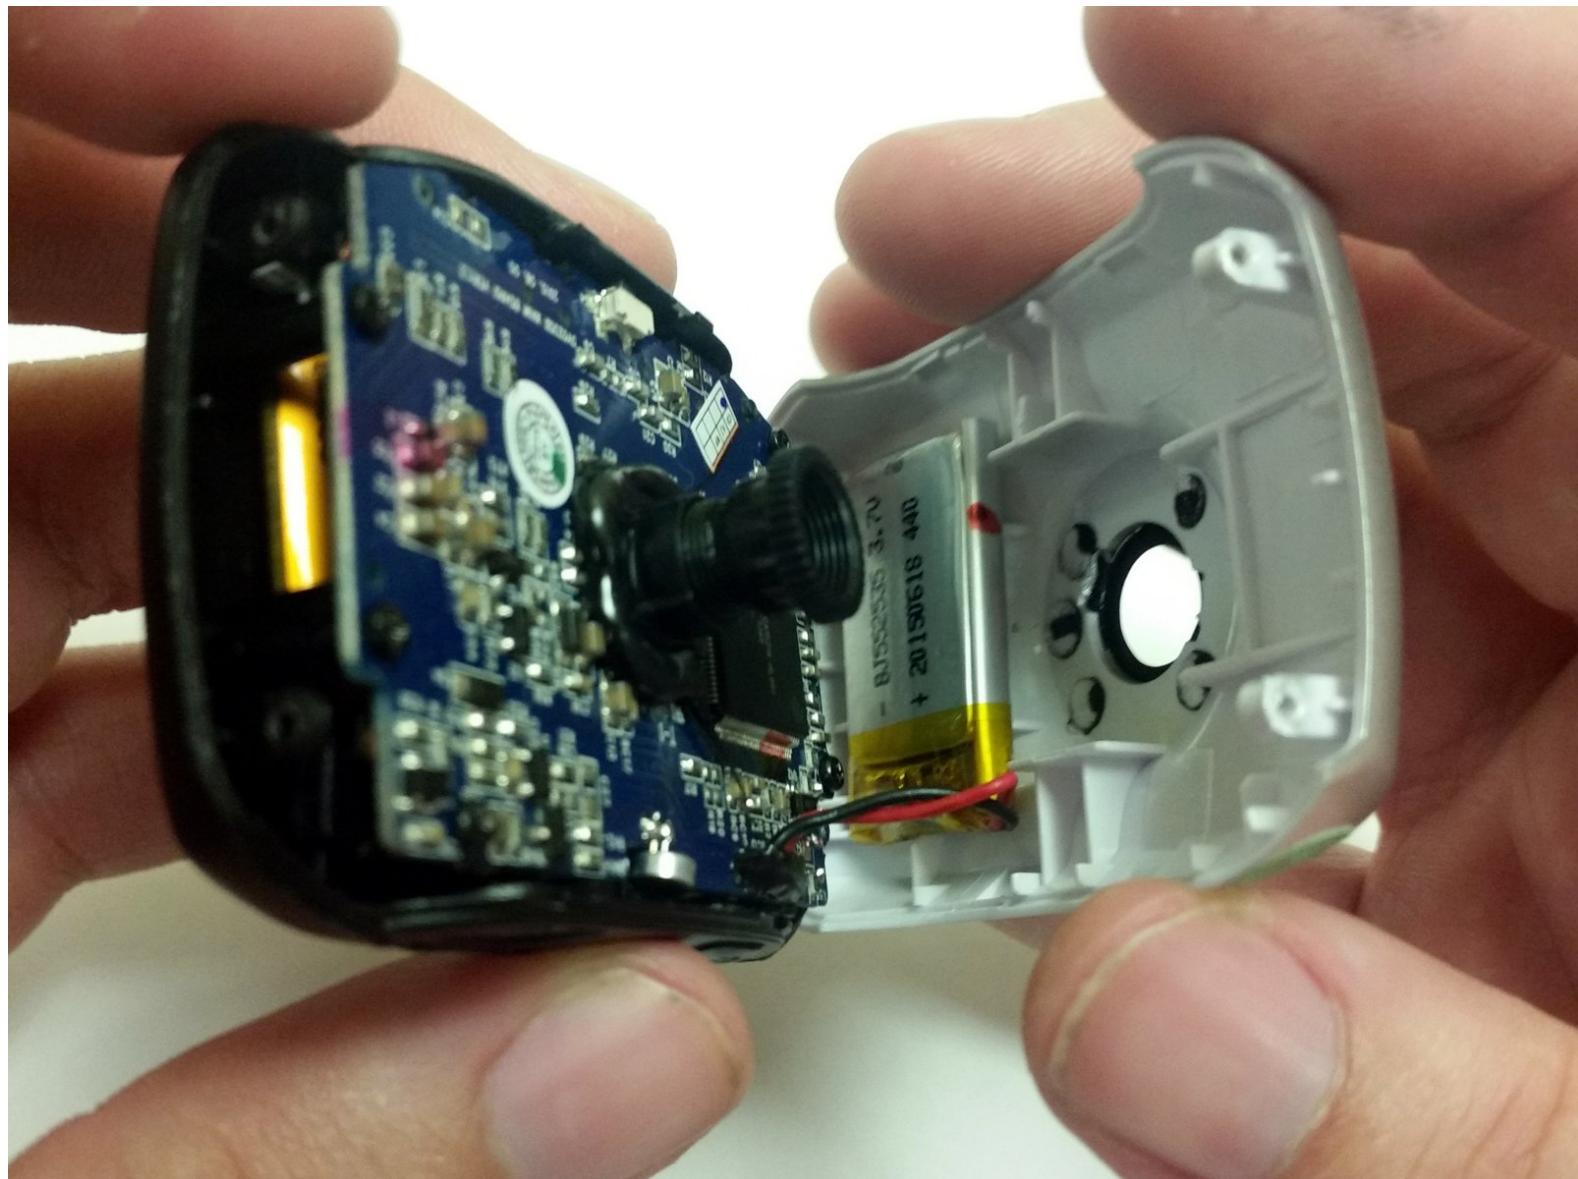

 **TOOLS:**

- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

## Step 1 — Front Case



- Begin with the camcorder lens up on a clear working surface.
- Remove the two 4mm Phillips #1 screws holding the switch plate in place. Rotate the device 180 degrees and repeat for the screws on the opposite side.

## Step 2



- Slide the plastic opening tool into the seam between the front and back sections of the case and apply a small amount of force to pop the case open.

## Step 3



- Move the plastic opening tool around the seam and apply force at each step to separate the front plate from the back plate and motherboard.
- The battery is held to the front half of the case with double-sided tape. Peel it up with a finger, being careful not to damage the battery.

To reassemble your device, follow these instructions in reverse order.