



Vivitar XO 7 Speaker Replacement

This guide will show how to remove speaker.

Written By: Barron Dillman



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Back Cover



- Remove the two 3mm Phillips #00 screws on the bottom of the tablet.

Step 2




- With the plastic opening tools, pry open the back cover.

Step 3





- Remove the back cover from the tablet.

Step 4 — Battery

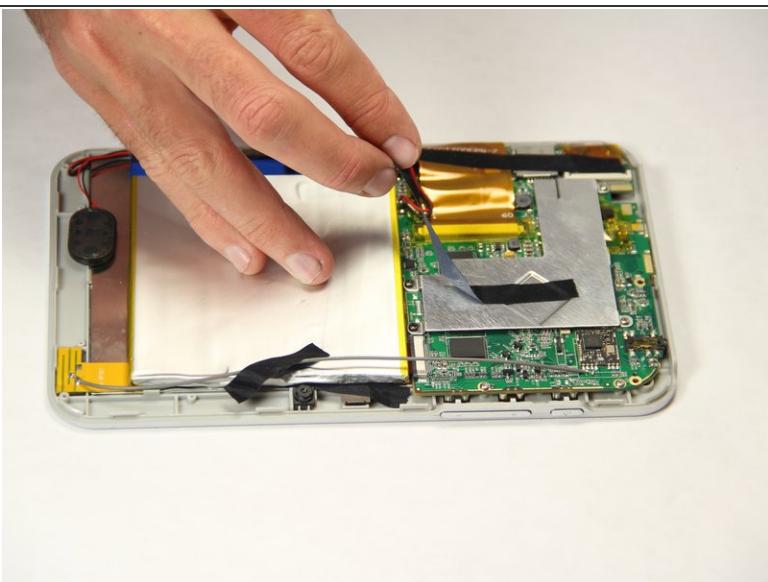



- Peel off the black pieces of tape from the internal components.

Step 5

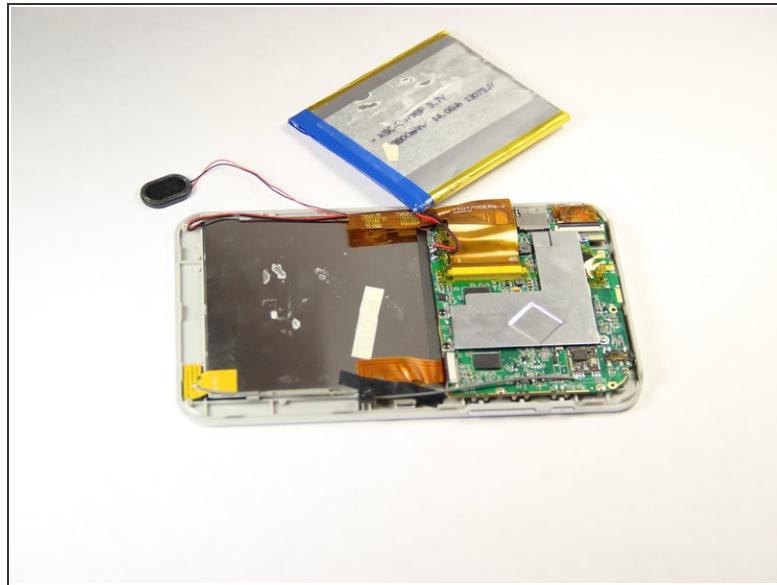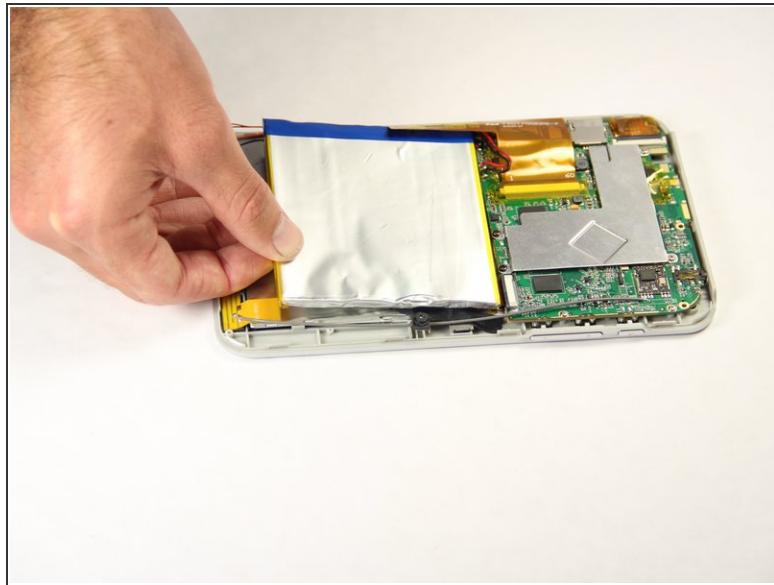


- Carefully remove the battery from the tablet.

Step 6

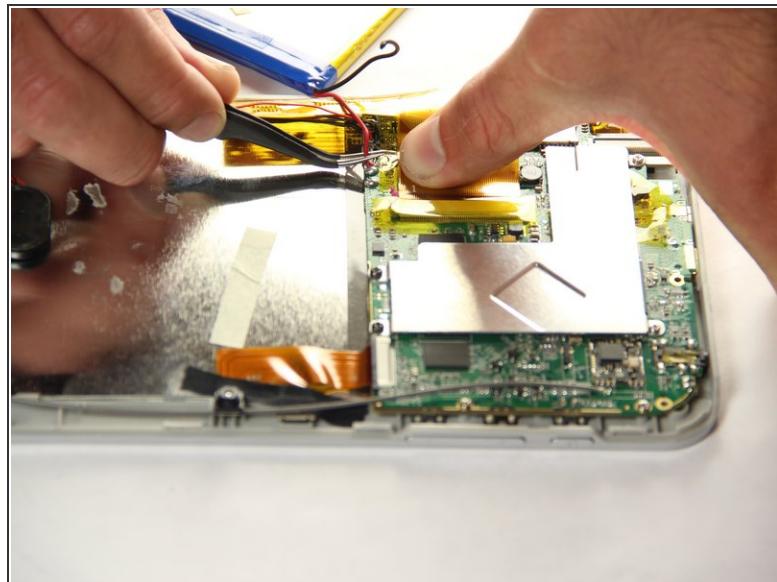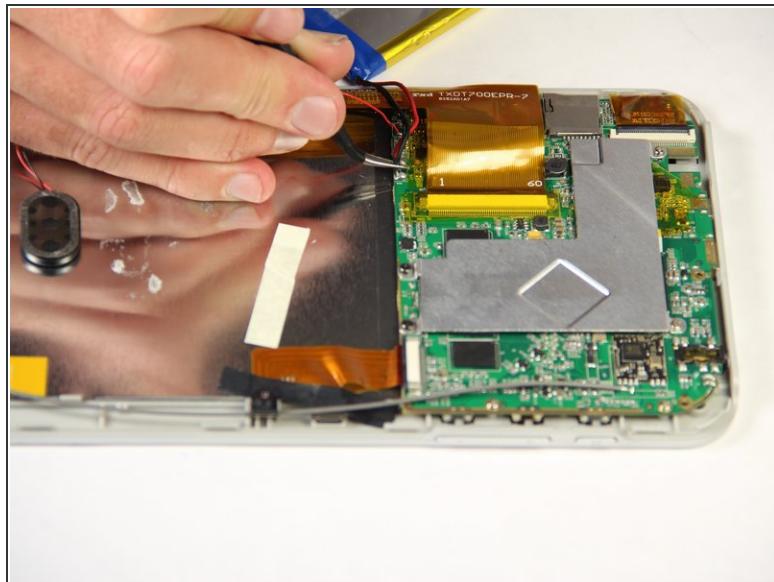



- With the tweezers, firmly grab the wire at the base and pull to disconnect the battery from the motherboard.

Step 7 — Speaker

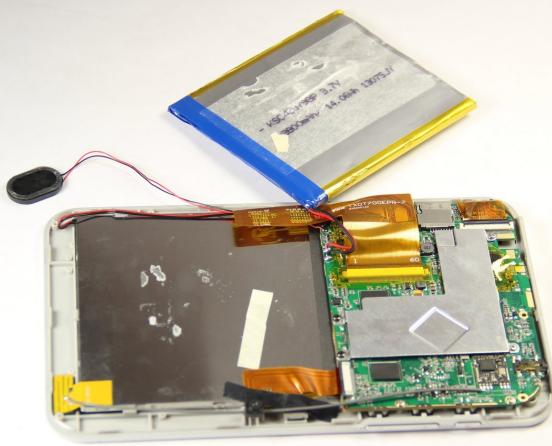

- Carefully remove the speaker from the metal plate with your hands.

Step 8

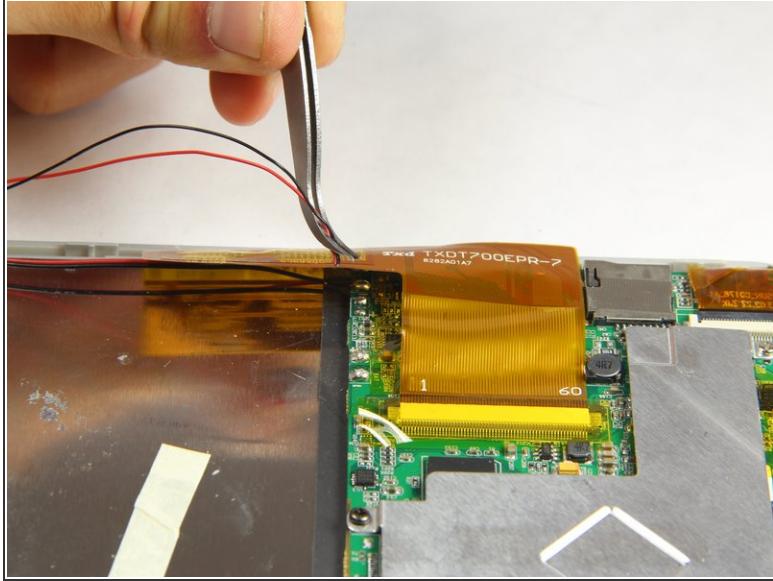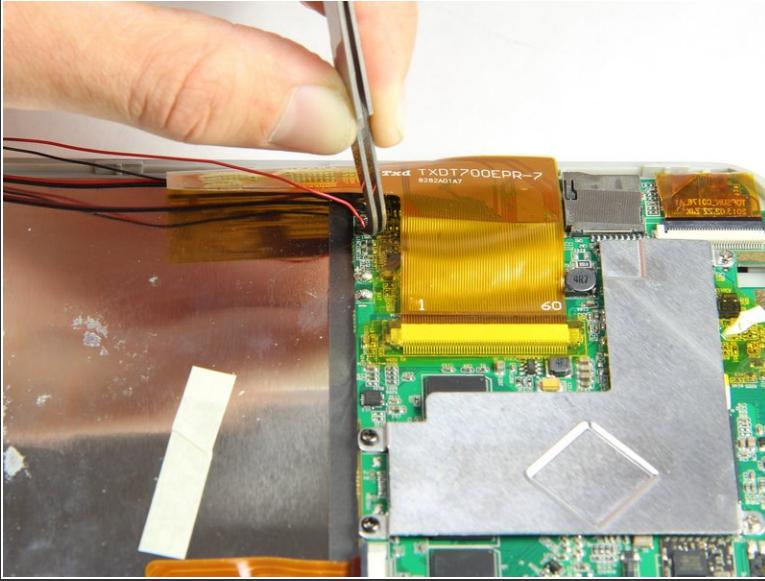

- With tweezers, firmly grab the wire at the base and pull to disconnect the speaker from the motherboard.

To reassemble your device, follow these instructions in reverse order.

