



# Vizio Smart TV Remote Control "Ok" Button Replacement

In this guide, I will show you how to replace the "ok" button on your Vizio tv remote.

Written By: Ghalib Alqahtani



## INTRODUCTION

This guide will help you replace the “ok” button on your Vizio t.v remote controller. The “ok” button is a key button on this controller because, without it, you won’t be able to select anything on your t.v screen. Please make sure to remove the battery before taking apart the remote.

### TOOLS:

- [iFixit Opening Tools \(1\)](#)

## Step 1 — "Ok" button




- Open the back cover with the direction of the arrow.

## Step 2



- Remove the two batteries.

## Step 3

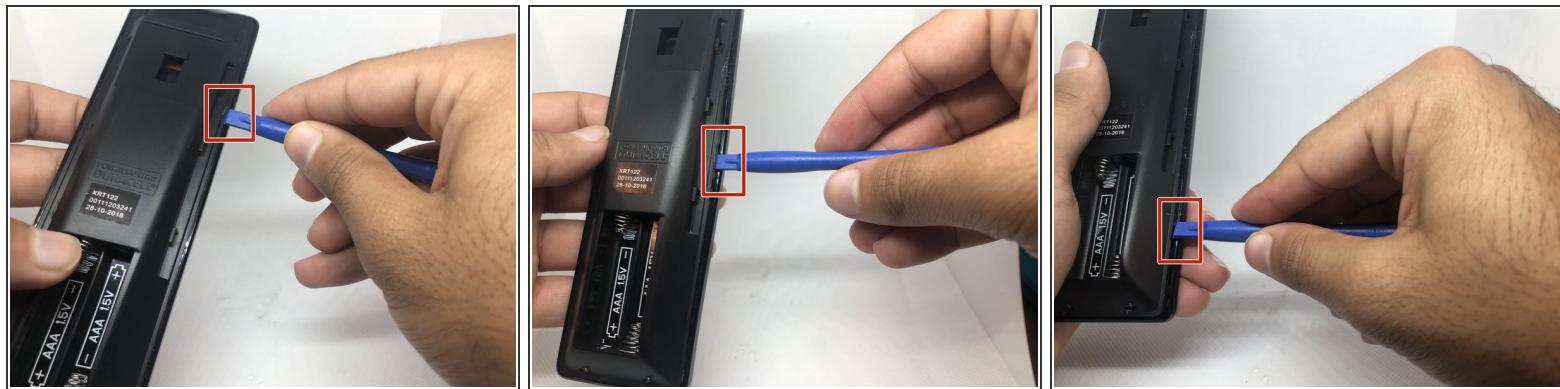


- Use the [plastic opening tool](#) to unlock the device. Place the tool in the thin space that separates the base from the control panel.

## Step 4




- Move the opening tool between the two sides to lift the base up slightly.
- Continue on the other side of the remote.

## Step 5

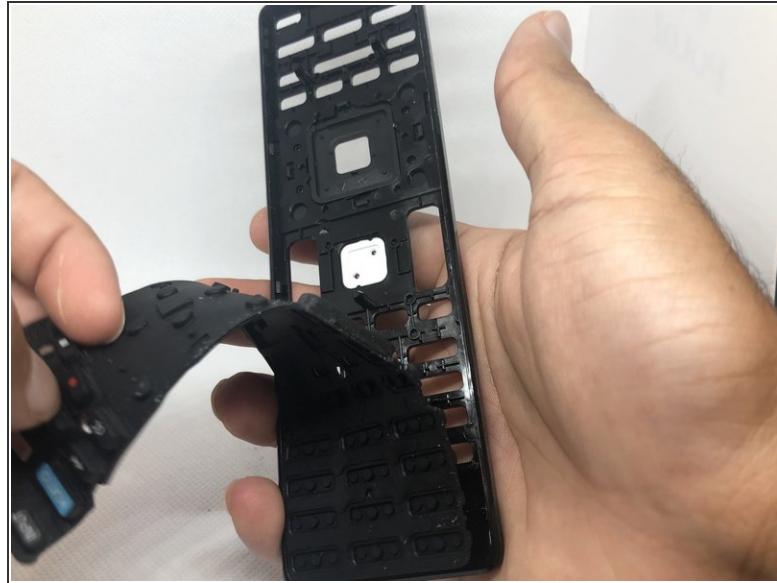

- Remove the rubber buttons pad.

## Step 6

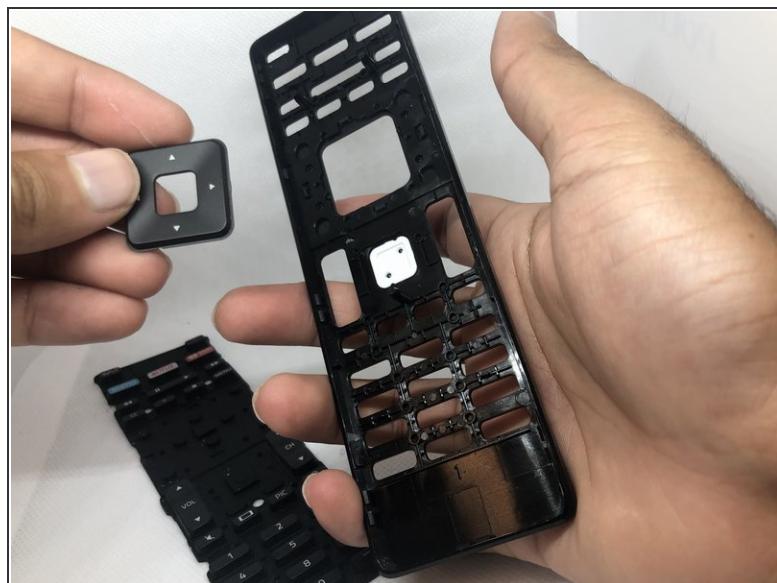

- Remove the arrows pad from the plastic cover.

## Step 7



- Place the "ok" button in the middle of the arrow pad.

To reassemble your device, follow these instructions in reverse order.