



Vornado 133 Compact Air Circulator Fuse Replacement

How to easily replace your fuse.

Written By: Erin Klein



INTRODUCTION

The Vornado 133 has a small fuse in the plug end as a safety feature; if the fuse has burnt out, your fan will not start. This guide will illustrate how to remove and replace the fuse.

TOOLS:

- [Tweezers](#) (1)
- [Spudger](#) (1)

PARTS:


- [Fuse \(2.5 amp, 125 volt\)](#) (1)

Step 1 — Fuse




- Ensure the unit is powered off and remove the plug from the outlet.

Step 2

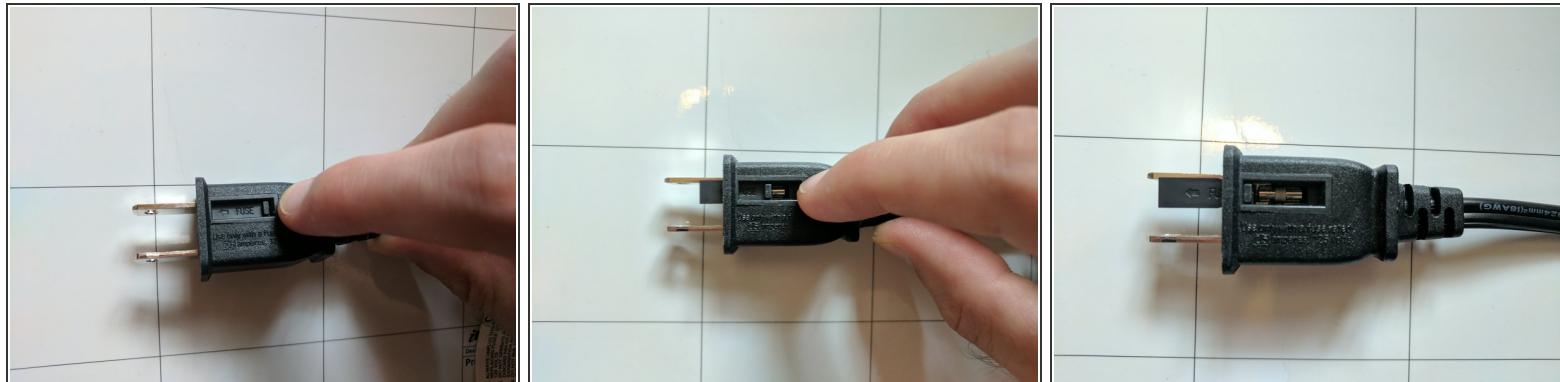

- Slide open the fuse access cover on the top of the plug by moving it towards the end of the plug.

Step 3

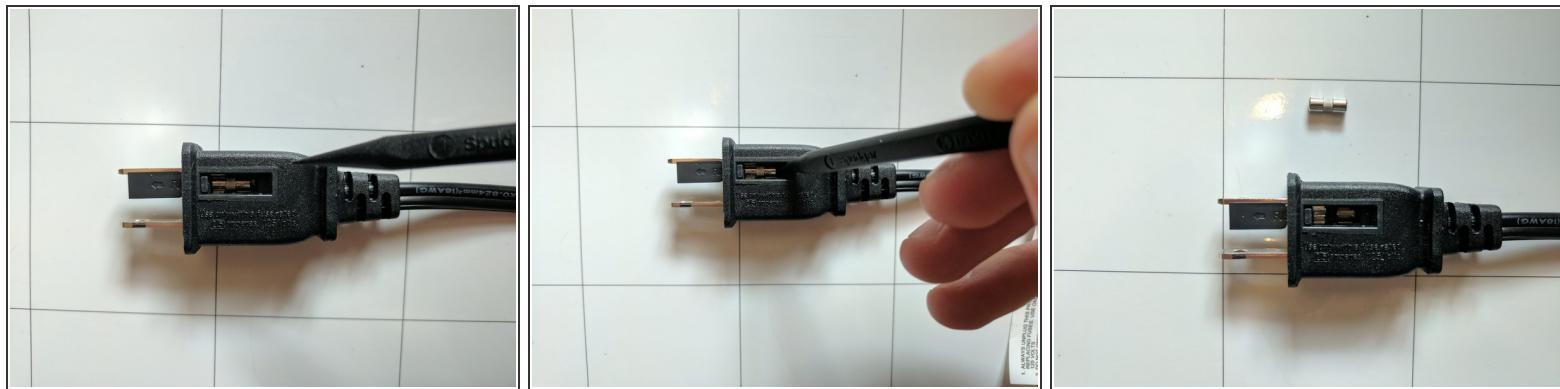

- Use a pair of tweezers or a small plastic spudger to remove the fuse from from the fuse casing. Remove the end nearer to the fan body first, then the end nearer to the plug end.

(i) The replacement fuse must be 2.5 amp, 125 volt.

 Do not push against the glass center of the fuse, only the metal end pieces.

Follow these instructions in reverse order to install the new fuse and close the access panel.