



Vtech Kidizoom Smart Watch DX Faceplate Replacement

Replace the Kidizoom Smart Watch DX faceplate to keep your watch looking good as new.

Written By: Jordan RiberSmith



INTRODUCTION

If your faceplate looks worn, cracked, or dirty, this guide will show you how to replace it - or just how to remove it for cleaning.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Faceplate



- Flip the watch so that the screen faces upward.

Step 2



- Use a plastic opening tool to gently pry the edges of the faceplate away from the watch.

(i) You may hear some popping sounds as you are removing the faceplate. This is normal.

Step 3



- Pull the faceplate fully apart from the watch.

To reassemble your device, follow these instructions in reverse order.