




# Wahl Chrome Pro Power Switch Replacement

This guide discusses replacement of a faulty power switch for the Wahl Chrome Pro.

Written By: Holly Dunn

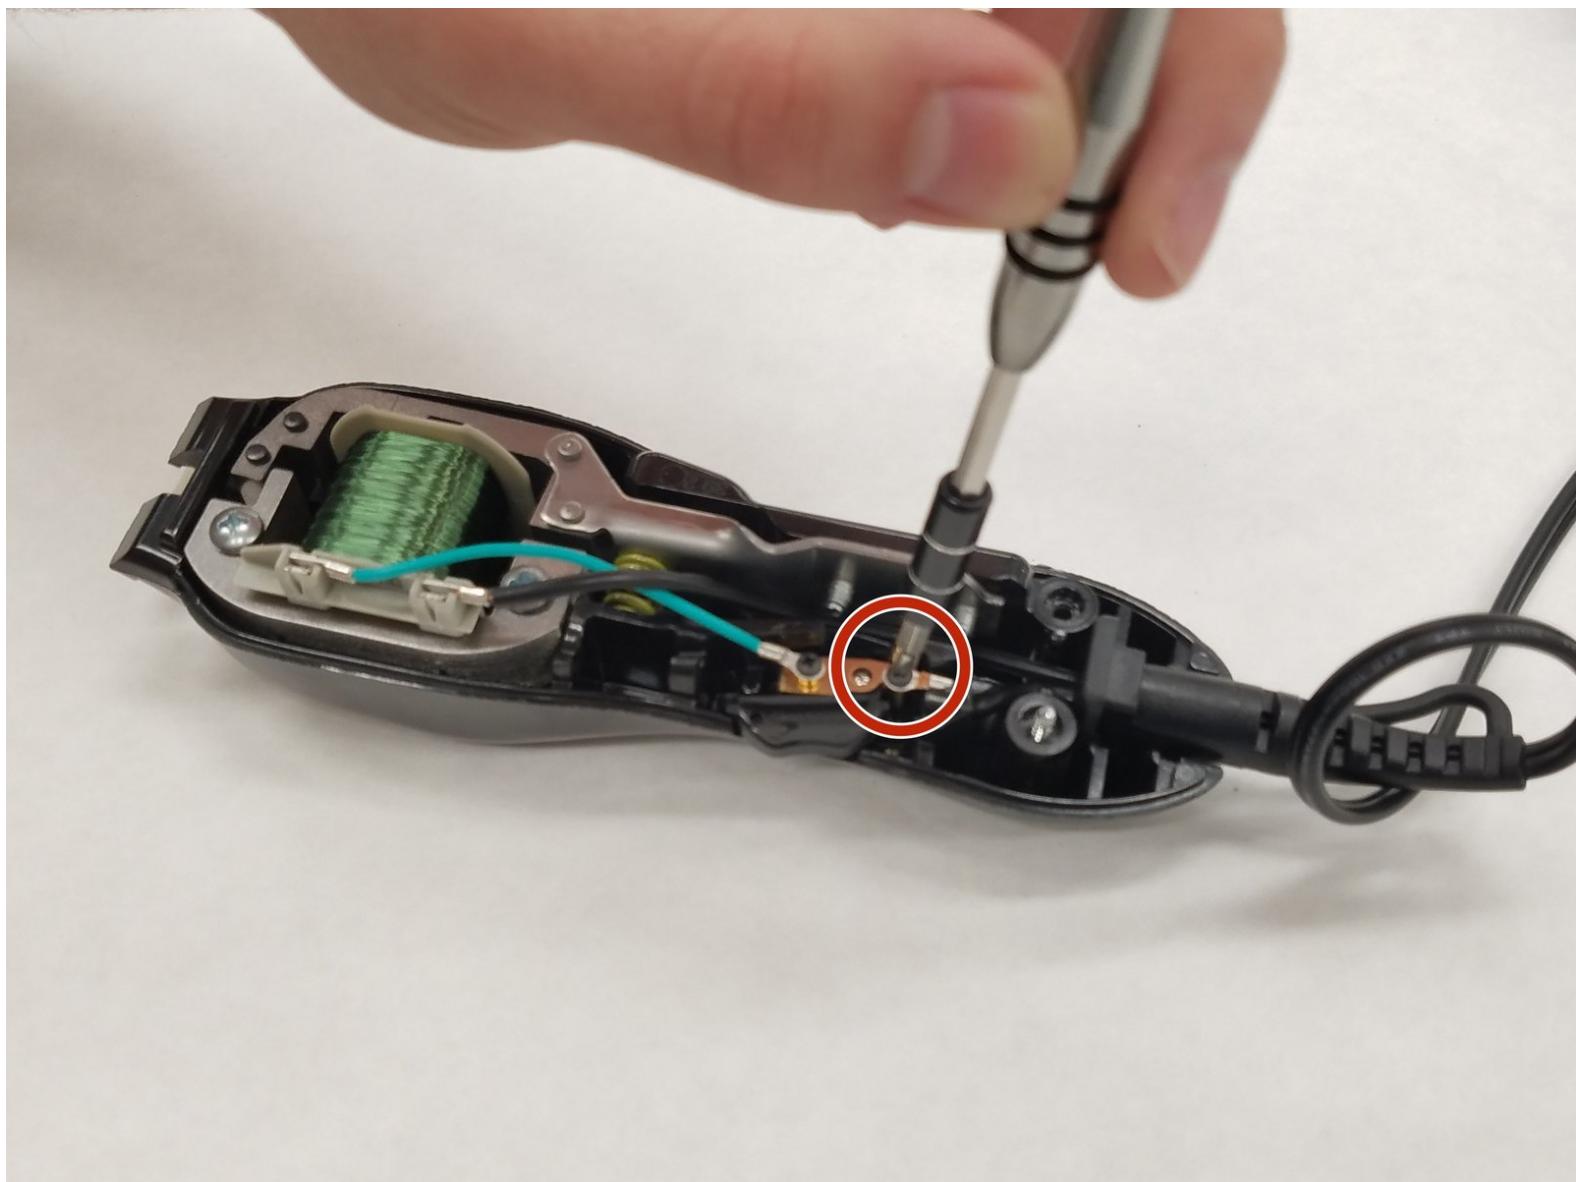


## INTRODUCTION

The power switch connects the device motor to the power cord. If the power switch becomes broken or worn, the device may not function properly.

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Case

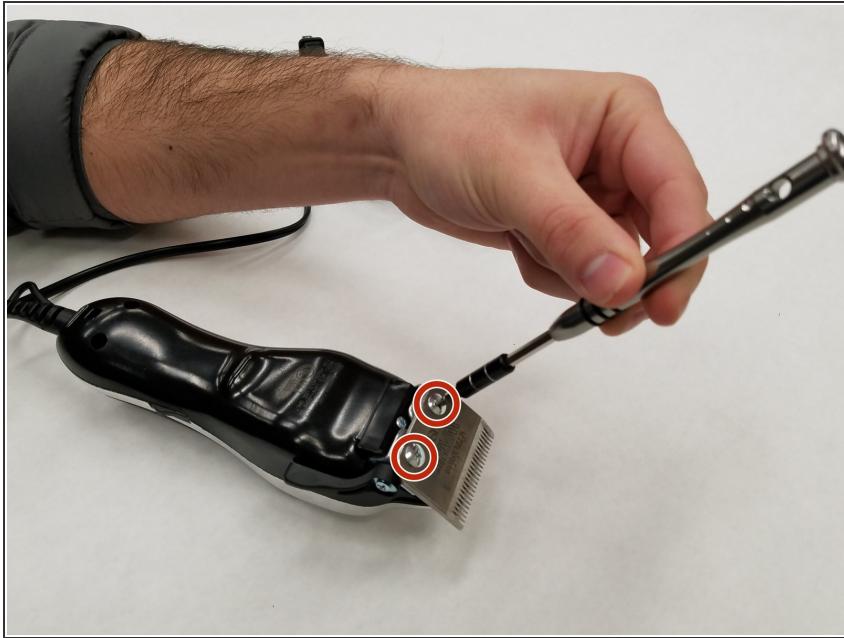

- Remove the two 5.0 mm JIS #1 screws to loosen the cutting blades.

**⚠** Make sure your device is not connected to power before you begin.

## Step 2




- Lift the bottom blade straight up from the device body to remove it.

## Step 3



- Remove the three 9.0 mm JIS #1 screws attaching the base of the blade assembly to the body.

## Step 4

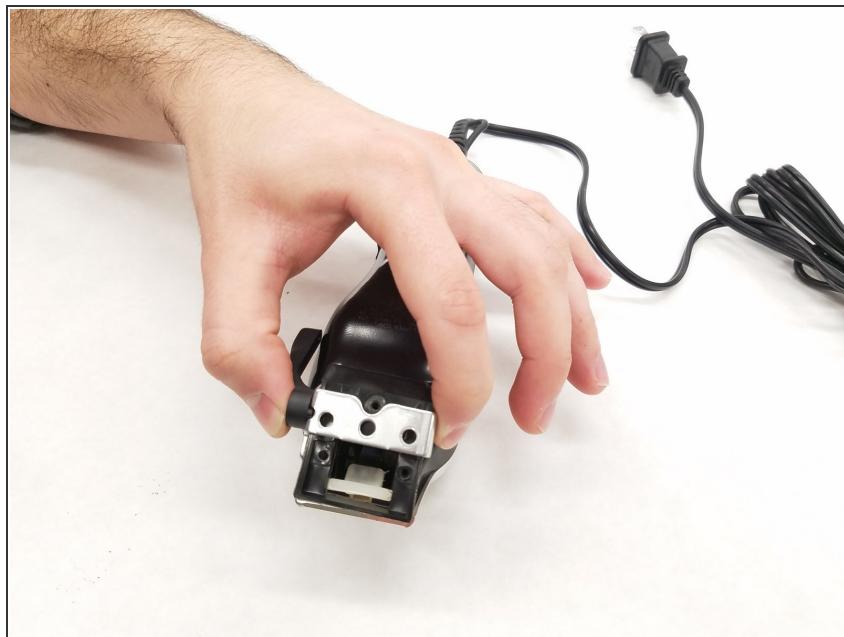


- Lift the base of blade assembly straight up off of the body.

## Step 5




- Remove the two 12.0 mm JIS #1 screws on the back of the device body.

## Step 6

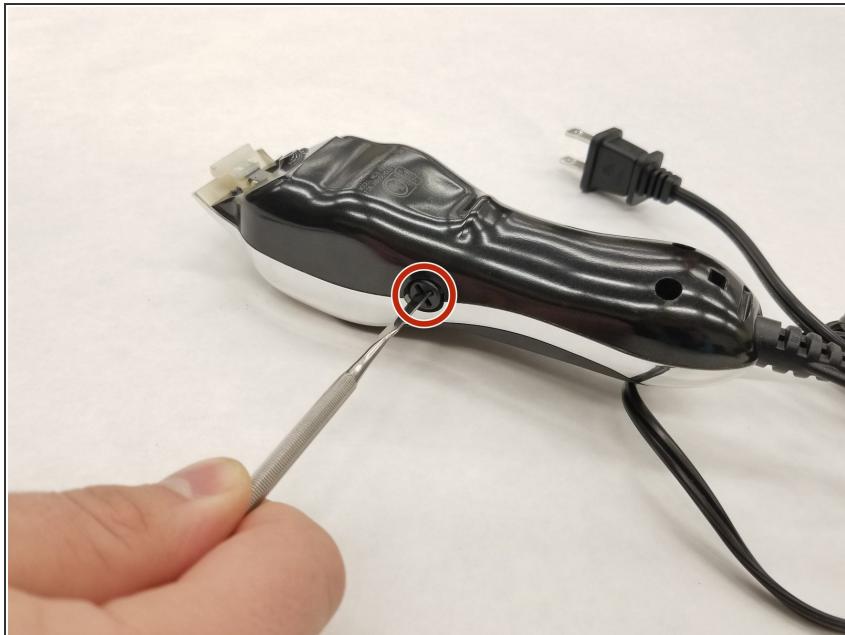

- Remove the 13.0 mm Phillips #2 screw on the side of the device body.
  - This screw is located on the opposite side of the body from the switch.

## Step 7

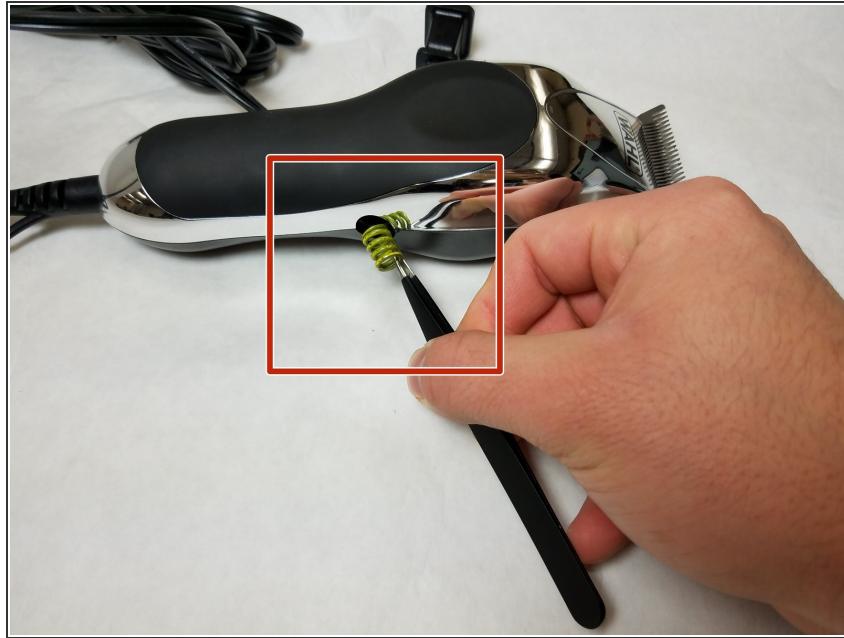


- Remove the spring on the side of the body using tweezers.

## Step 8




- Pry the body case off of the device using a spudger.

## Step 9 — Power Switch

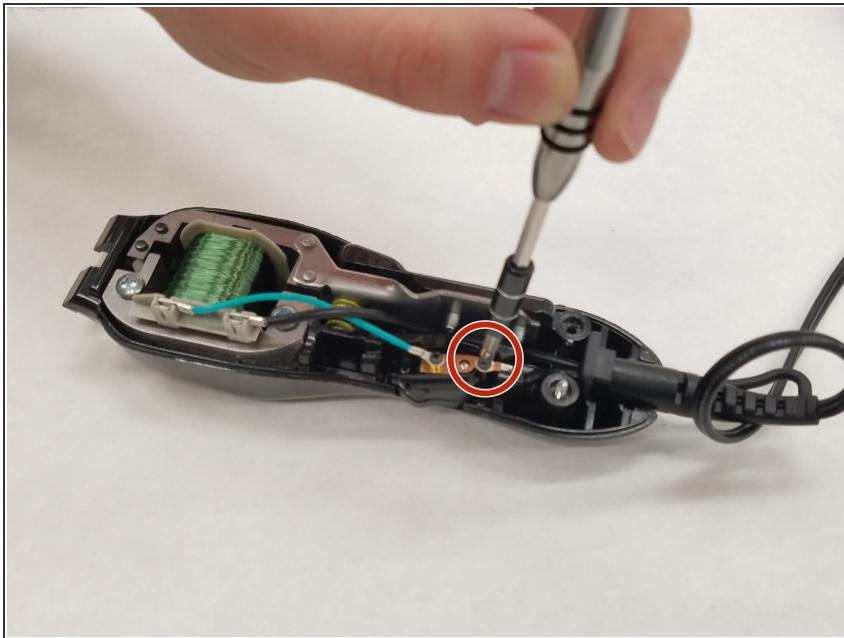


- Remove one 7.5 mm JIS #1 screw connecting the power cord to the switch base.

## Step 10

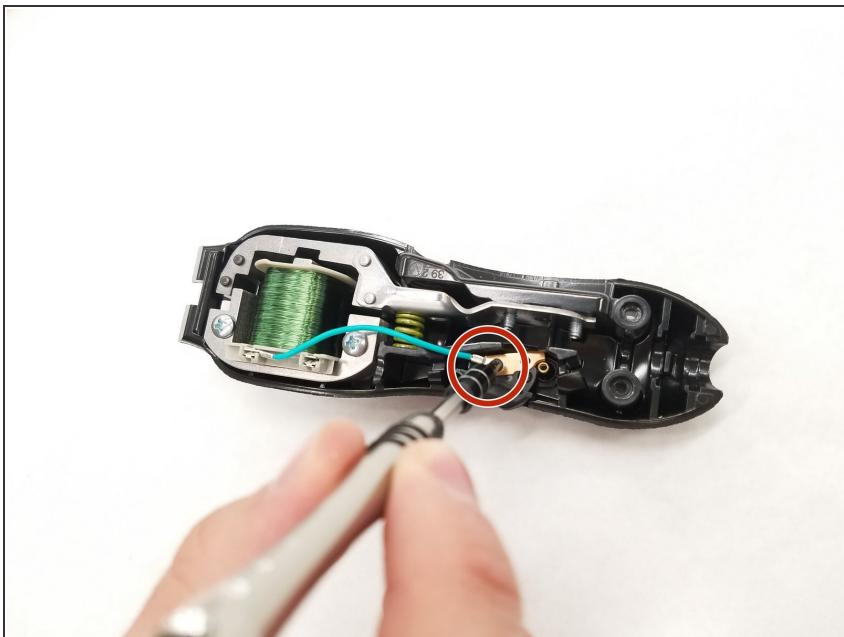

- Remove one 7.5 mm JIS #1 screw connecting the wire to the switch base.

## Step 11

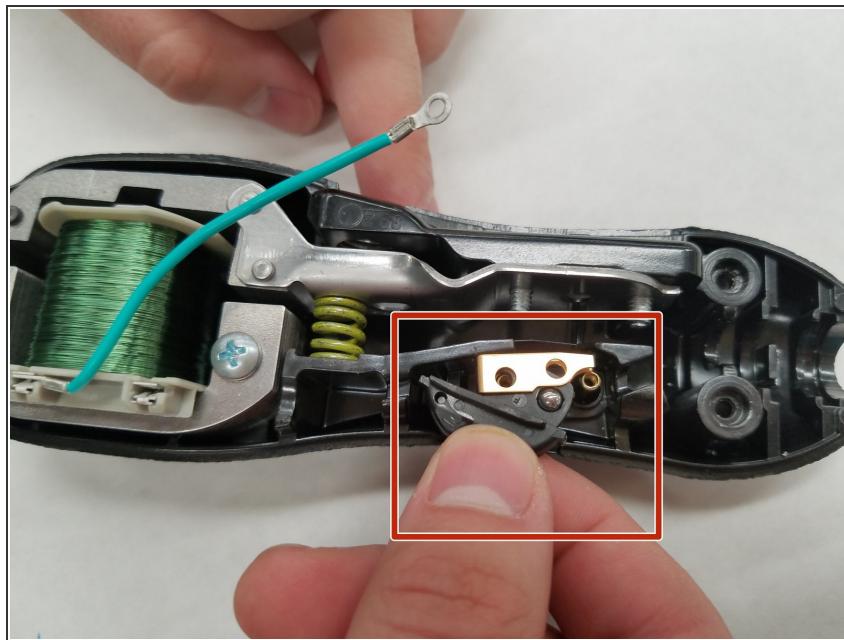

- Remove the switch from device by lifting straight up from the device body.

To reassemble your device, follow these instructions in reverse order.