



Wahl Lithium Ion Trimmer Metal Razor Arms Replacement

If these parts experience a mechanical failure or the razor is dropped hard enough to be offset, it is useful to realign or replace these arms.

Written By: nathan



This document was generated on 2019-09-18 05:26:20 AM (MST).

INTRODUCTION

In this guide you will learn how to disassemble and reassemble the trimmer and learn how to replace the blades if they needed to be fixed.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Fingers](#) (1)

Step 1 — Metal Razor Arms




- Start with examining the razor, looking to see if the blades are jammed or moving.

Step 2




- By now you've realized that the blades are broken and need to replace them. Unscrew the top two screws with a Philips head screwdriver.

Step 3

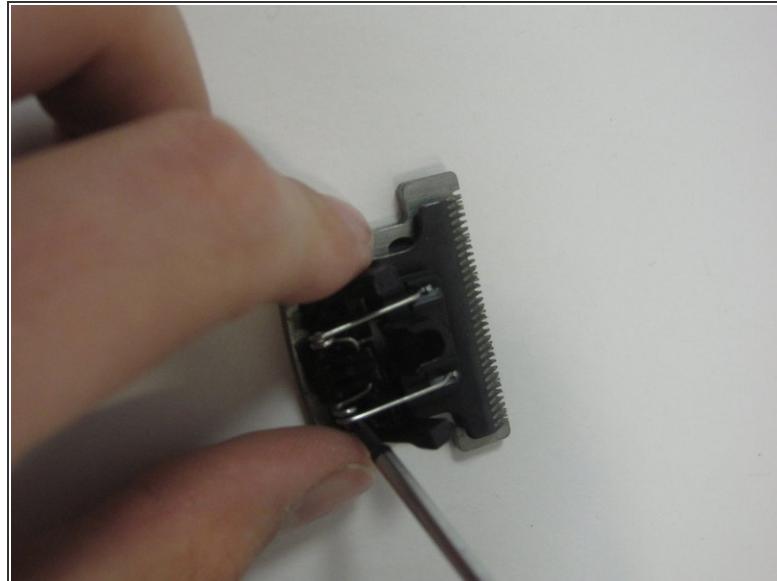

- Apply pressure to the back side of the blades and remove the blades.

Step 4

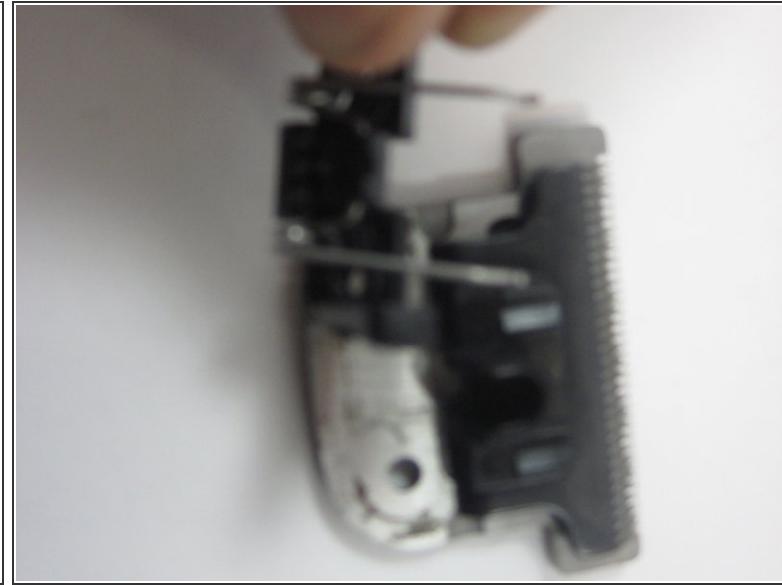

- In this step remove metal clip by using either a flat head or Philips head screwdriver.

Step 5



- Once taken completely apart this is what you will be looking at. What you need to replace is the metal clip shown in the picture. Once replacing the clip, reassemble the razor and the problem is now solved.

To reassemble your device, follow these instructions in reverse order.