



Wahl Professional Designer Blade Replacement

This guide will allow you to easily replace the blade on your device.

Written By: Sophia Swearengin



INTRODUCTION

Use this guide to replace the blade on your device.

TOOLS:

- **Phillips #0 Screwdriver (1)**
- **Phillips #1 Screwdriver (1)**

Step 1 — Blade



- Unscrew the two 3.8 mm Phillip head screws located on the blade using a Phillip's #0 screwdriver.

Step 2



- Unscrew the 6.2 mm Phillip head screw using a Phillip's #1 screwdriver and remove the blade.

To reassemble your device, follow these instructions in reverse order.