



# Wahl Professional Designer Power Cord Replacement

This guide contains simple instructions in order to replace the power cord on your device.

Written By: Sophia Swearengin




## INTRODUCTION

If your device is not working due to a problem with your power cord this guide will allow you to replace it to fix your problem.

### TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Phillips #1 Screwdriver** (1)

## Step 1 — Power Cord

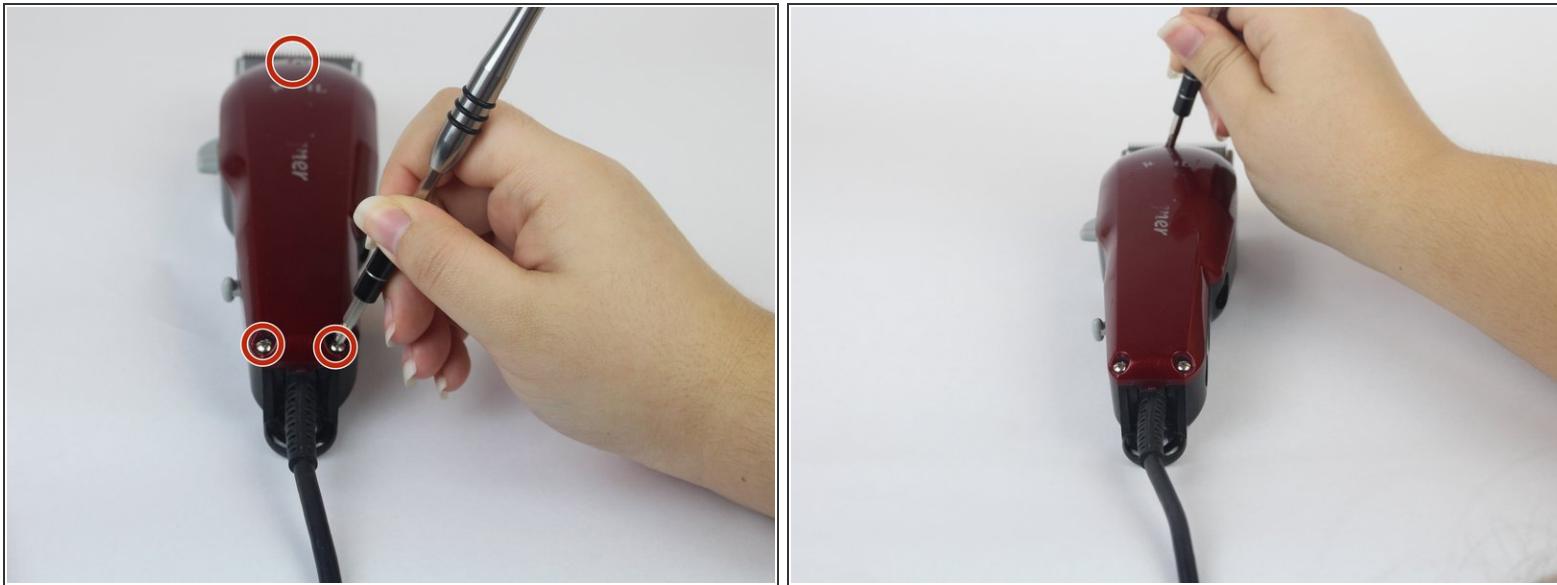


- Unscrew the 12 mm Phillips head screws located at the top of the cover and at the bottom two corners, using a Phillips #1 Screwdriver.

## Step 2




- Remove the cover from the device.

## Step 3

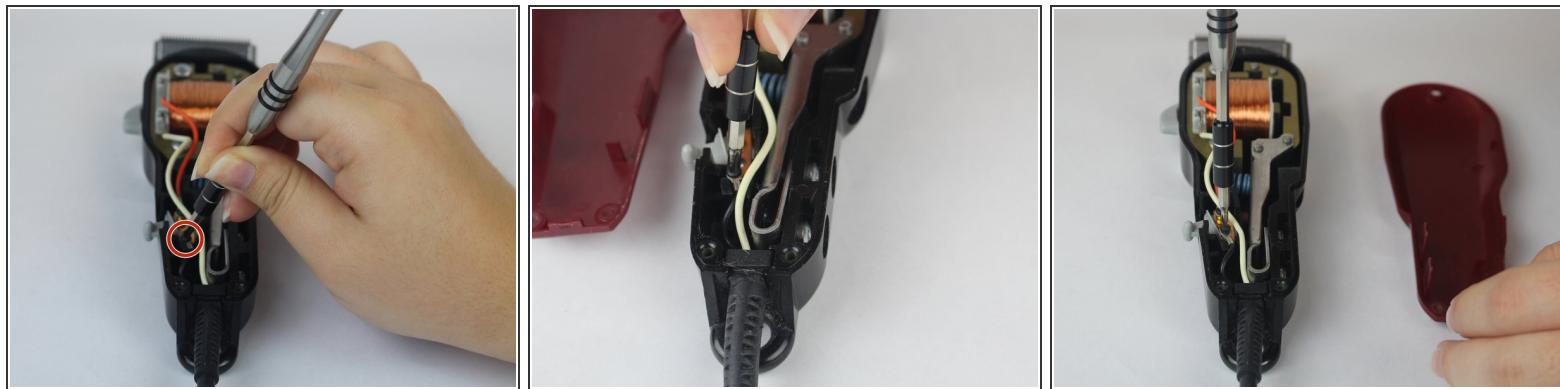


- Unscrew the black 5.556 mm Phillip head screw on the power switch, closest to the power cord with a Phillips #0 Screwdriver.

## Step 4

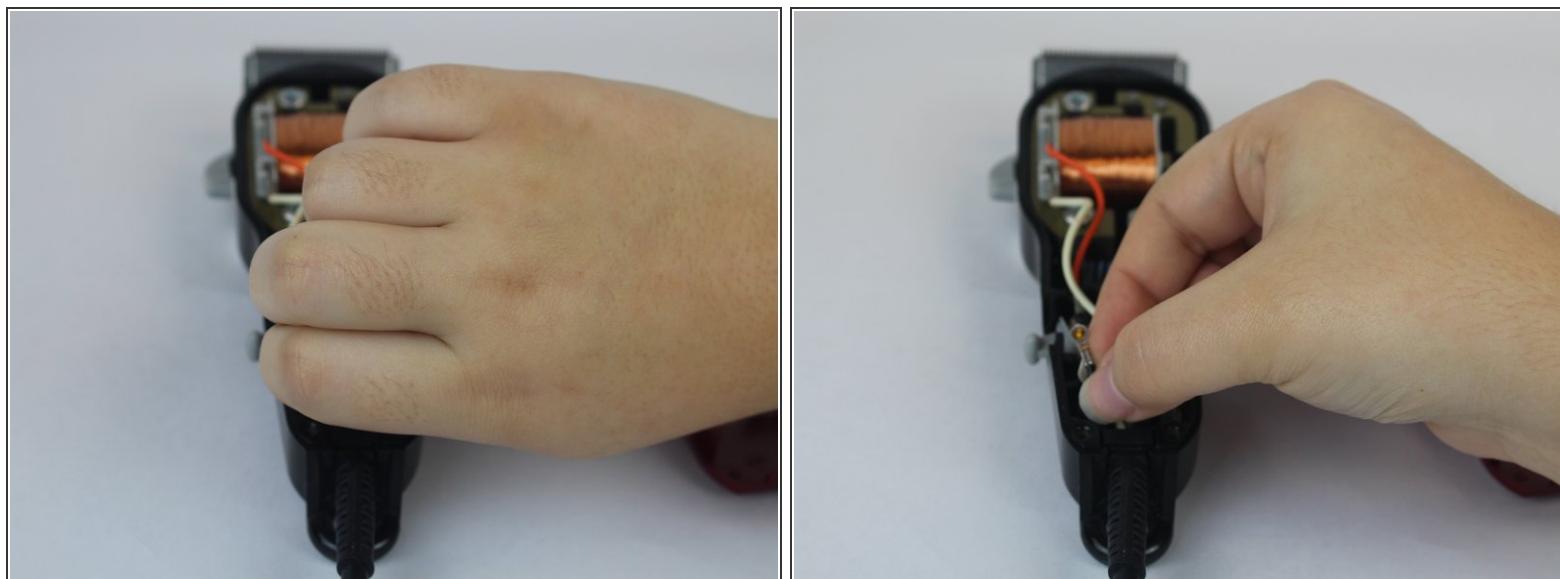


- Gently remove the black wire connected to the black screw.

## Step 5

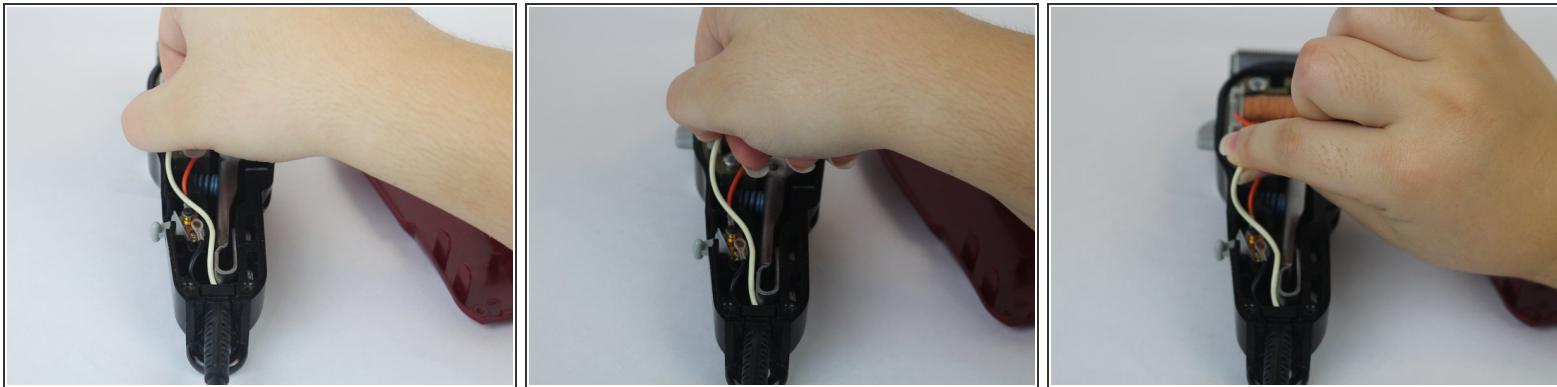

- Remove the white wire connected to the power cord and the motor by grabbing the white wire firmly on both sides near the motor mounting and wiggling until release.

## Step 6

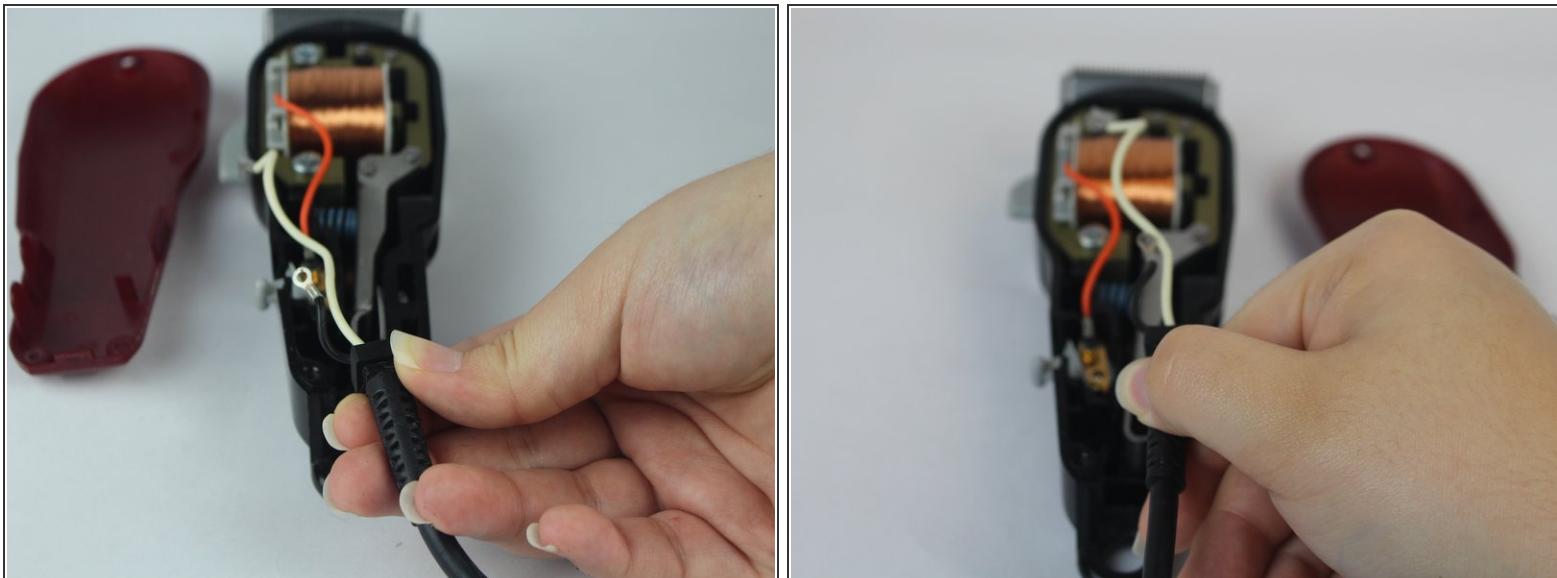

- Remove the power cord from its mount at the bottom of the device.

To reassemble your device, follow these instructions in reverse order.