



Wahl Professional Designer Power Switch Replacement

This guide will enable you to replace the power switch on your device.

Written By: Sophia Swearengin




INTRODUCTION

Use this guide to replace the power switch on your device.

TOOLS:


- **Phillips #0 Screwdriver (1)**
- **Phillips #1 Screwdriver (1)**

Step 1 — Power Switch

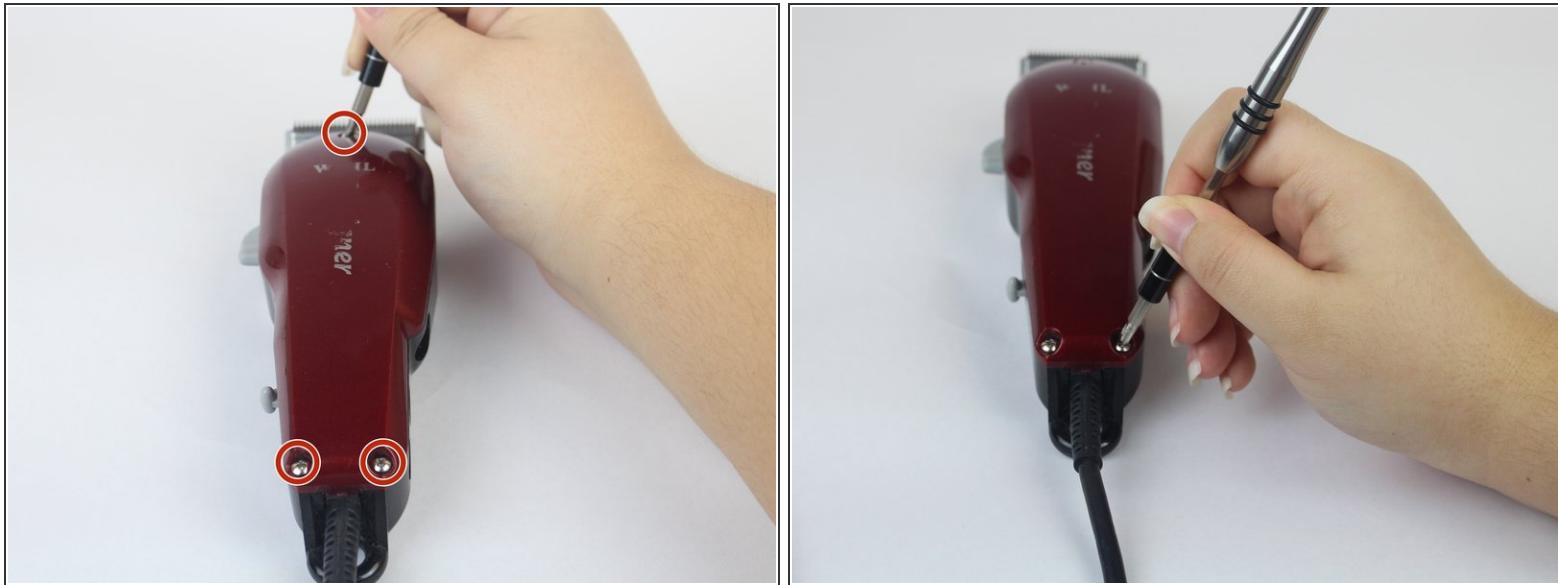


- Unscrew the 12 mm Phillips head screws located at the top of the cover and at the bottom two corners, using a Phillips #1 Screwdriver.

Step 2

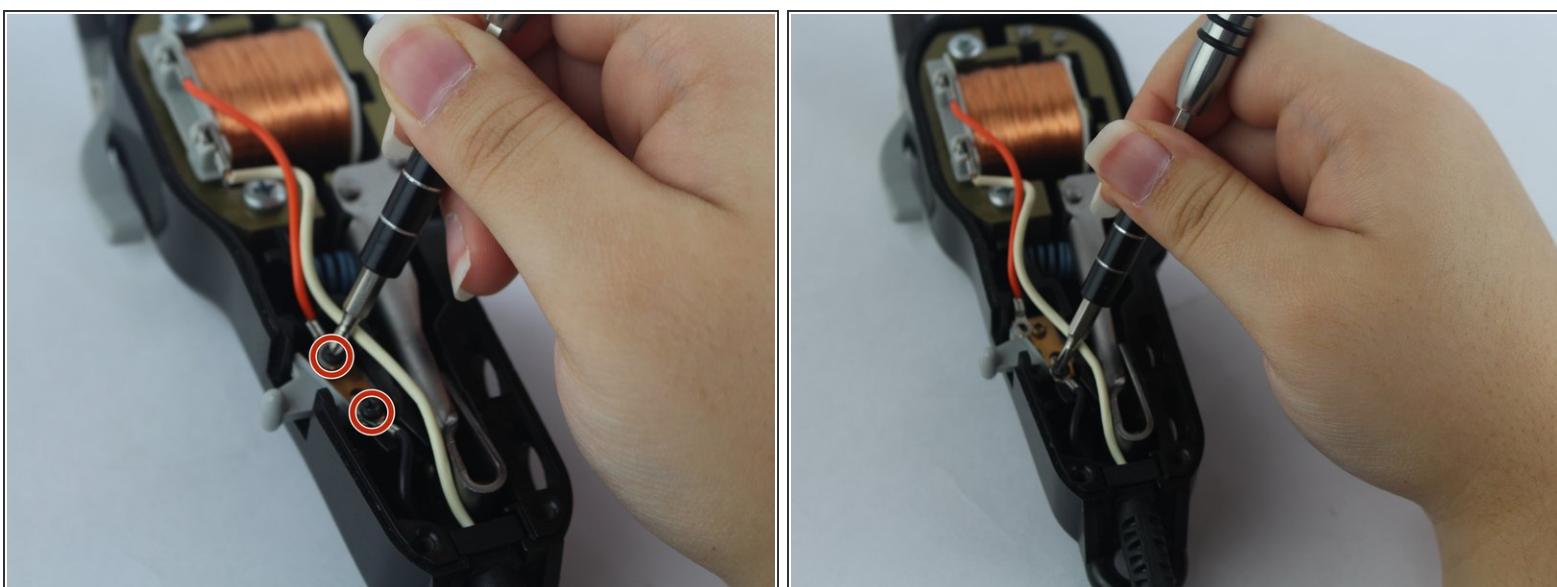

- Unscrew the two black 5.556 mm Phillip head screw on the power switch with a Phillips #0 Screwdriver.

Step 3

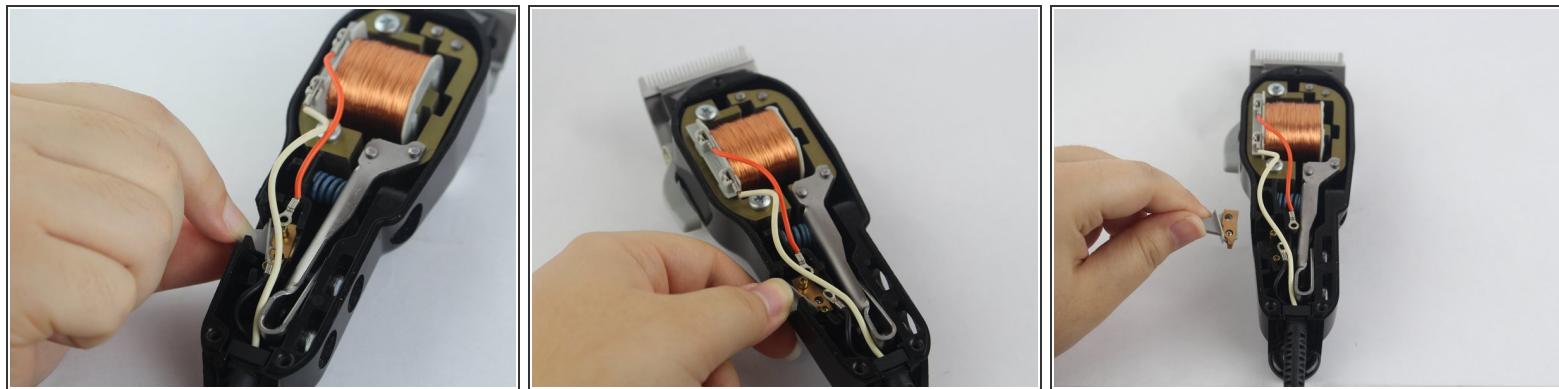

- Shimmy the power switch off the mount until it is completely removed.

To reassemble your device, follow these instructions in reverse order.