



Wand Company Star Trek Communicator Silver Plate Replacement

Use this guide to replace the middle Silver Plate located within the Wand Company Star Trek Communicator.

Written By: Garret Moses



This document was generated on 2019-09-17 09:15:07 PM (MST).

INTRODUCTION

This detailed guide will cover the particulars on how to replace the middle Silver Plate in the event that it becomes damaged or bent.

TOOLS:

- [64 Bit Driver Kit \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Silver Plate




- Power off the Star trek Bluetooth Communicator before disassembling.

Step 2



- Remove the four T6 Torx screws (1.70mm) located on the back of the device.
- Remove the black plastic cover by gently pulling it.

Step 3

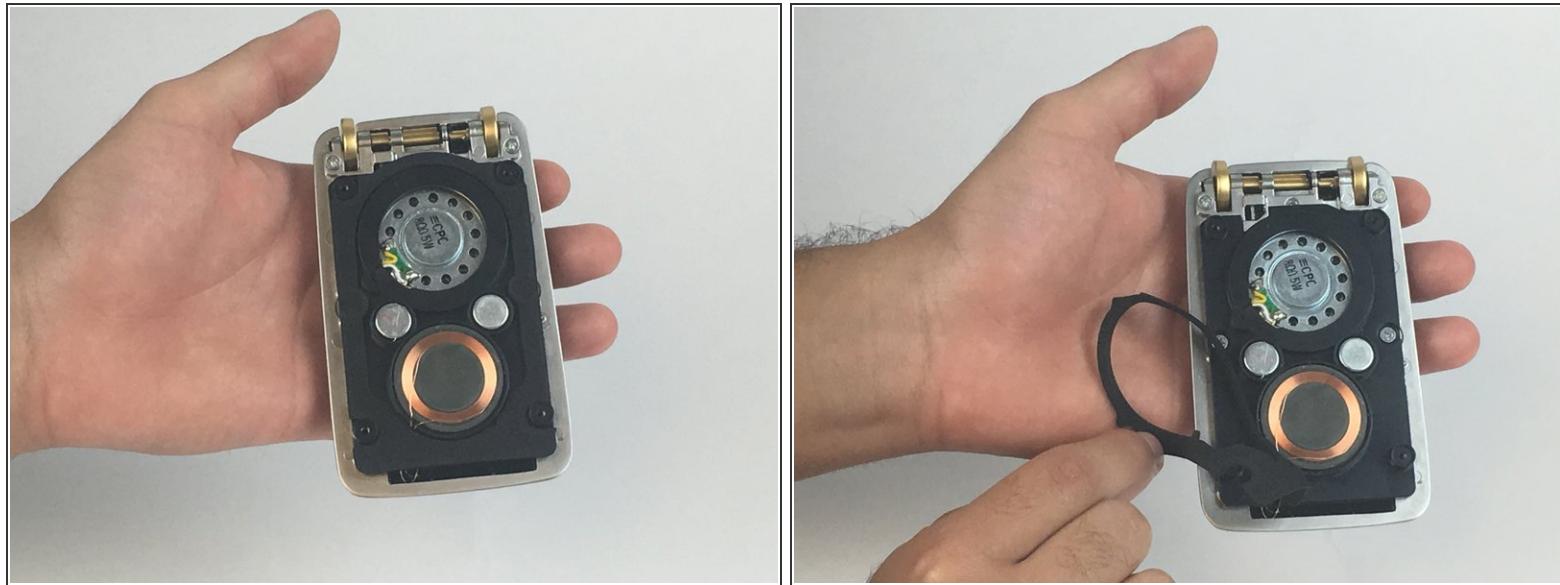

- Remove the protective foam located around the speaker and charging magnets.
- Be careful not to lose the two magnets located between the microphone and the speaker. The magnets can be easily removed if they come in contact with other magnetic materials.

Step 4



- Remove the two Phillips PH0 (0.9mm) screws located to the side of each magnet.

Step 5



- Remove the black cover.

Step 6



- Remove the protective foam attached to the battery.

Step 7



- Remove the five Phillips PH0 (0.9mm) screws located at the top and bottom of the silver plate.

Step 8



- Remove the silver plate.

To reassemble your device, follow these instructions in reverse order.