



Waring 51BL29 Drive Coupling Replacement

In this guide you will learn how to replace the drive coupling

Written By: Dean Becker




INTRODUCTION

The drive coupling is the small gear-like piece attached to the top of the blender base where it serves to attach the motor to the blades. If the teeth are worn down it should be replaced by following these steps.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [Flathead Screwdriver \(1\)](#)

Step 1 — Bottom Panel

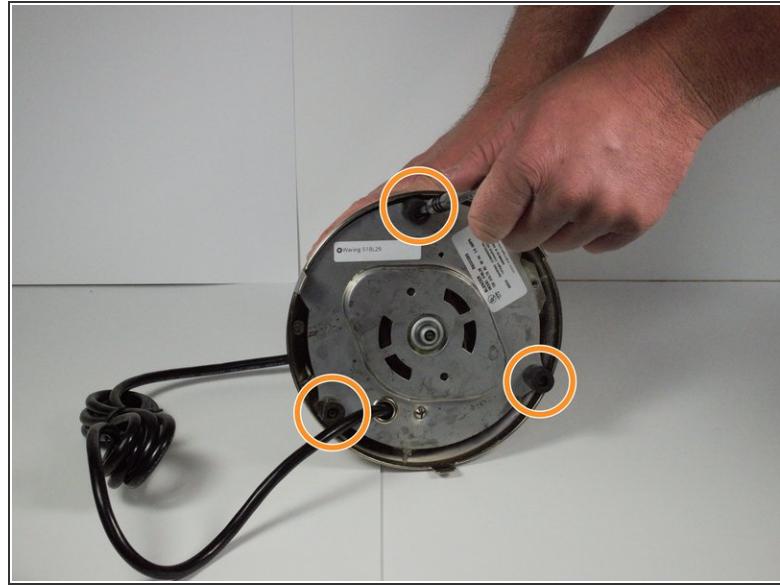

- Turn the blender on its side so the bottom panel is facing you.
- Unscrew the 22mm Phillips #1 screw on the indent of the panel.
- Unscrew the 3 screws in the rubber holes.

Step 2



- Remove the bottom panel.

Step 3 — Drive Coupling



- Place the screwdriver in the head of the middle flat-head screw.

Step 4



- Unscrew this screw while holding the coupling with your other hand and not allowing it to rotate.

⚠ Keep in mind that this screw is reverse threaded so you will have to unscrew it "righty loosey".

Step 5



- Once the coupling mechanism has been loosened all the way, gently pull it off the top of the blender.

To reassemble your device, follow these instructions in reverse order.