 




Waring Pro SB30 Back Panel Replacement

Remove the back panel of the Waring Pro SB30 burner is a prerequisite for most guides.

Written By: Sun Fai Lau

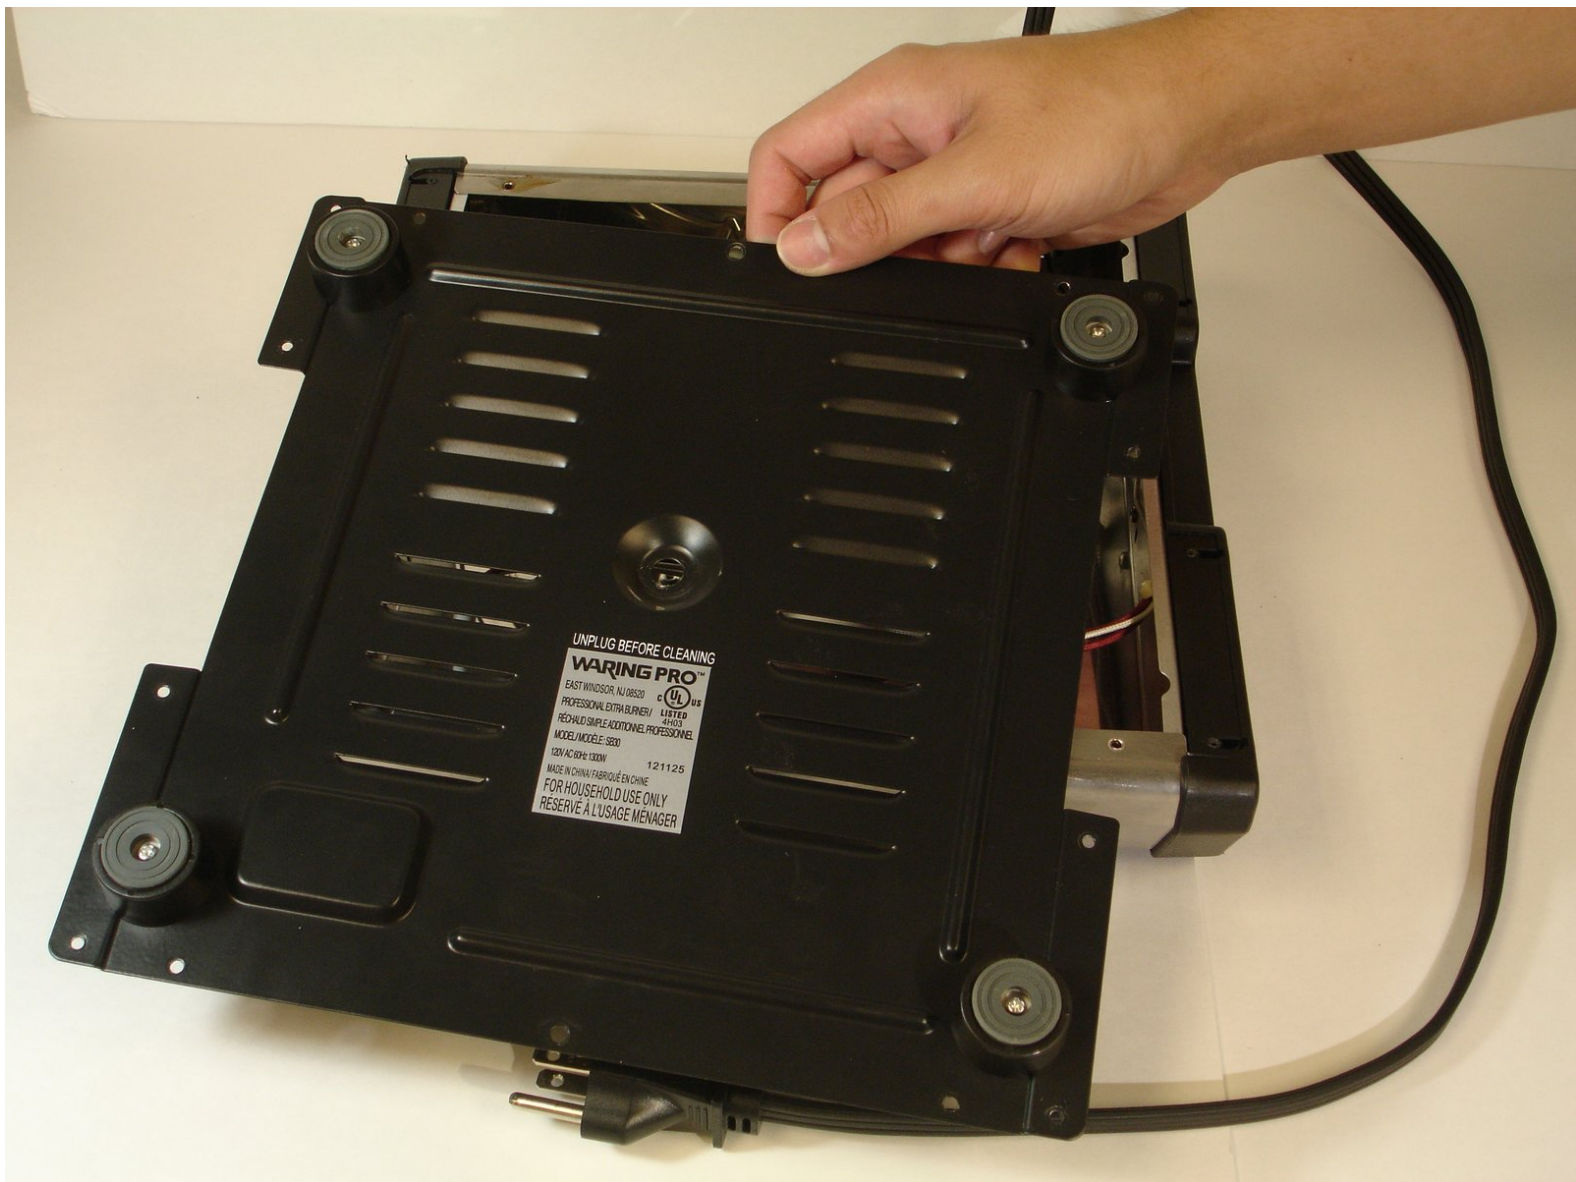

INTRODUCTION

The back panel located on the underside of the burner and is held in place by multiple screws. Take care when removing the screws as it may require a good amount of force if the panel has never been removed.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Smart Wrench](#) (1)
-

Step 1 — Back Panel



 
- Remove the screws on the back panel with the #1 Phillips screwdriver bit.
- The screws in the rubber legs of the burner do not need to be removed.
- ⓘ If the back panel has never been opened before, the screws may be more difficult to unscrew.

Step 2



- Using a wrench, remove the bolt from the center of the back panel.

Step 3

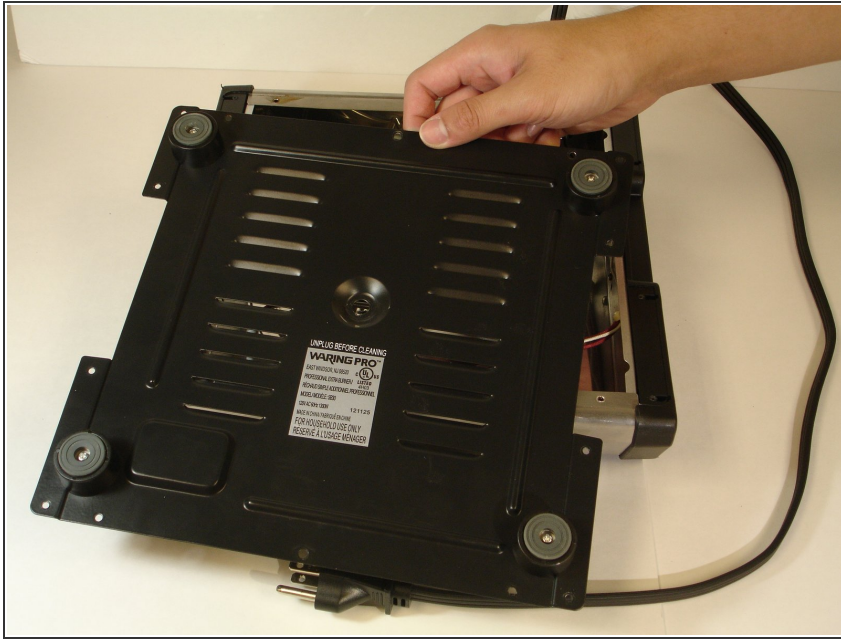

- The back panel can now be easily lifted off.

To reassemble your device, follow these instructions in reverse order.