




Wen 2307 Motor Replacement

This guide explains how to replace the motor in the Wen 2307 rotary tool.

Written By: Joshua Bowery

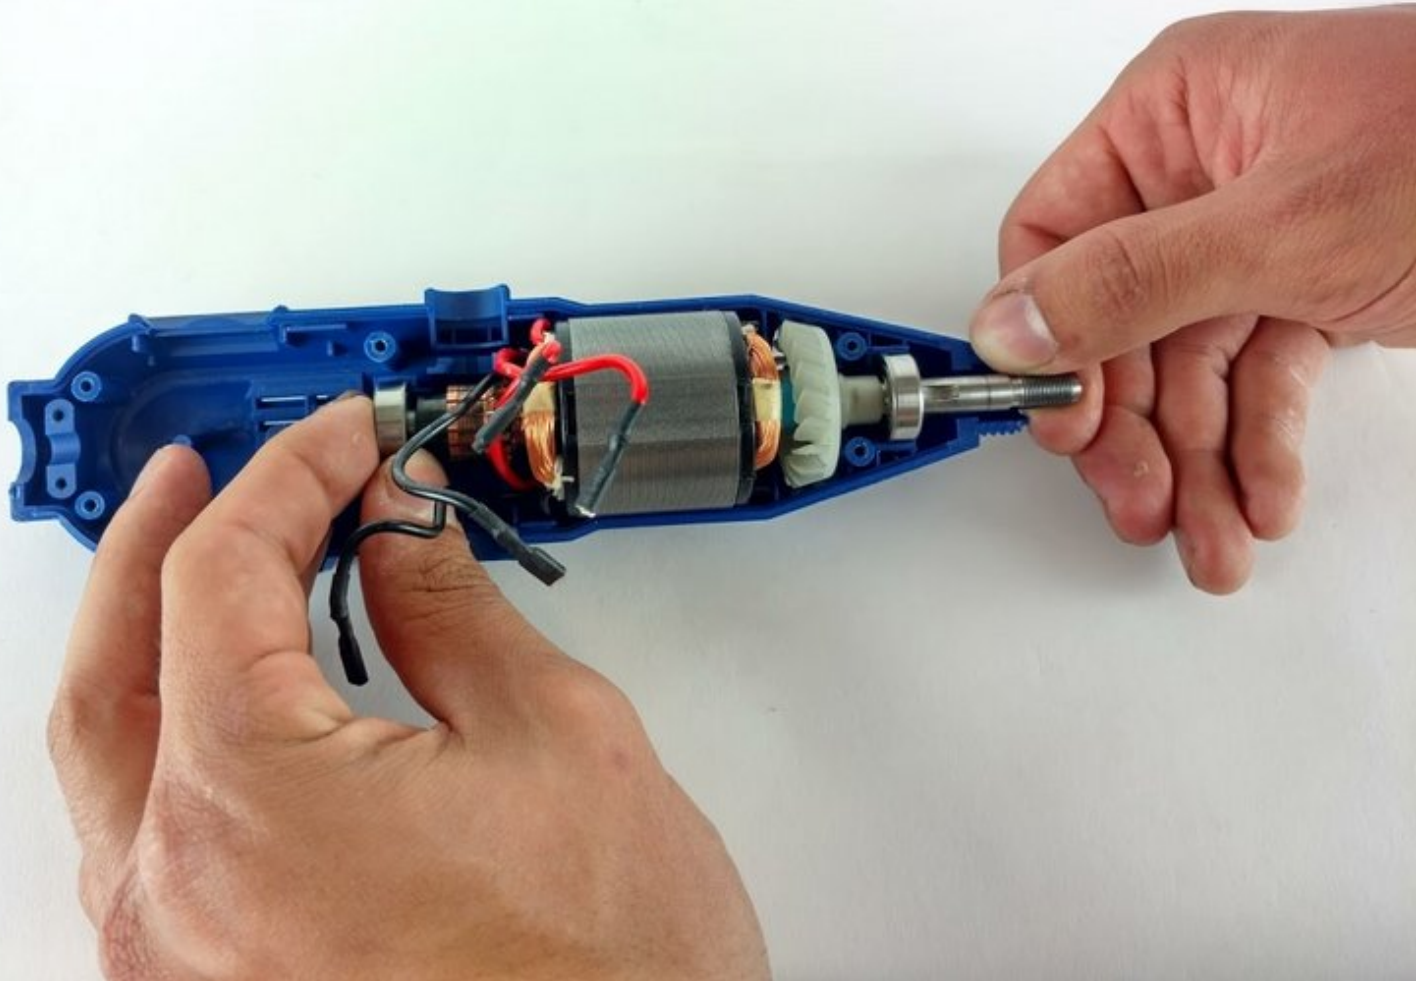

INTRODUCTION

If the device doesn't rotate, the motor could be bad. Use this guide to replace it.



TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Front Panel



- Unscrew the locking sleeve.

Step 2



- Remove the hanging clip.

Step 3




- Unscrew the six 8mm PH2 screws.

Step 4




- While pressing the spindle lock button, unscrew the collet nut and remove it along with the brass collet.

Step 5

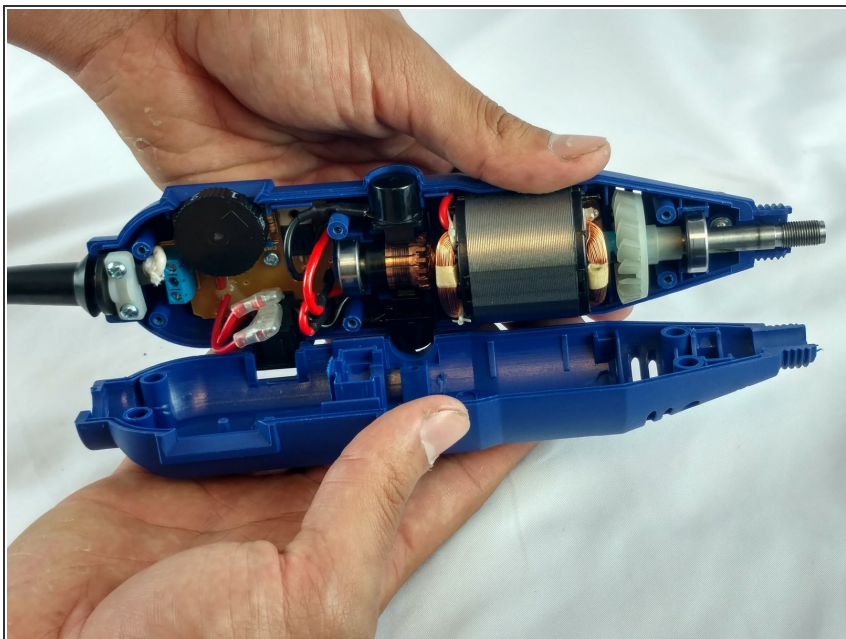


- To remove the front panel, pry the device apart while holding the device with the other hand.
- ⓘ The front panel should come out easily.

Step 6 — Speed Adjustment Assembly

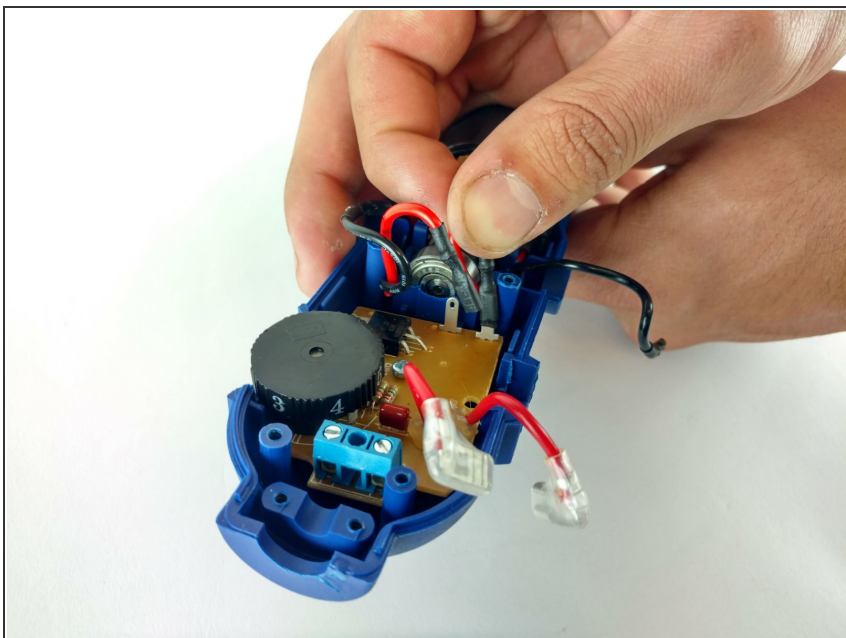


- Remove the connected wiring from the circuit board.

Step 7

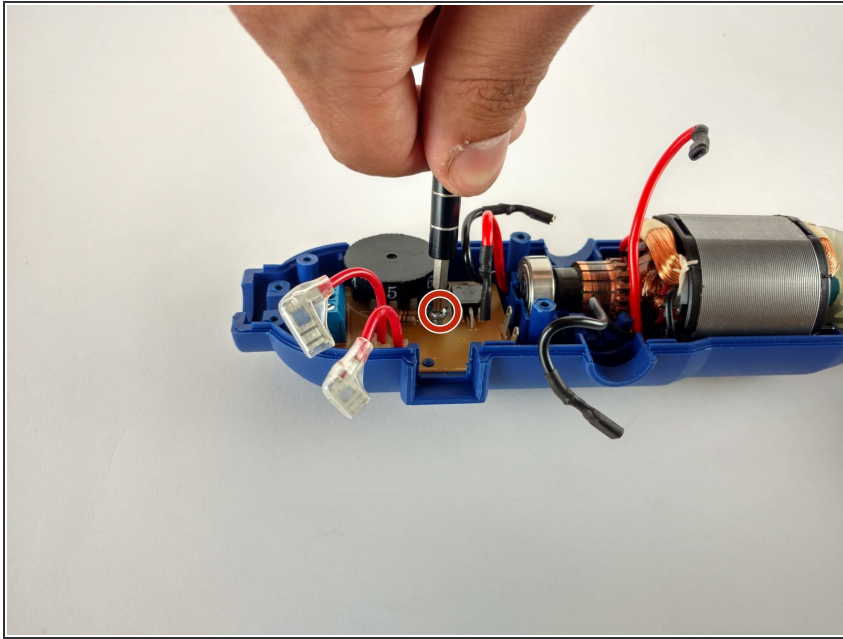


- Remove the single 4mm screw retaining the circuit board.

Step 8

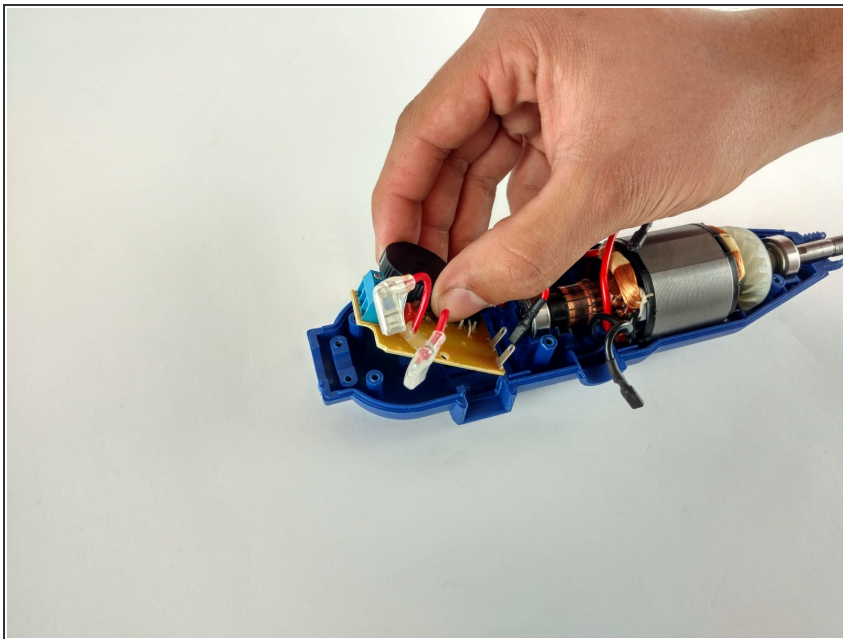

- Gently pry the circuit board from the back piece.

Step 9 — Motor

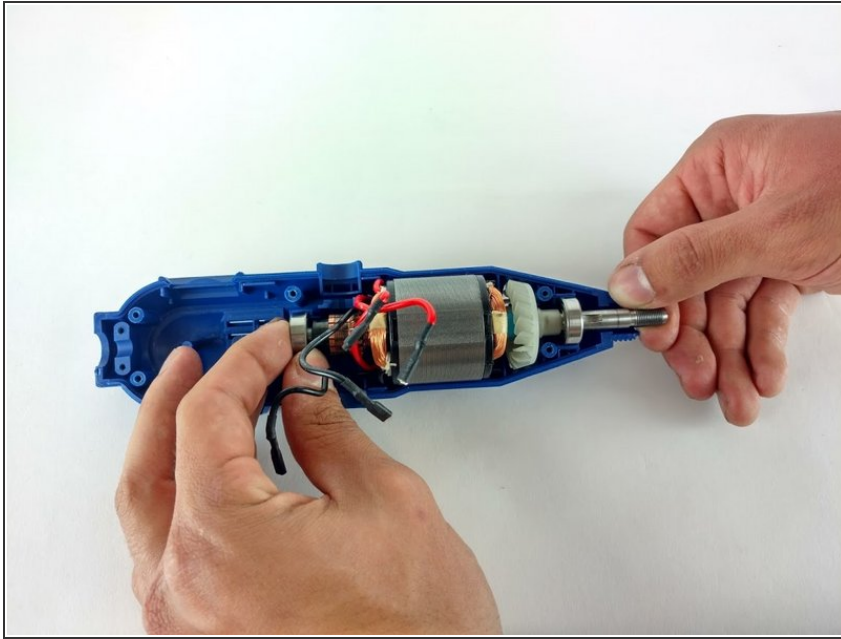

- Gently pull motor assembly out of the panel.

Step 10



- ⓘ Motor separates into two pieces.

To reassemble your device, follow these instructions in reverse order.