



# Westcott iPoint Evolution Outer Casing Replacement

Remove the outer casing of your Westcott iPoint Evolution pencil sharpener.

Written By: Lilly



## INTRODUCTION

In this guide, you will learn how to remove the outer casing of the Westcott iPoint Evolution pencil sharpener. Use this guide to replace the casing or to access the sharpener's internal components.

### TOOLS:

- Essential Electronics Toolkit (1)

## Step 1 — Outer Casing




- Step 1: Have the back of the pencil sharpener facing you so that you can locate the power source.

## Step 2



- Step 2: Grab the end of the plug and pull it out gently

## Step 3

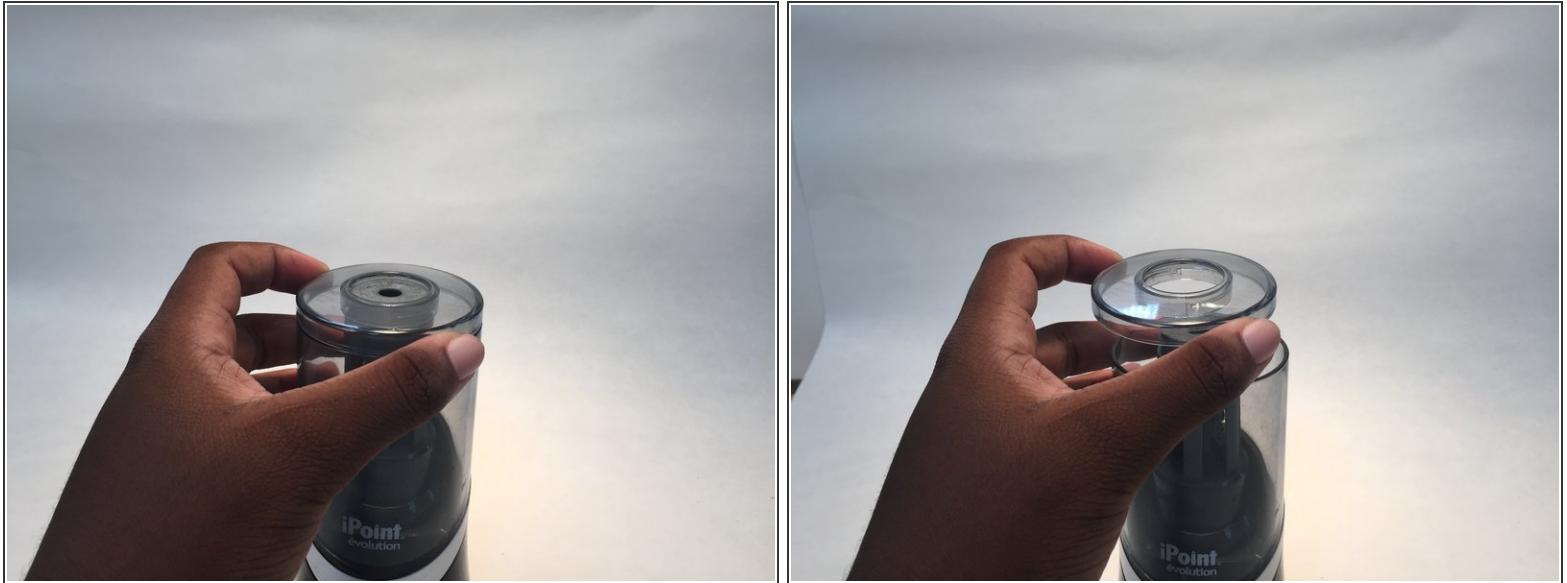

- Step 3: There are three parts of the sharpener. Start off by grabbing the very top of the sharpener and twist it to the right and lift up to remove it

## Step 4



- Step 4: Grab the center of the sharpener and lift up to remove it

## Step 5



- Step 5: Remove the small ring that is around the sharpener. (Below the center of the sharpener that you just removed)

## Step 6



- Step 6: Flip the pencil sharpener upside down. Once upside down you will see four screws located at the bottom of the pencil sharpener.

## Step 7



- Step 7: Take a screwdriver and begin to unscrew all of the screws on the bottom.

## Step 8



- Step 8: After all the screws are removed you will be able to cleanly take off the bottom of the sharpener.

## Step 9



- Step 9: Carefully lift the lid off the sharpener.

## Step 10



- Step 10: Now that you have successfully have taken the sharpener apart. Continue on to your needed repairs. To reassemble follow these steps in reverse order.

To reassemble your device, follow these instructions in reverse order.