



Wexford CT-166TF Settings Knob Replacement

A quick replacement for a damaged settings knob.

Written By: Dennis Thompson



 **TOOLS:**

- [Spudger \(1\)](#)

Step 1 — Settings Knob



- Locate the knob at the top of the fan.

Step 2



- Remove the knob by gripping it and pulling straight up. Use a spudger if it is difficult to grip.
- When reassembling, be sure to align the bottom of the new knob and the turning mechanism in the fan before pushing down.

To reassemble your device, follow these instructions in reverse order.