


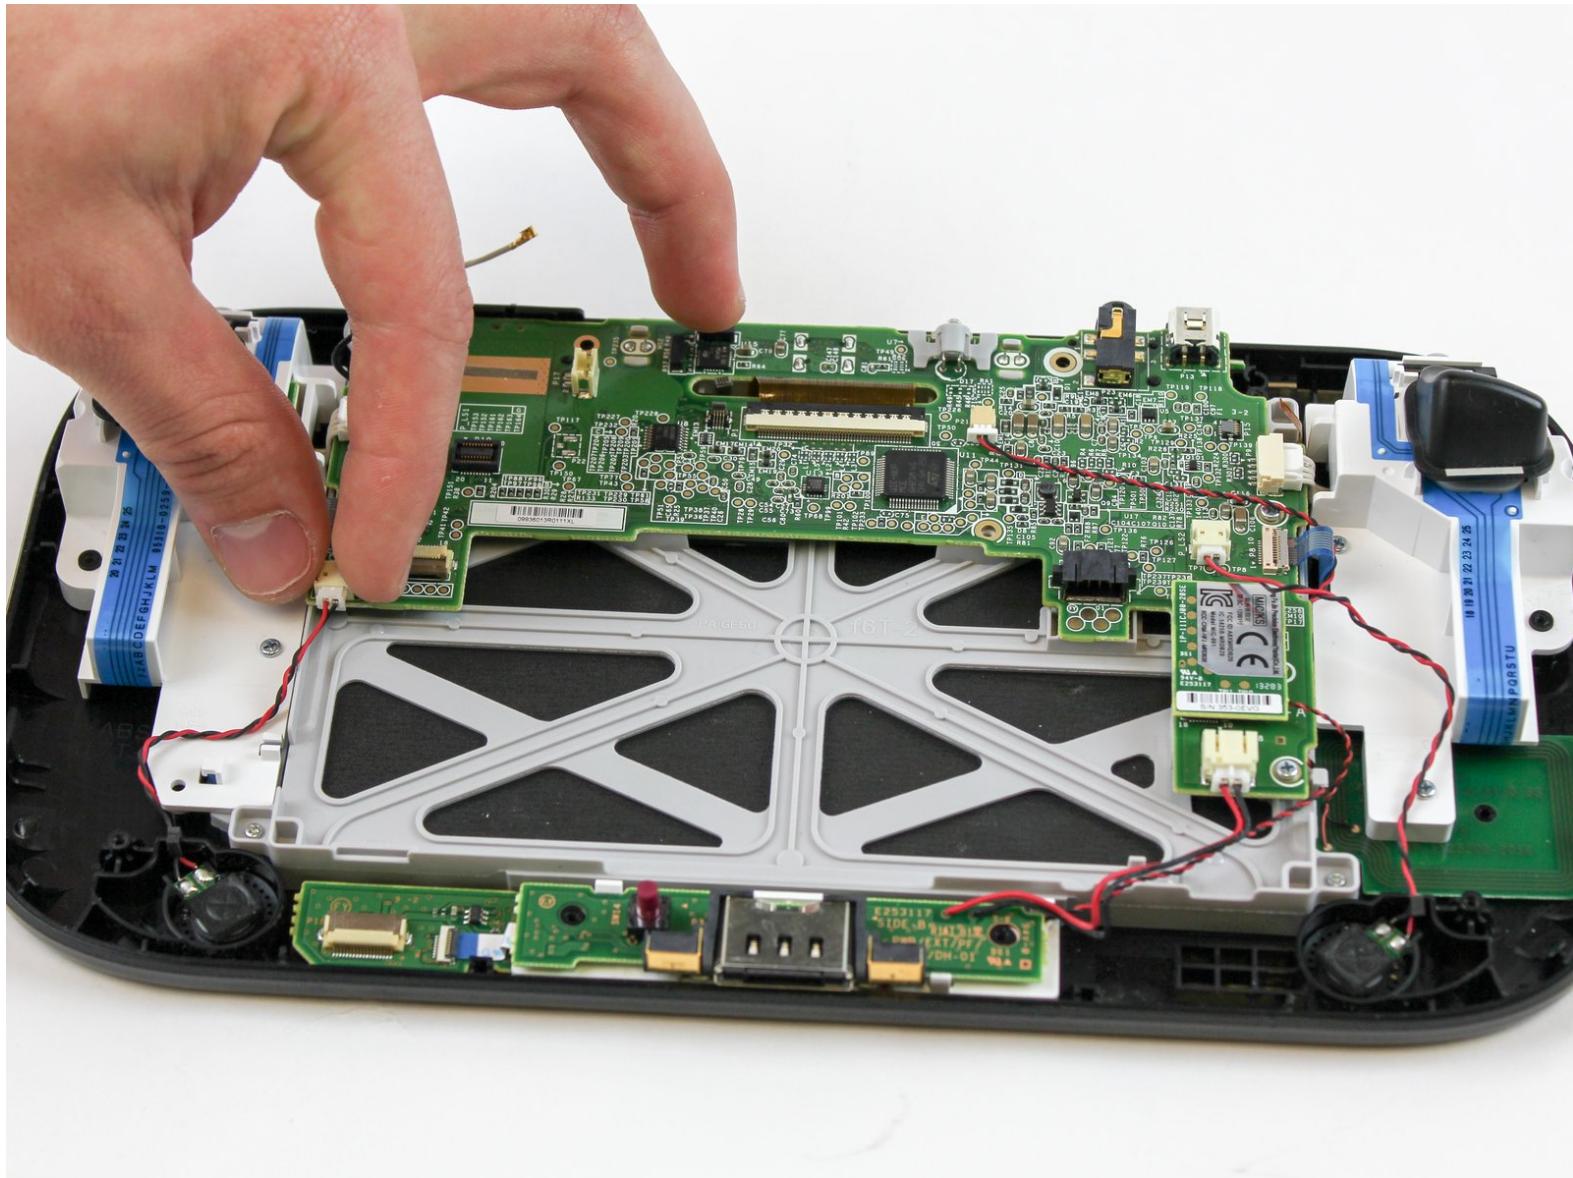

Wii U GamePad Speakers Replacement

Replace the speakers in order to get better sound in your Nintendo Wii U GamePad.

Written By: Valentina Cerruty



INTRODUCTION

This guide will help you to replace the speakers if you are experiencing audio issues.

TOOLS:

- Phillips #0 Screwdriver (1)
- Y1 Tri-point Screwdriver (1)
- Tweezers (1)

PARTS:

- [Wii U GamePad Speaker Assembly \(1\)](#)

Step 1 — Battery



- Place Gamepad face down and remove the two 4.7 mm screws with a Phillips size #00 screwdriver.

Step 2



- Lift and remove the battery plate.

Step 3



- With your finger, press down and pull back on the battery connector plug.
- Remove the battery from the battery case.


Step 4 — Outer Case



- Remove 10 9mm screws with Tri-Wing size Y1 screwdriver around the outer case.
- Lift up on the back of case.



⚠️ Lift gently because the rumble motor in the back of the case is still connected by a cable to the motherboard.

Step 5

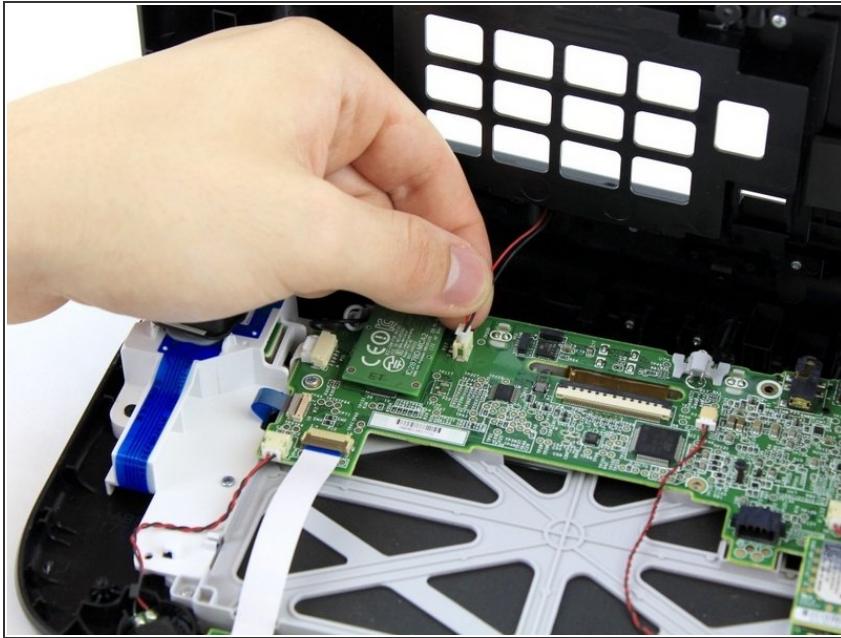


- Unplug outer case rumble motor connector from the motherboard with your fingers.

Step 6 — Speakers

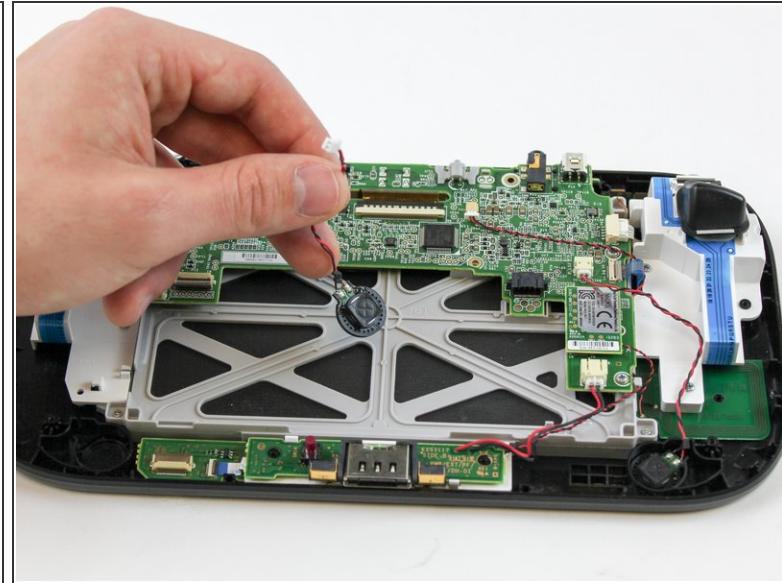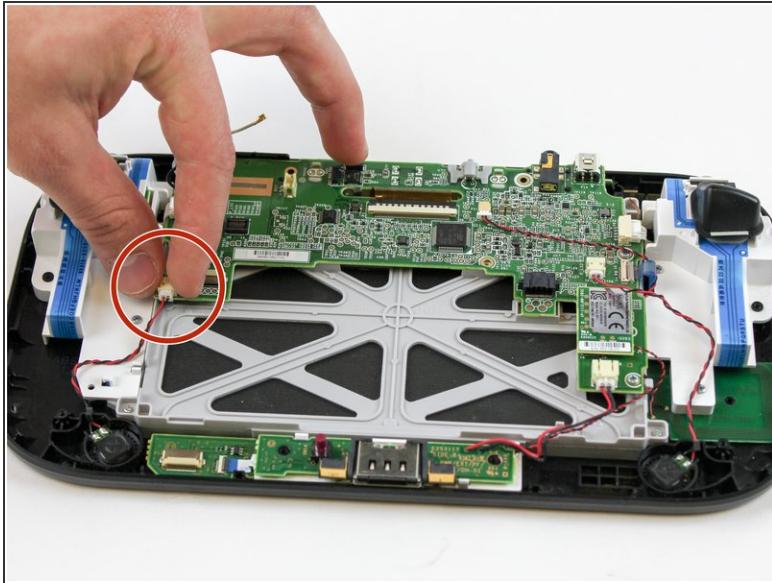

- With your fingers, unplug the left speaker cable from the motherboard.

Step 7

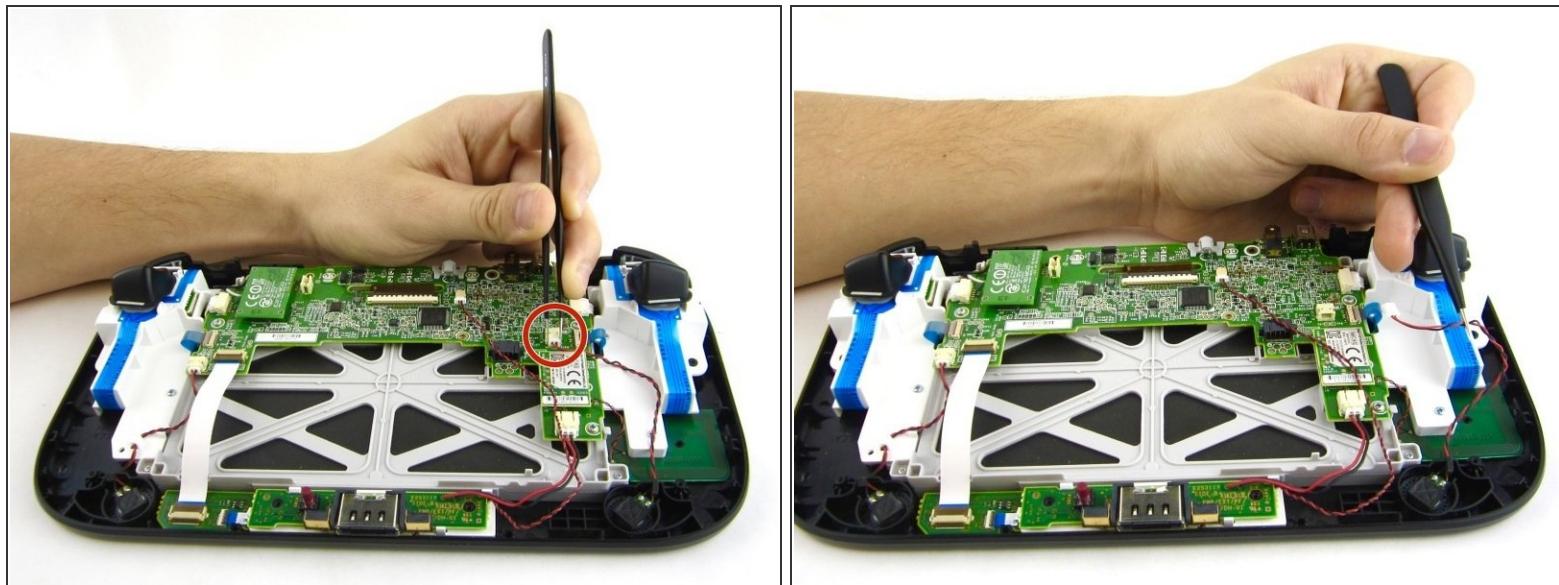

- Remove the right speaker cable that's connected to the motherboard with the tweezers.

To reassemble your device, follow these instructions in reverse order.