




Wintec Filemate Clear 7" Front Screen Replacement

A quick and simple guide to removing and then replacing the front screen of a Wintec Filemate Clear 7".

Written By: Nicholas Ferraro

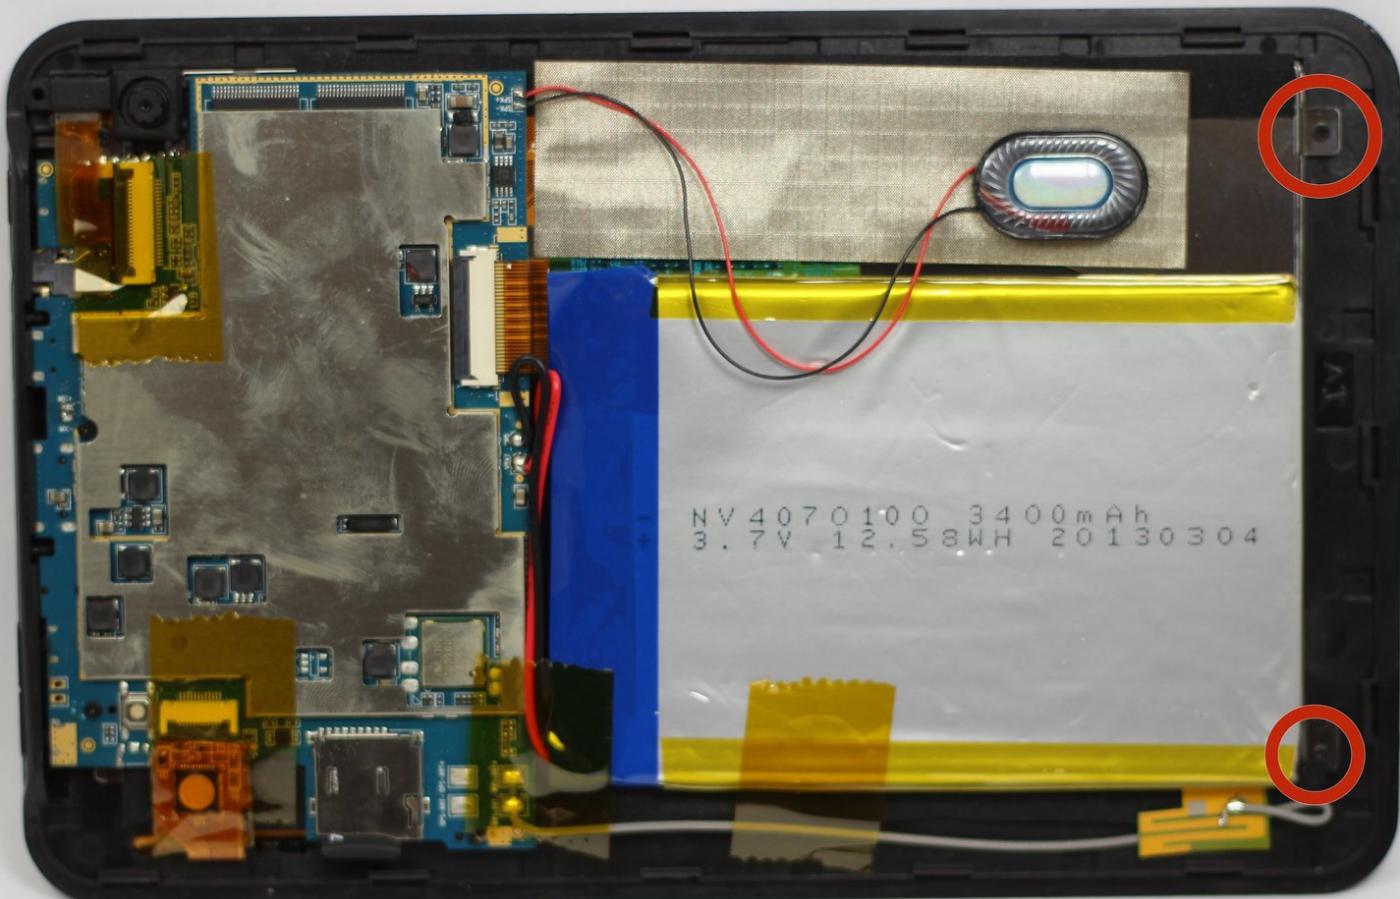

INTRODUCTION

To complete this guide, you will need to take apart the tablet almost completely.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — Remove the Backplate



- Locate the four corners of the backplate.

Step 2

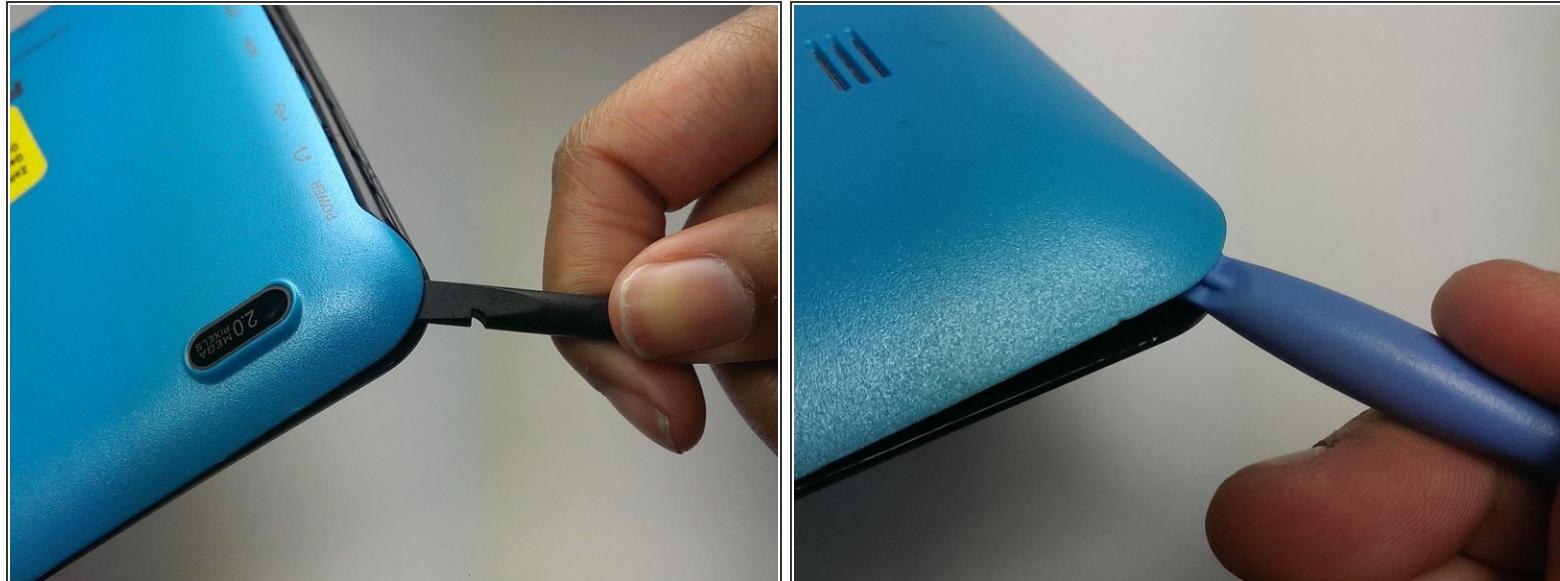


- Pry off the backplate by inserting a spudger or plastic opening tool into each corner and popping them open.

Step 3 — Remove the Battery



- Un-stick the battery from the motherboard assembly with the plastic opening tool.

Step 4

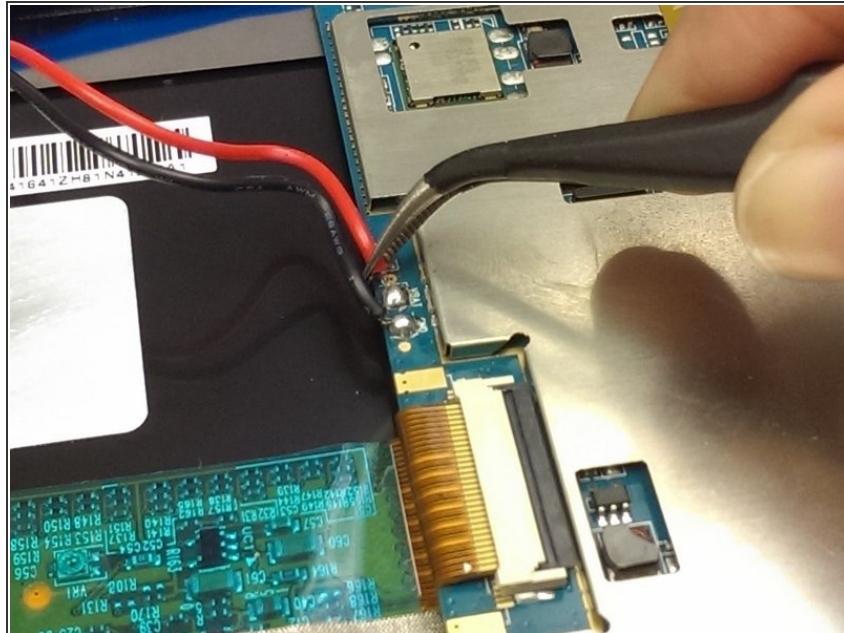

- Desolder the battery wires from the motherboard.


i The tweezers pictured point to the two solder joints.

Step 5




- Fully remove the battery from the device.

Step 6 — Motherboard

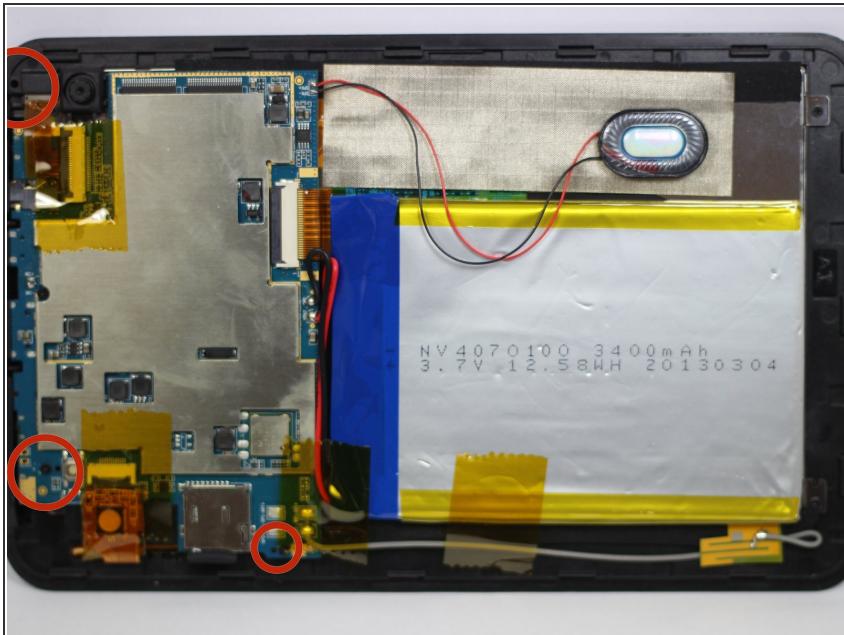


- Locate each of the motherboard's 4 mm screws.

Step 7 — Unscrewing Everything

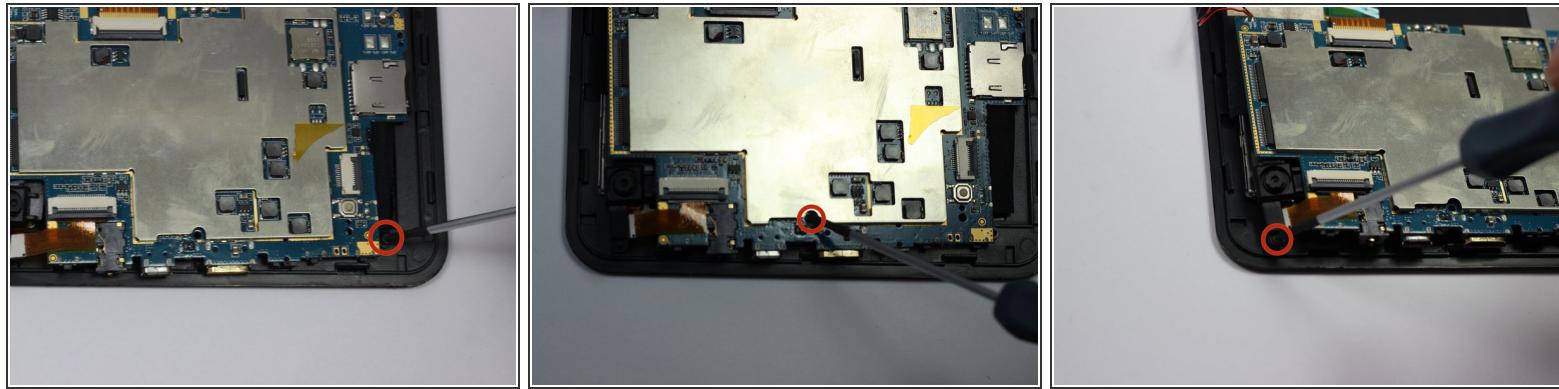

- Remove each of the four 4 mm screws from the motherboard pictured to the left.
- Use a Phillips #00 precision screwdriver.

Step 8 — Detach the Motherboard

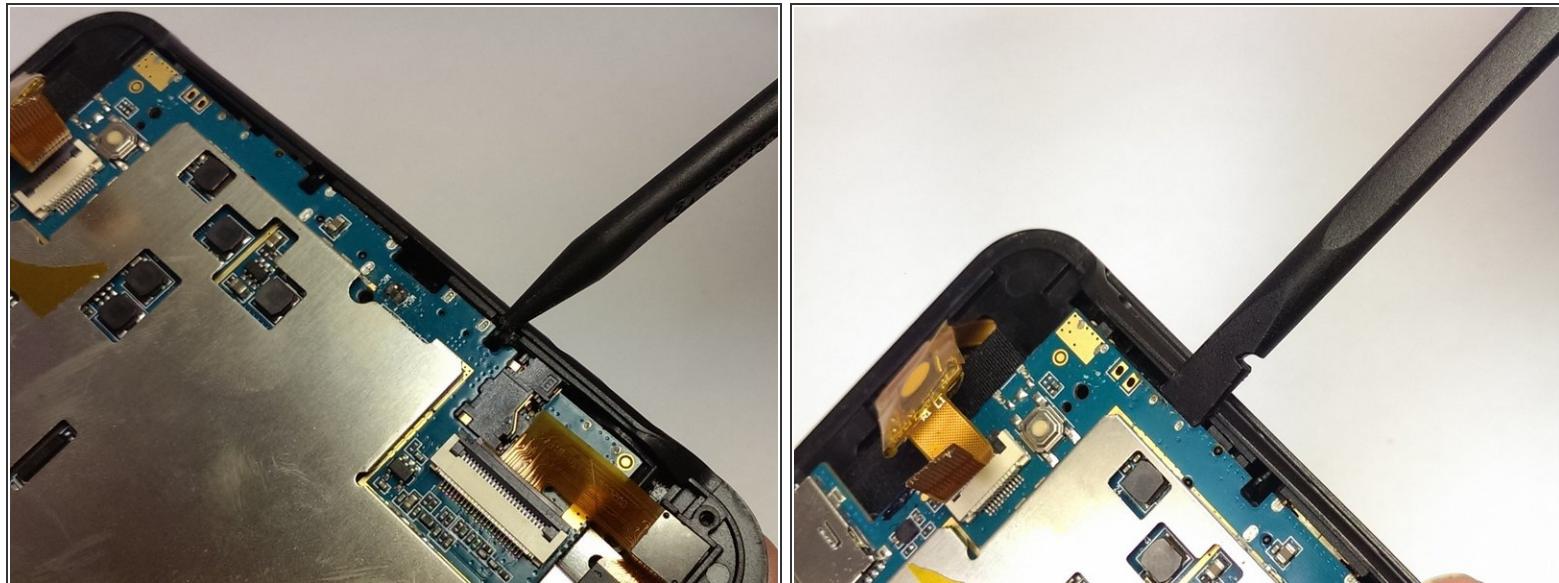


- Use the spudger to pry the instrument array from its plastic housing.

Step 9




- Slowly slide the spudger underneath the adhesive tape to un-stick it.
- Be careful not to harm the array of wires leading to this tape.

Step 10

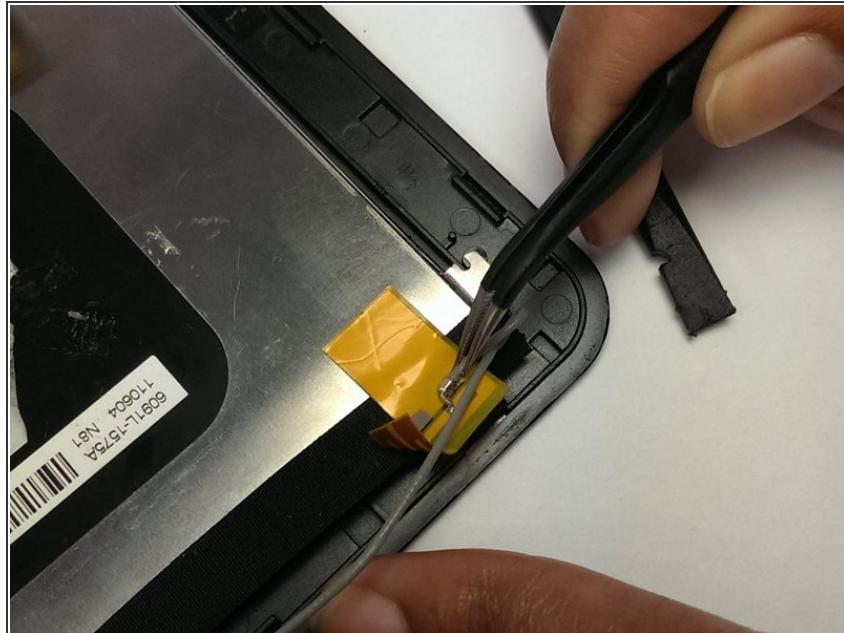


- De-tatch the motherboard output wires from the screen using the tweezers.

Step 11 — Front Screen

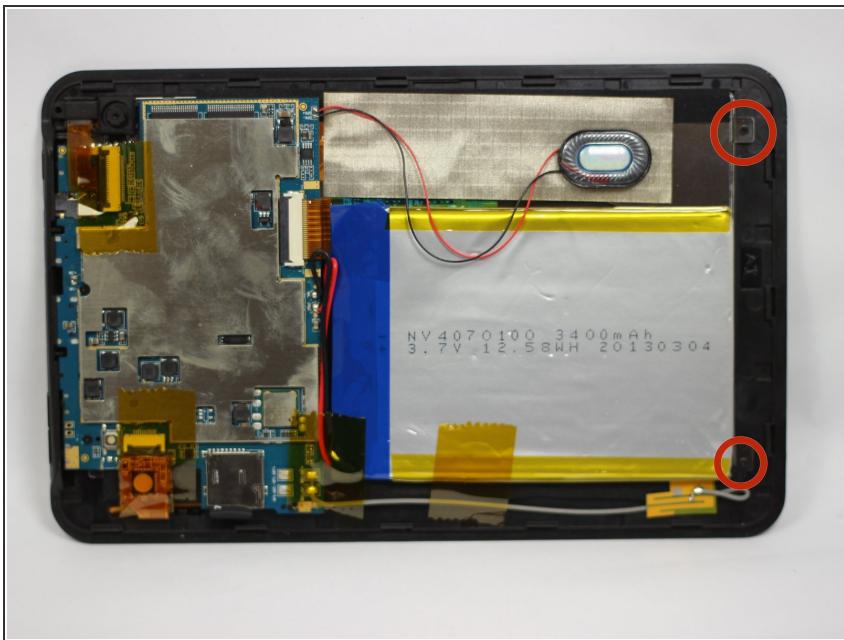

- Locate the front screen's screws.

Step 12 — Remove the Extra Screws

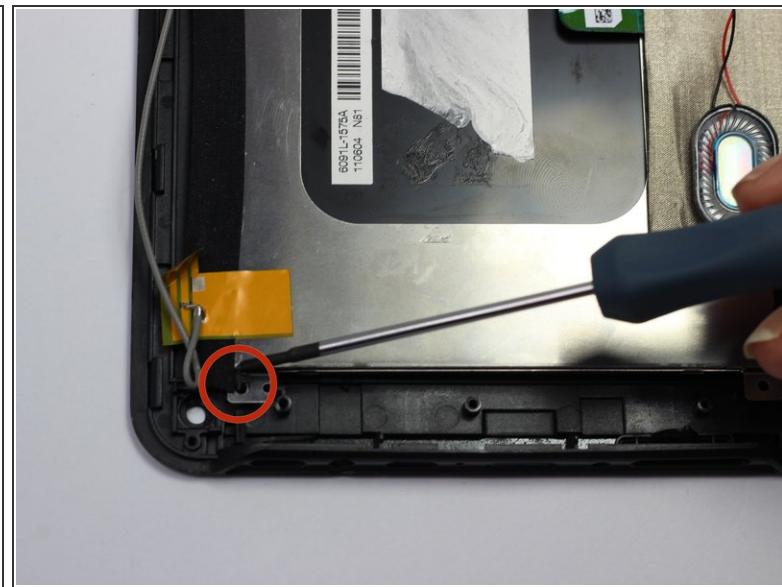

- There are two additional 4 mm screws holding the front screen.
- Use the Phillips #00 screwdriver to remove the screws (pictured to the left).

Step 13



- Fully remove the front screen from its plastic cover.

To reassemble your device, follow these instructions in reverse order.