



# Wintec Filemate Clear 7" SD Card Replacement

This guide will take you through the process of removing and replacing the removable hard drive of a Wintec Filemate Clear 7".

Written By: Nicholas Ferraro



# INTRODUCTION

This guide is short and sweet.

## Step 1 — Pop out the Hard Drive




- Locate the hole on the bottom left hand side of the backplate.

## Step 2



- Press into the hole until you feel or hear a clicking feeling or sound.

## Step 3

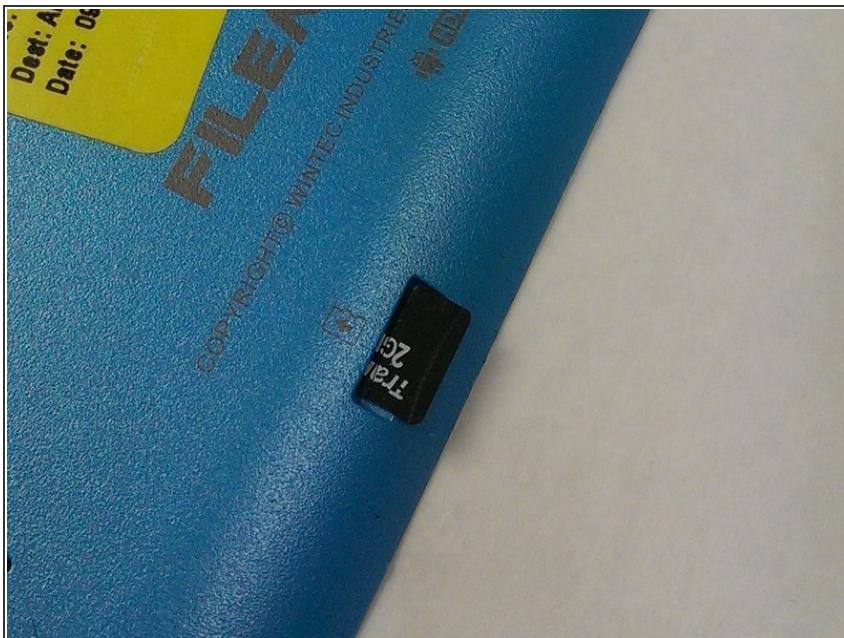

- ⓘ The SD card should be protruding from the slot. If it does not pop out on its own, you may need to use tweezers to remove the drive.
- Remove it from the slot.

To reassemble your device, follow these instructions in reverse order.