



Wireless Bluetooth Water Dancing Speakers (SBT626) from Sharper Image Teardown

Teardown and Repairability of Sharper Image Wireless Bluetooth Water Dancing Speakers

Written By: Kyle Trambley



 **TOOLS:**

- [Pro Tech Toolkit \(1\)](#)

Step 1 — Wireless Bluetooth Water Dancing Speakers (SBT626) from Sharper Image Teardown




- Teardown of Water Dancing Speaker

Step 2




- Remove 4 screws from rear of speaker
- Peel back the rear half of the shell
- Remove the Water/Pump Chamber

Step 3

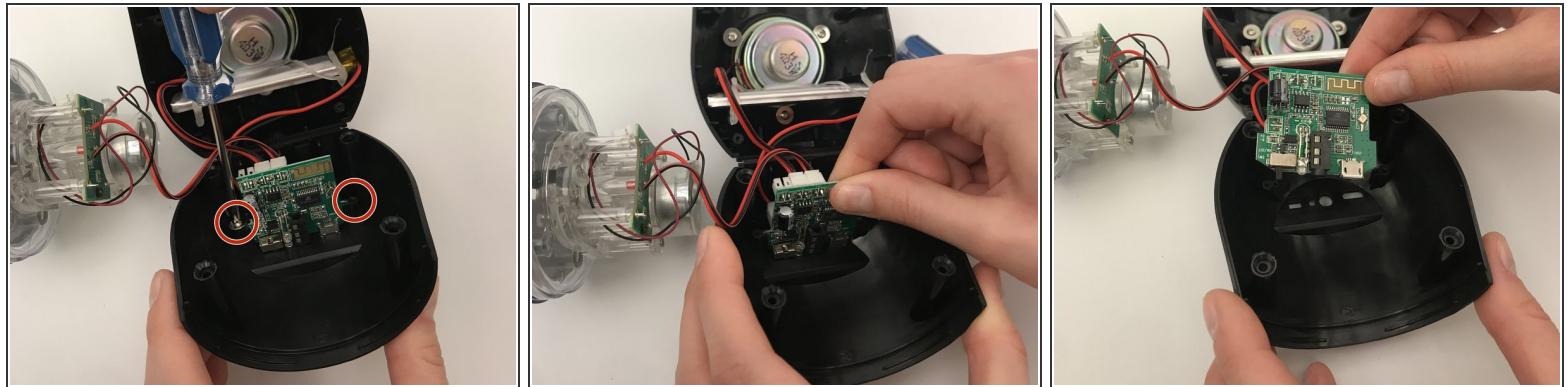

- Remove 2 screws that hold the logic circuit in place
- Carefully pull the logic board up, out of the plastic slot



Step 4

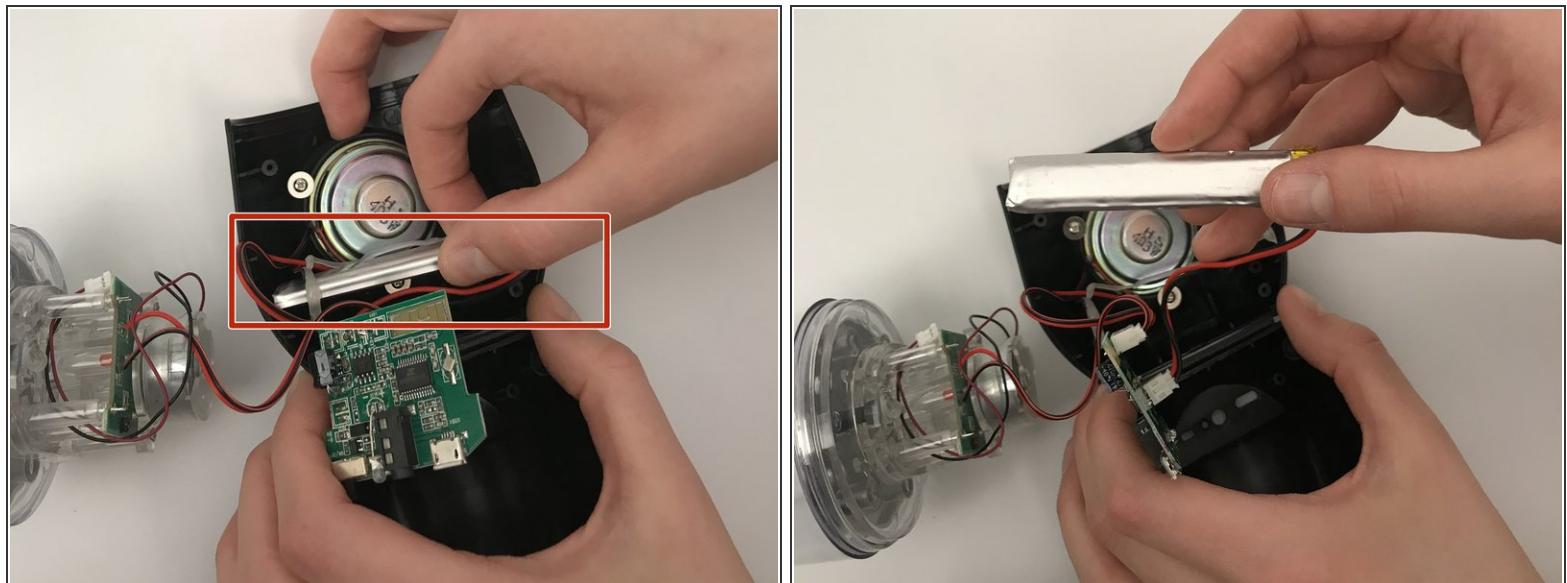

- Carefully pull the Lithium Ion Battery out of the plastic slot



(i) If glue is holding battery in place, slowly peel the glue off the battery.

Step 5

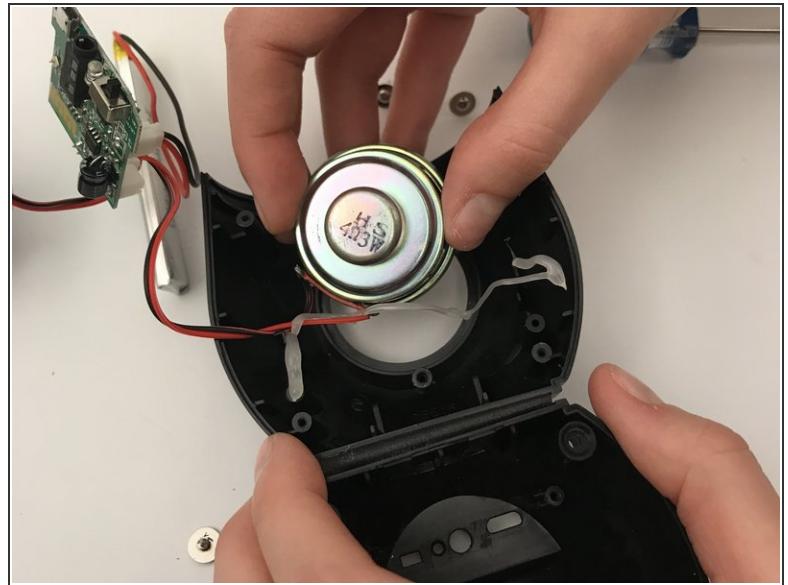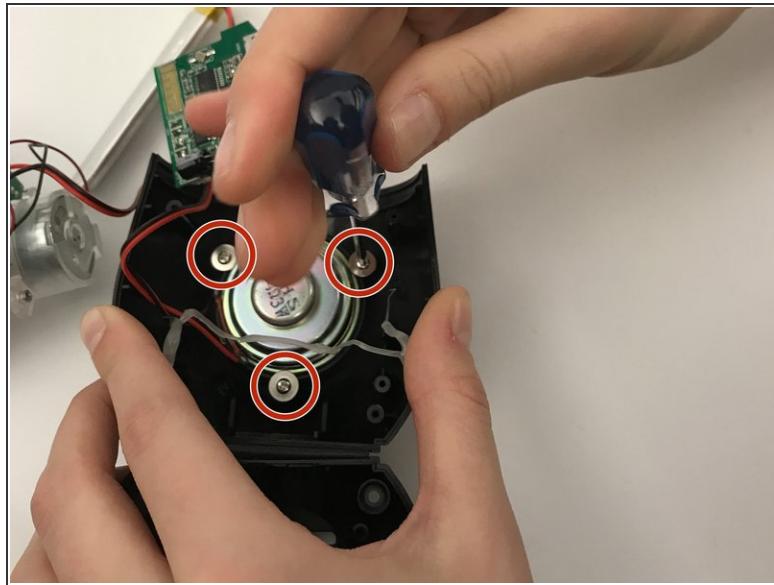


- Remove the 3 screws holding the speaker
- Remove the speaker from the plastic shell

Step 6

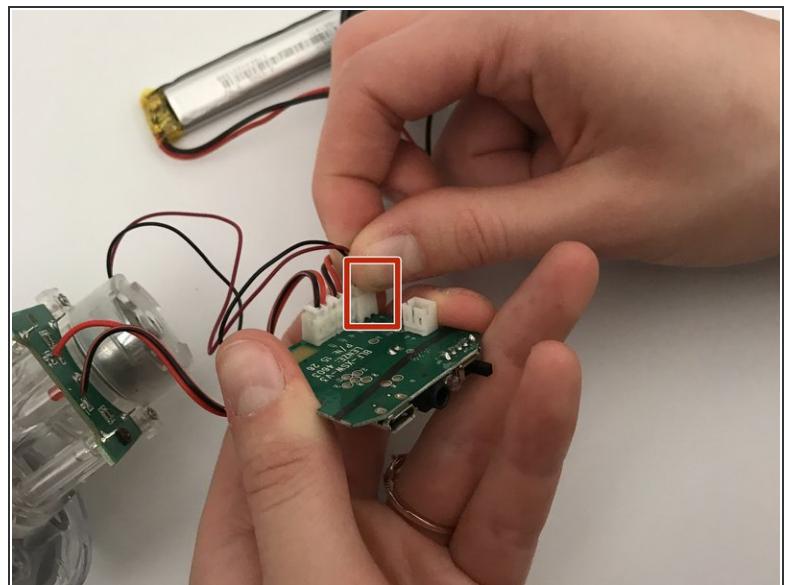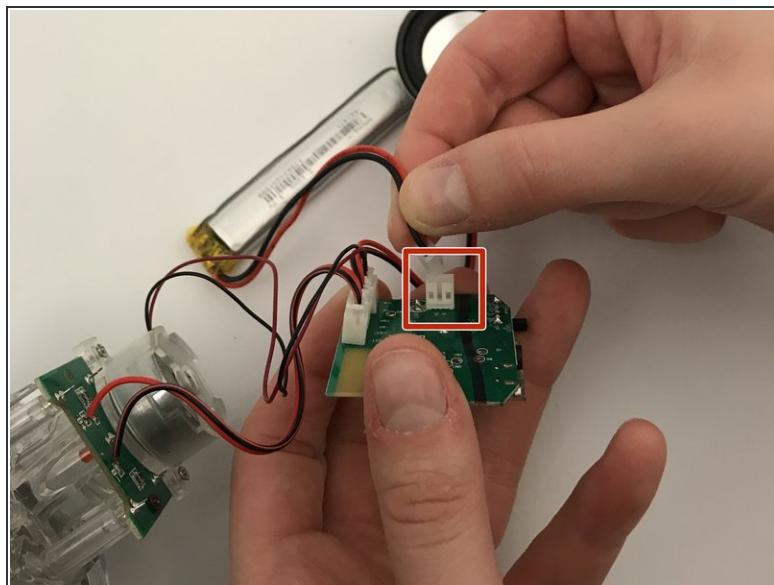


- Disconnect the battery connector from the logic board
- Disconnect the motor connector from the logic board

Step 7

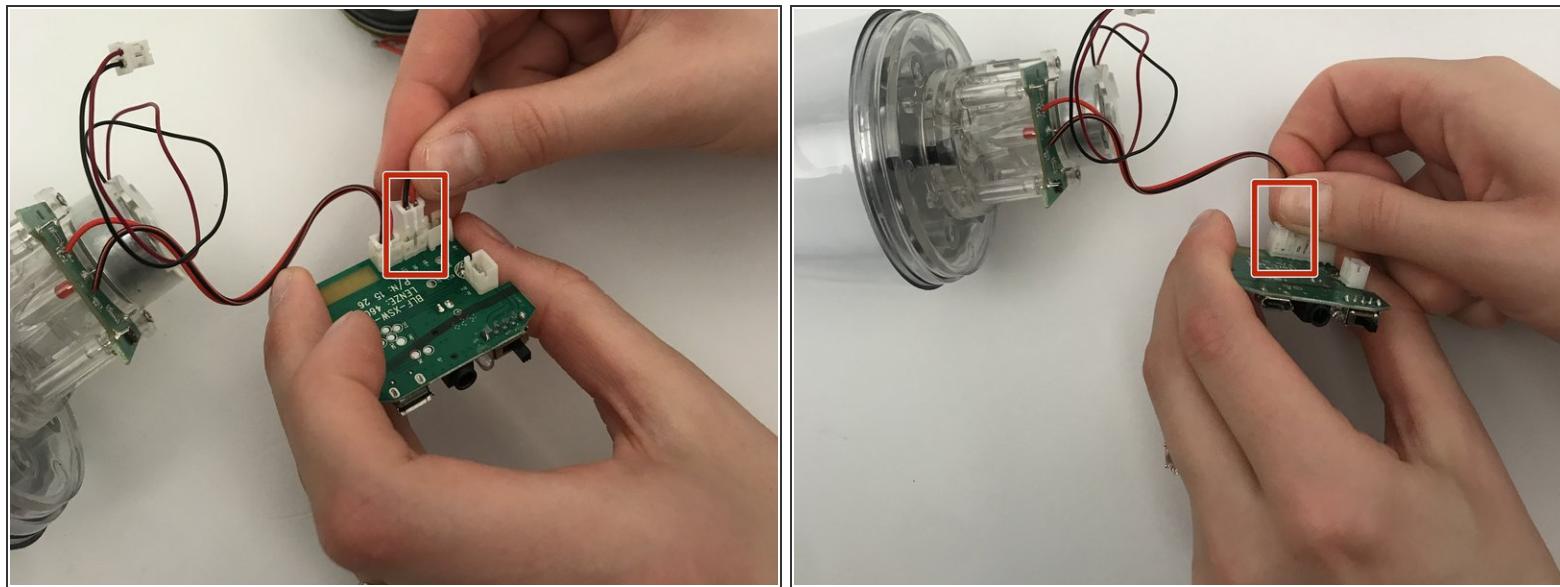

- Disconnect the speaker connector from the logic board
- Disconnect the LED connector from the logic board

Step 8

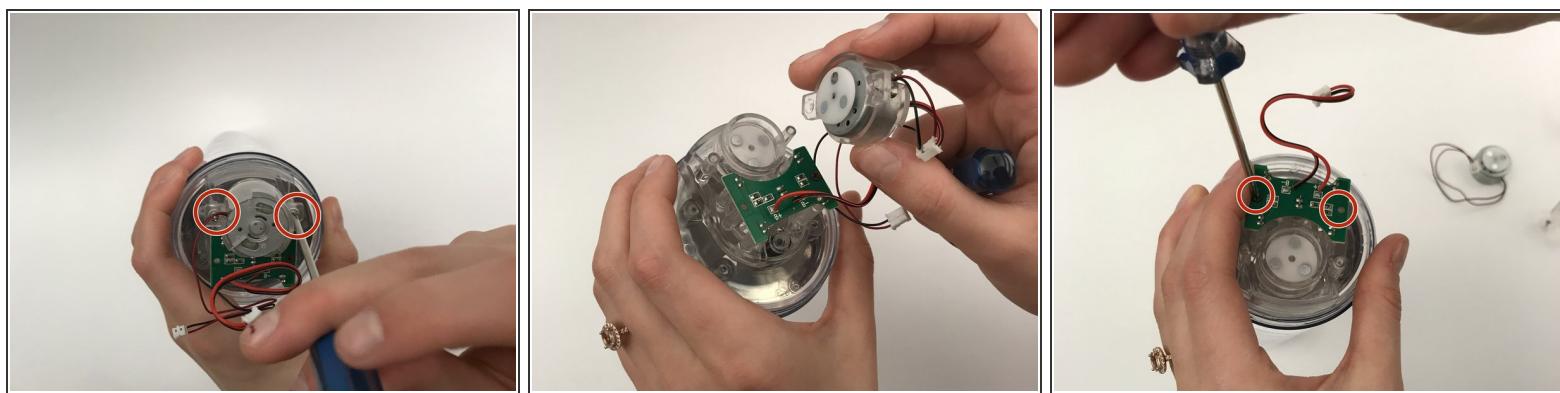

- Remove the 2 screws holding the motor mount on the water/pump chamber
- Remove the motor mount from the water/pump chamber
- Remove the 2 screws holding the LED board on the water/pump.
- Remove the LED board from the water/pump

Step 9



- Teardown Finished
- For Reassembly: Follow Guide in Reverse