



# Wolf Gourmet WGTR102S Outer Shell Replacement

Gives instructions for removing the outer shell of a Wolf Gourmet WGTR102S.

Written By: Ryan Funchess



## INTRODUCTION

If you need to access the inside of your toaster to fix problems, start by removing the outer shell with this guide.

### **TOOLS:**


- [Y1 Tri-point Screwdriver](#) (1)
- [Metal Spudger Set](#) (1)

## Step 1 — Outer Shell



- Using a wedge, pry off the rubber pieces on the bottom of each foot of the toaster.

## Step 2

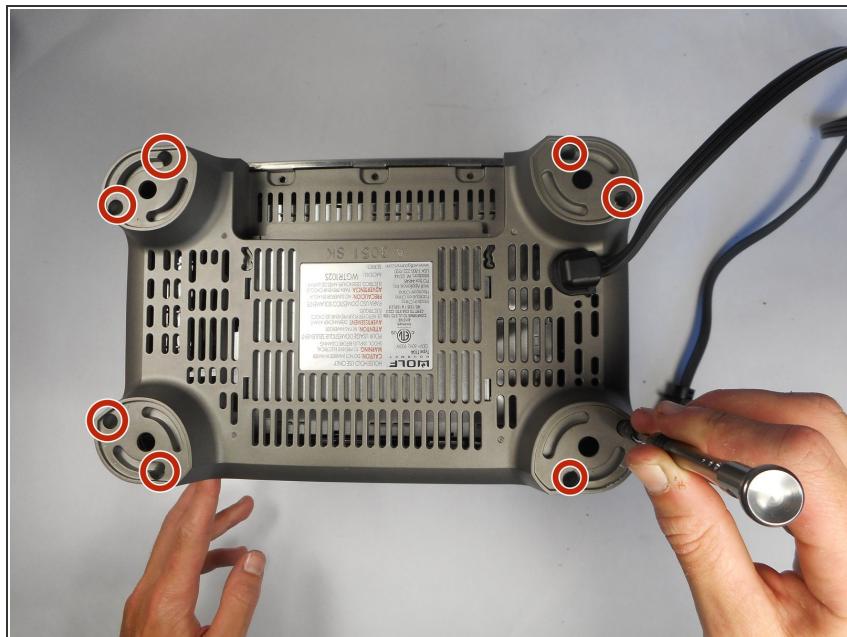

- Remove the eight 8mm screws on each toaster foot using a Tri-point Y1 screwdriver.

## Step 3




- Remove the crumb collector located on the bottom of the toaster.

## Step 4



- Remove the three 8mm screws using the Tri-point Y1 screwdriver.

## Step 5

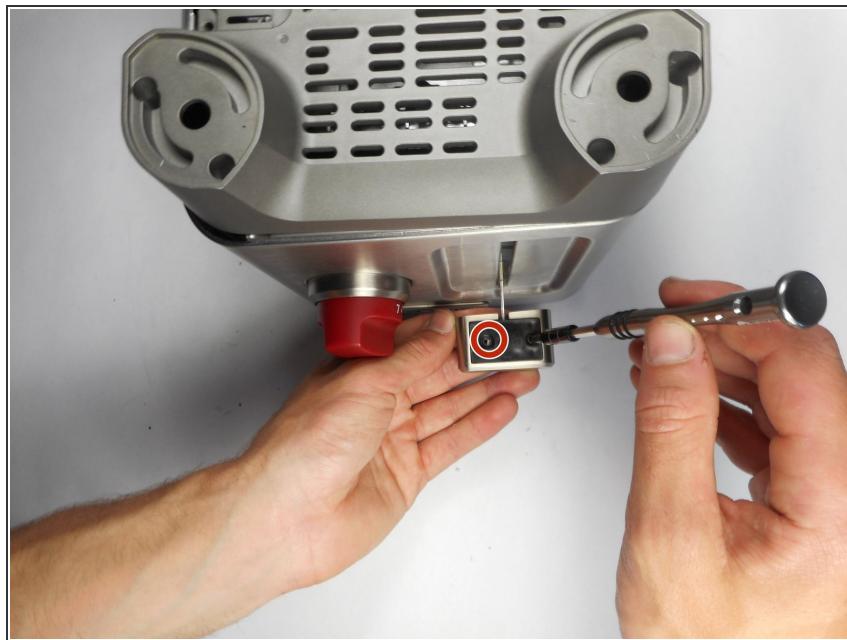

- Remove the two 8mm screws on the bottom of the slide lever using a Tri-point Y1 screwdriver.
- Once the screws are removed, detach the black plastic cover on the bottom of the slide lever.

## Step 6



- Remove the final 8mm screw in the slide lever.
- The lever can now pull away from the entire unit.



## Step 7



- Remove toaster's outer shell by lifting straight up.

**⚠** Slowly remove the outer shell. Disconnect ground wire before fully separating the shell and inner components.

## Step 8

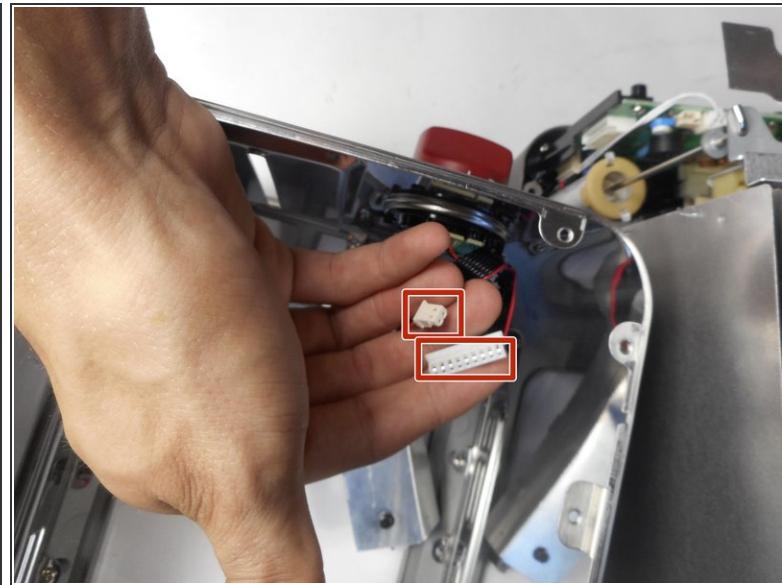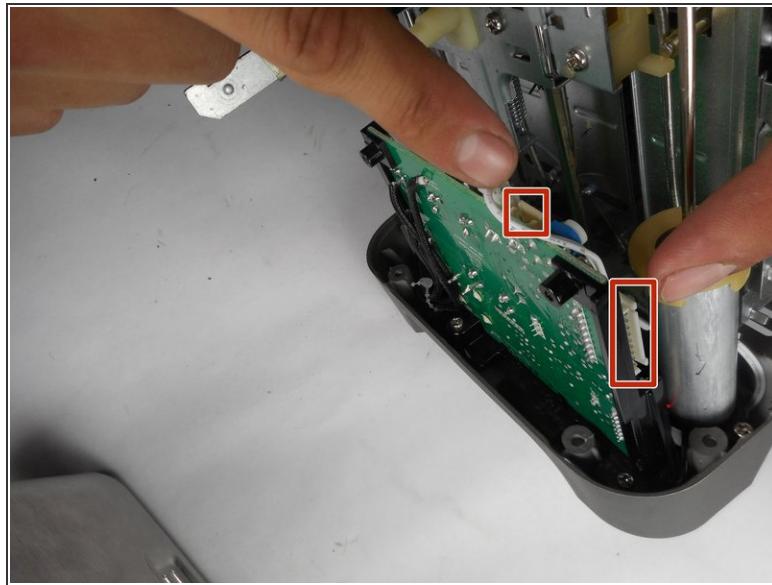

- Disconnect the wire cluster that connects the lights and circuit board by pulling apart the two plastic connectors.
- Remove the outer shell from the device.

To reassemble your device, follow these instructions in reverse order.