



Xbox One Elite Controller (Model 1698) Battery Replacement

A guide that helps you remove and replace the batteries of the Xbox One Elite Controller.

Written By: Cara Steinke



INTRODUCTION

If your Xbox One Elite Controller is not vibrating, your batteries may be low. Here are instructions to help you remove and replace the batteries of your controller.

TOOLS:

- Fingers (1)

PARTS:

- AA Batteries (2)

Step 1 — Battery



- Turn over the controller so that the buttons face down.
- ⚠ Be gentle when removing the cover so you do not break the small plastic tabs holding the cover to the controller.
- Remove the battery cover carefully by sliding the cover up in the direction of the arrow.

Step 2



- Remove the two batteries AA batteries by lifting them from one end and pulling them out.

To reassemble your device, follow these instructions in reverse order.