



# Xbox One Wireless Controller Buttons Replacement

Remove the buttons from the controller.

Written By: Garrett George



# INTRODUCTION

This guide will teach you how to remove the buttons.

## TOOLS:

- [T8 Torx Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Soldering Iron](#) (1)
- [Spudger](#) (1)

## PARTS:


- [Xbox One Controller Action Button Gasket](#) (1)
- [Xbox One Controller Action Button Covers](#) (1)

## Step 1 — Battery Pack



- Remove the battery pack cover.
- Remove batteries.

## Step 2 — Side Handles

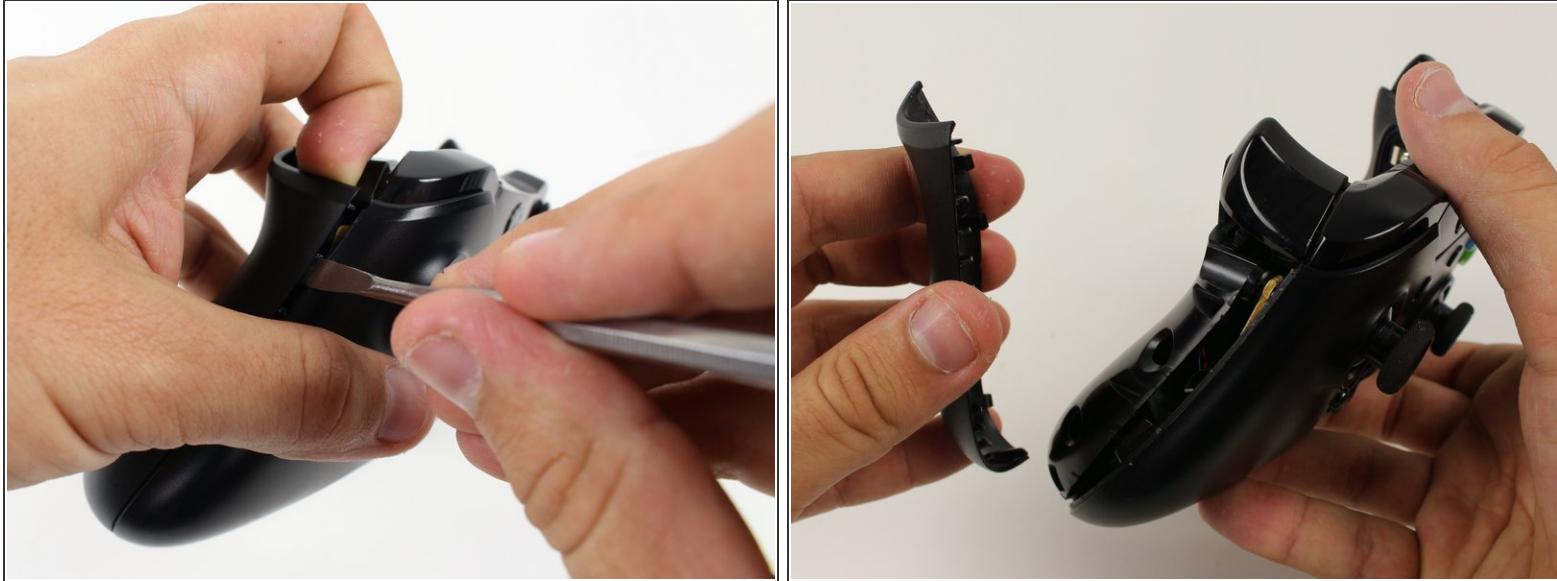

*(i)* We recommend using a nylon spudger for this step. A metal spudger is shown.

- Grip the controller firmly to remove the side handles, wedging a spudger into the seam between the front and handle plates.
- Pry the side plate away from the front plate by moving the spudger back and forth. You will need to do this all the way around the side plate's seam.

## Step 3 — Screws



*(i)* There is a hidden screw located in the middle of the controller behind the label.

- Use a screwdriver and punch a hole directly in the center of the label.
- (i)* You may also lift the label if you do not want to puncture it.
- Remove the five 10mm screws located on the back of the controller using the T8 Security Torx Screwdriver.

## Step 4 — Backplate





- Remove the backplate.

## Step 5 — Faceplate



- Remove the faceplate.

## Step 6 — Top Motherboard

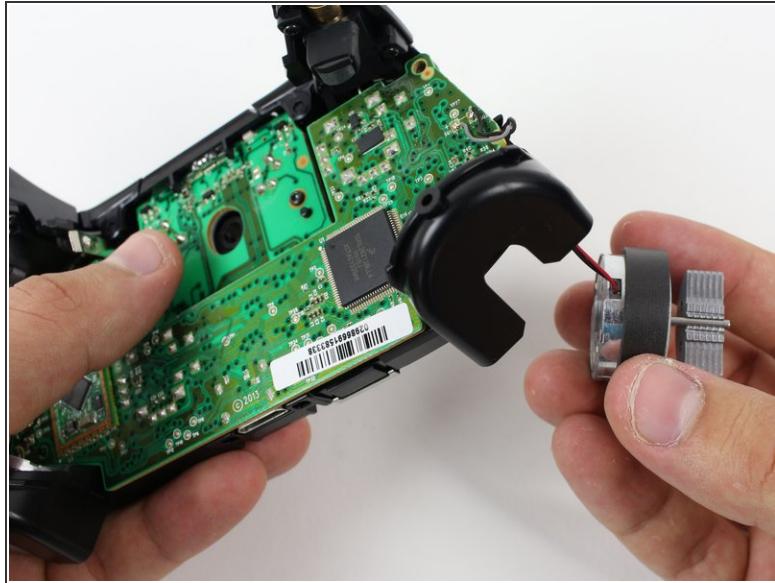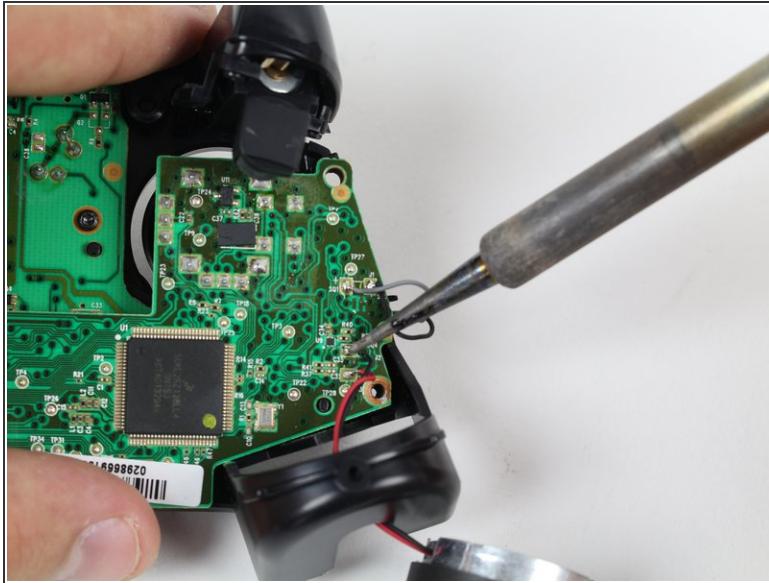

*(i)* You may let the rumble motors hang freely out of their sockets.

- De-solder the soldered joints while holding the red and black wires down on the top motherboard.
- De-solder the black and gray wires that are attached to the top motherboard.
- Remove the rumble motors and set them aside.

**⚠** Be careful while using the soldering iron not to damage other components or hurt yourself.


*(i)* For information on how to solder, [click here](#).

## Step 7



- Unscrew the two 7mm T6 screws located near the rumble motor sockets.


## Step 8

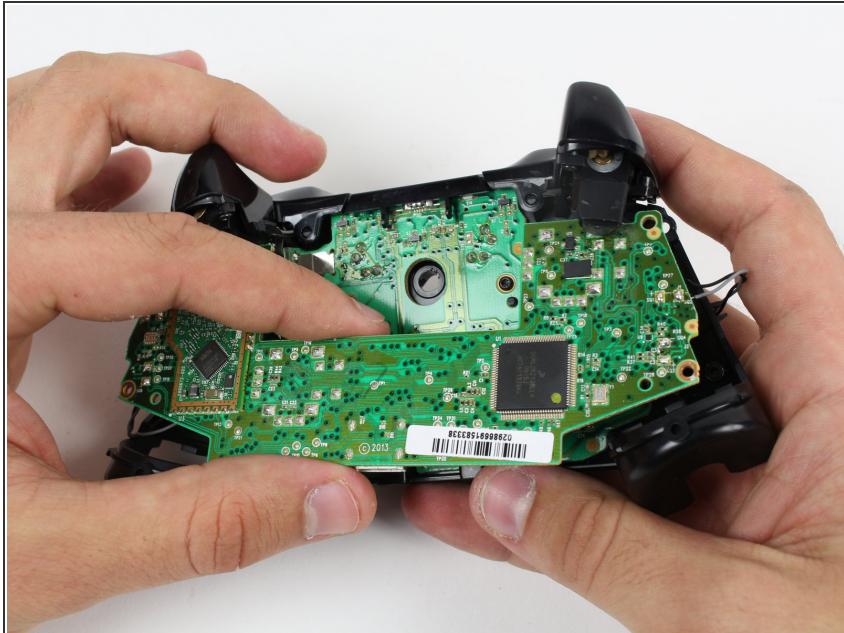

- Firmly grip sides of motherboard near the middle.
- Lift upwards while slightly wiggling the motherboard forward and backward.

**i** Lifting the motherboard will require some force.

## Step 9 — Bottom Motherboard

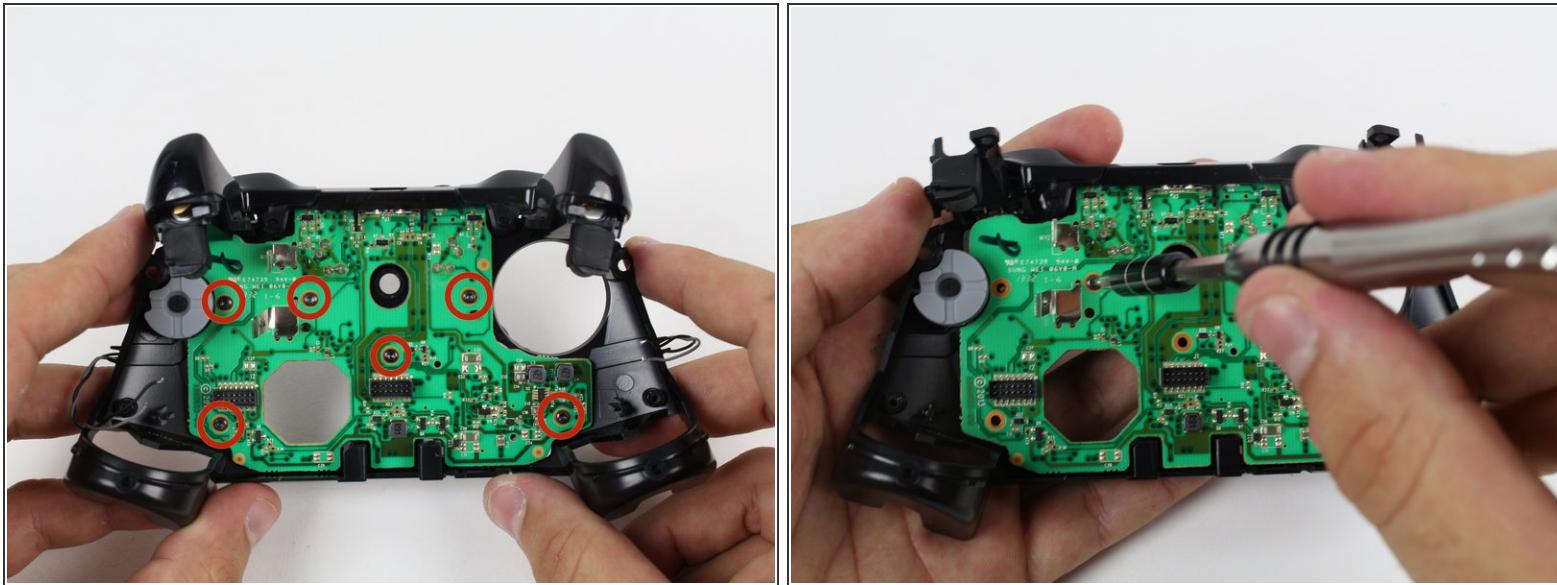

- Remove the six T6 Torx screws located on the bottom motherboard.

## Step 10



- Remove the bumpers by prying them off of the pegs that secure them, using a spudger. They are located on the front and back of the controller.

**⚠** A standard nylon spudger is recommended for this step. Using a metal spudger near the motherboard as shown risks damaging your device.

## Step 11




- Lift the piece surrounding the Home button off of its pegs.
- Pry it off of the other side, using a spudger on the pins.

**⚠** A standard nylon spudger is recommended for this step. Using a metal spudger near the motherboard as shown risks damaging your device.

**ⓘ** Removing this piece may require a lot of force.

## Step 12

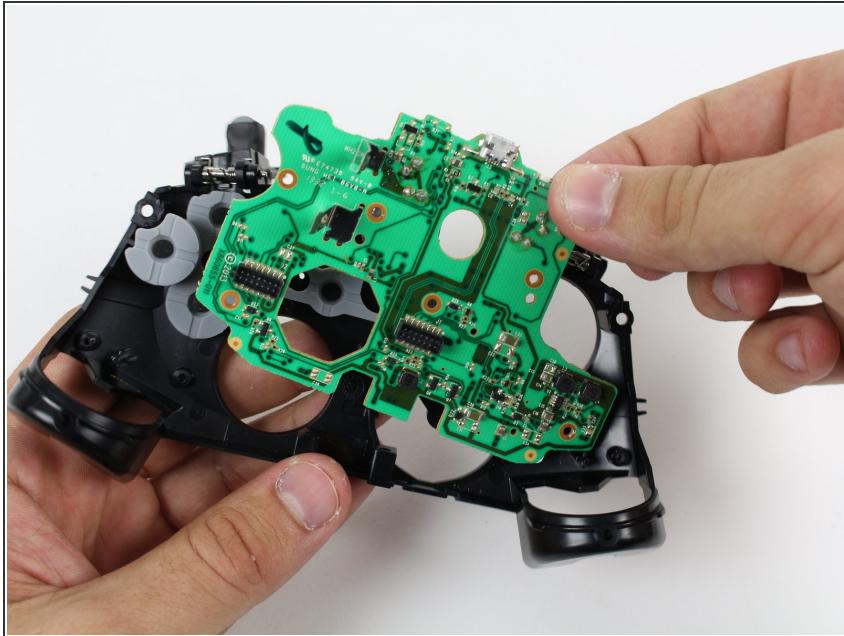

- Remove the bottom motherboard.

## Step 13 — Buttons



- Remove the rubber backing to the buttons.

## Step 14



- With the buttons facing down, push them up out of their housings, and remove.

To reassemble your device, follow these instructions in reverse order.