




Xiaomi Air 12 Battery Replacement

How to replace your Xiaomi Air 12 battery.

Written By: Hannah Kwan

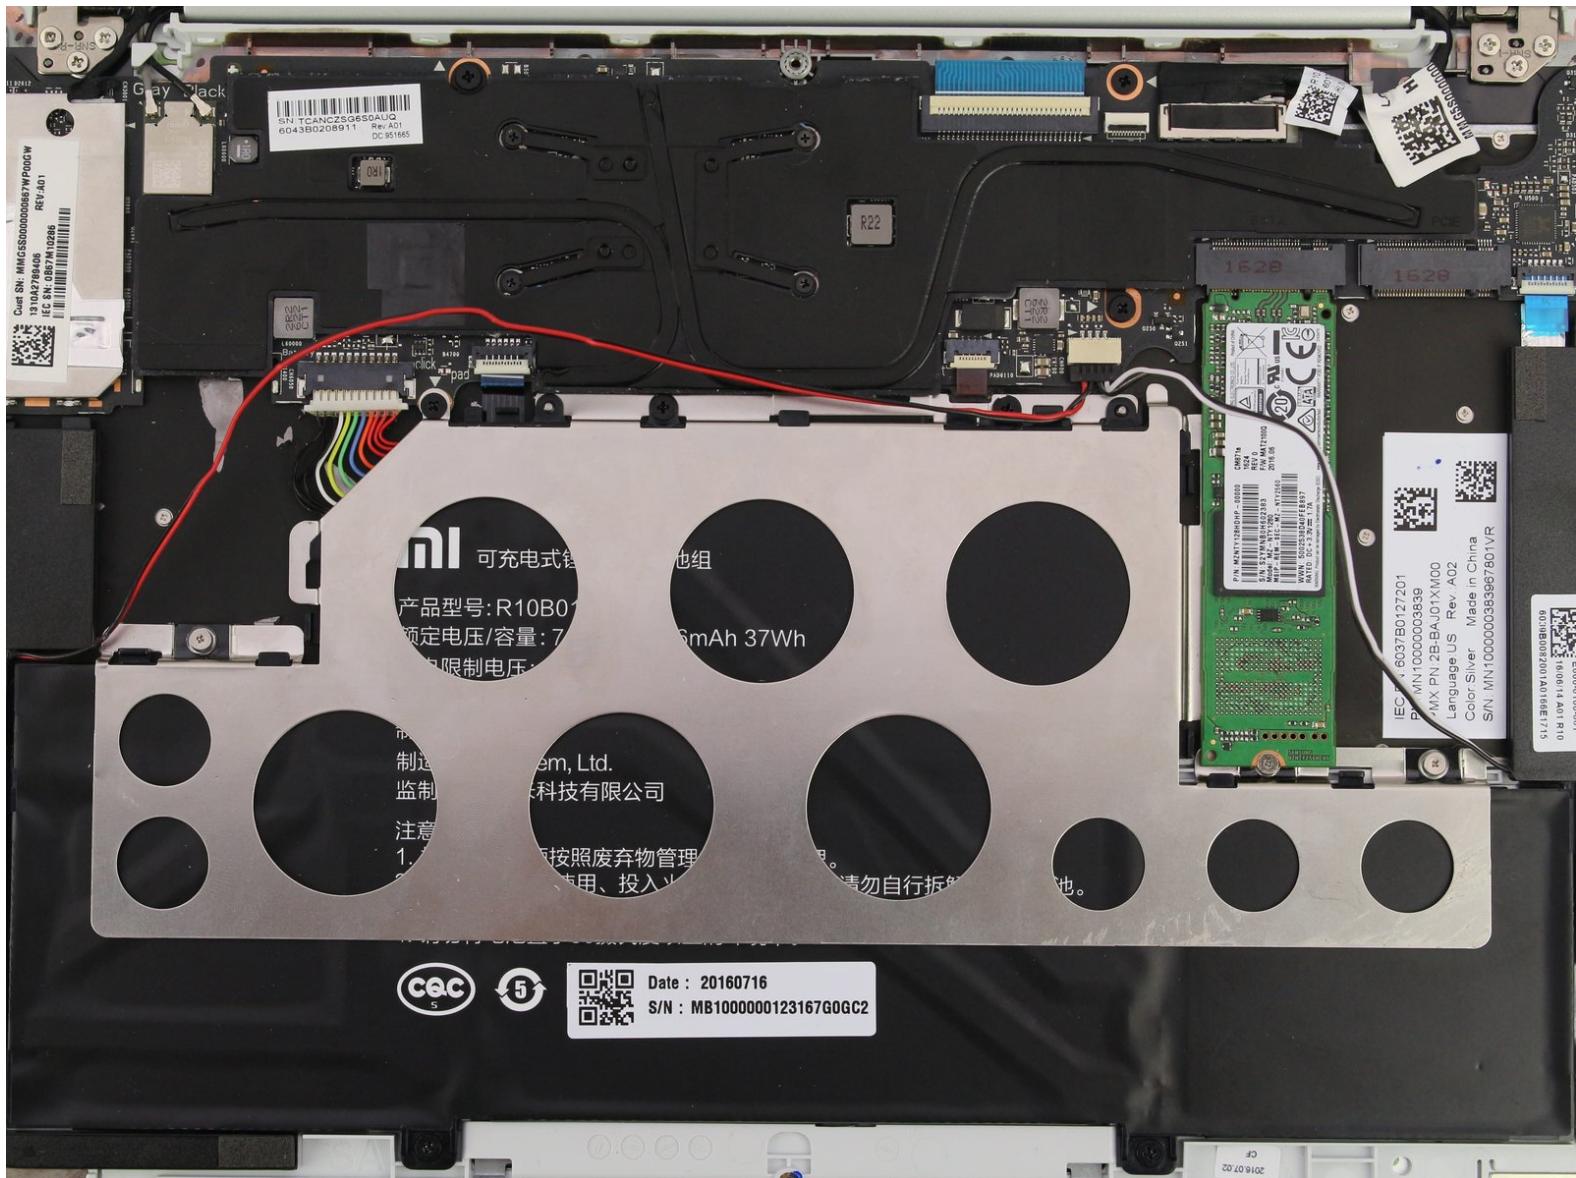

INTRODUCTION

Use this guide to replace the battery in your Xiaomi Air 12.

TOOLS:


- [JIS #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Rear Casing




- Orient the computer so the Xiaomi logo is at the bottom of the device.

Step 2

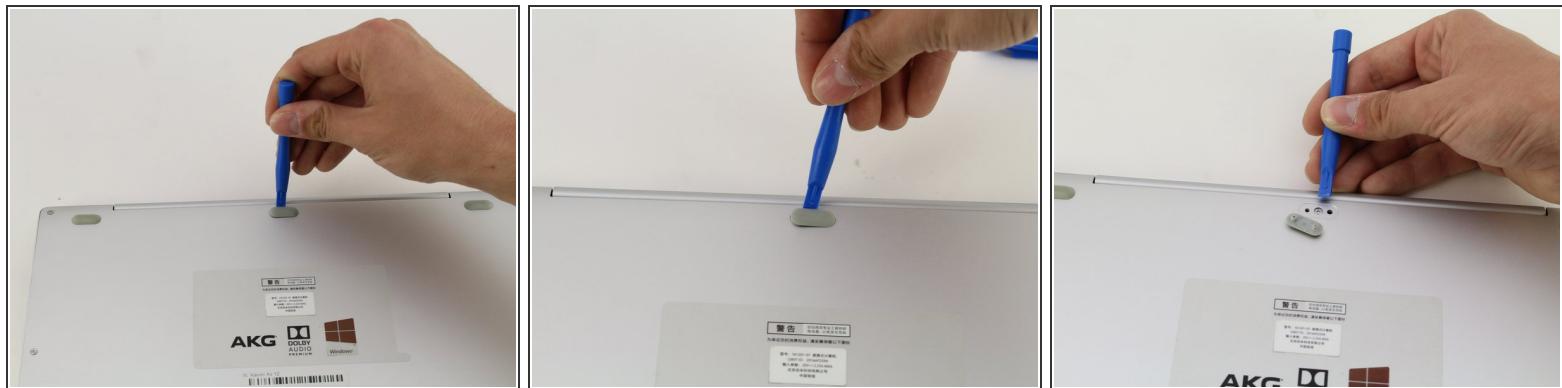

- Insert the plastic opening tool underneath the top-middle rubber covering and lift upwards to reveal the hidden screw.

Step 3

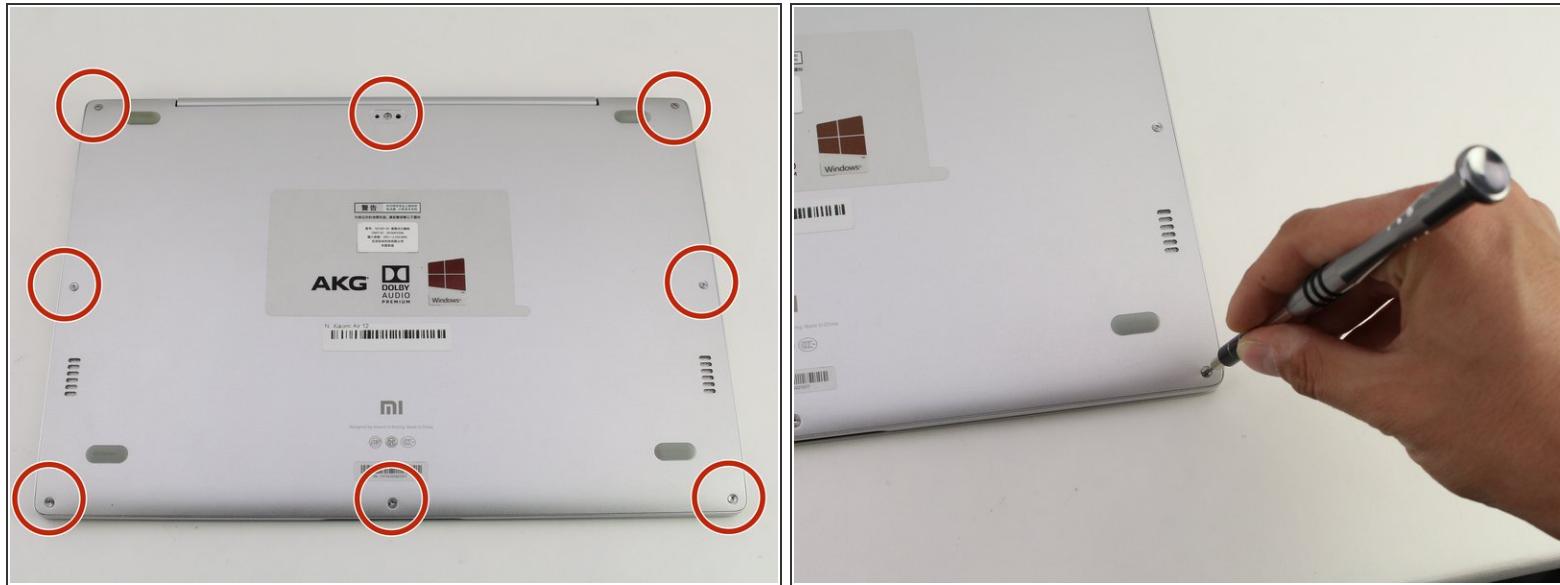

- Remove the eight 3 mm screws using the Torx T5 driver by inserting the screwdriver into each screw and rotating counterclockwise.

Step 4



- Insert the plastic opening tool into each side of the computer and push the tool downwards to pop open the back cover.


ⓘ You will hear popping noises as you remove the cover.

Step 5





- Remove the back of the laptop by gently lifting the casing upwards.

Step 6 — SSD

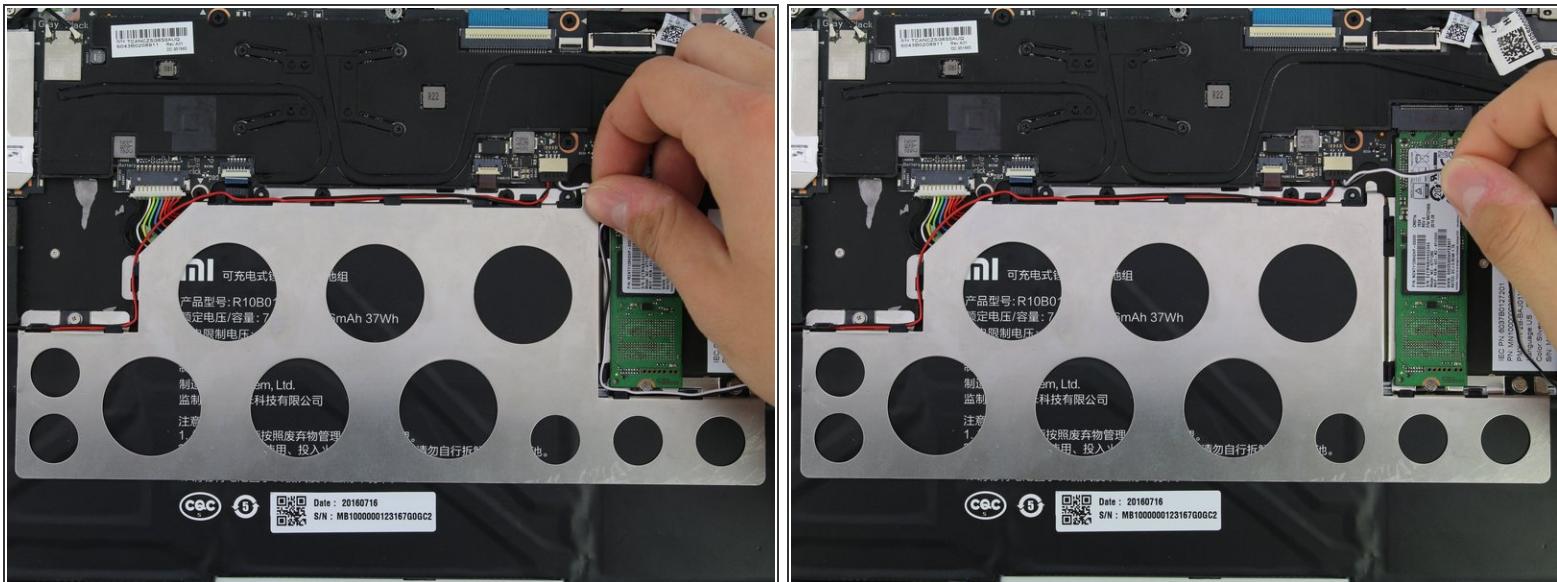



- Detach the white and black speaker wires by pulling them from the small black tabs along the perimeter of the metal bracket.

Step 7

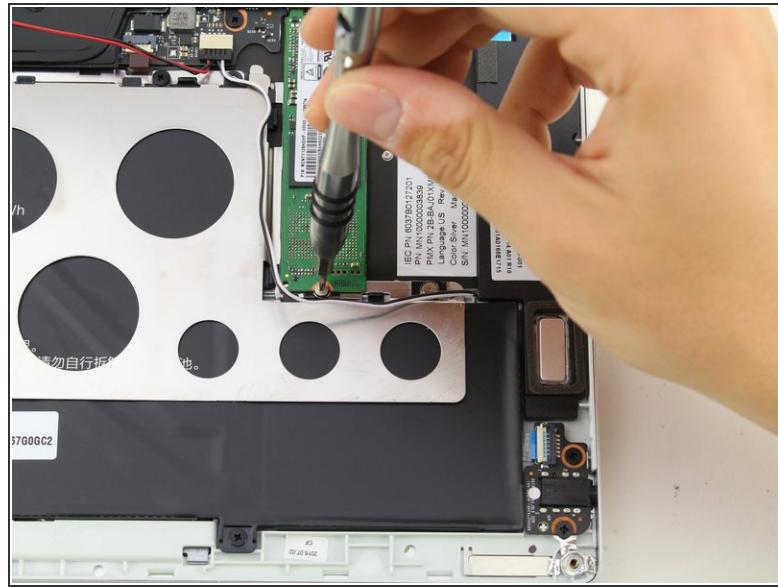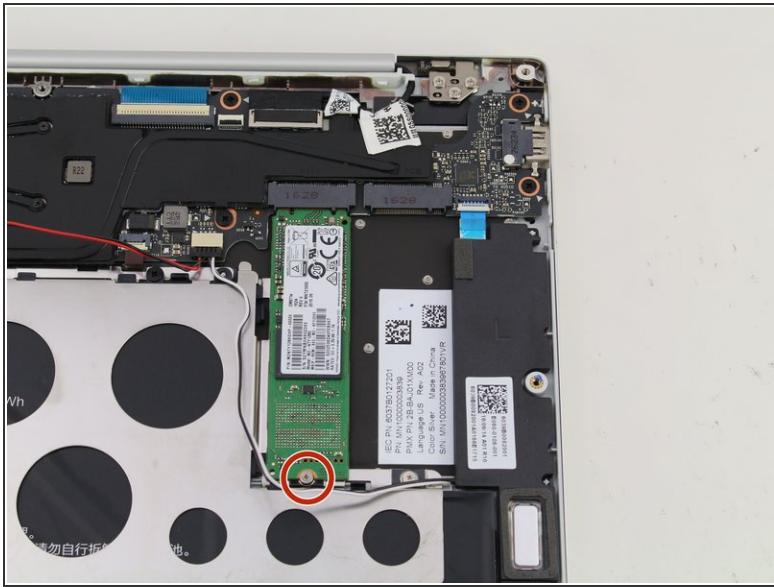


- Remove the 1.5mm screw using the JIS #00 screwdriver.

Step 8

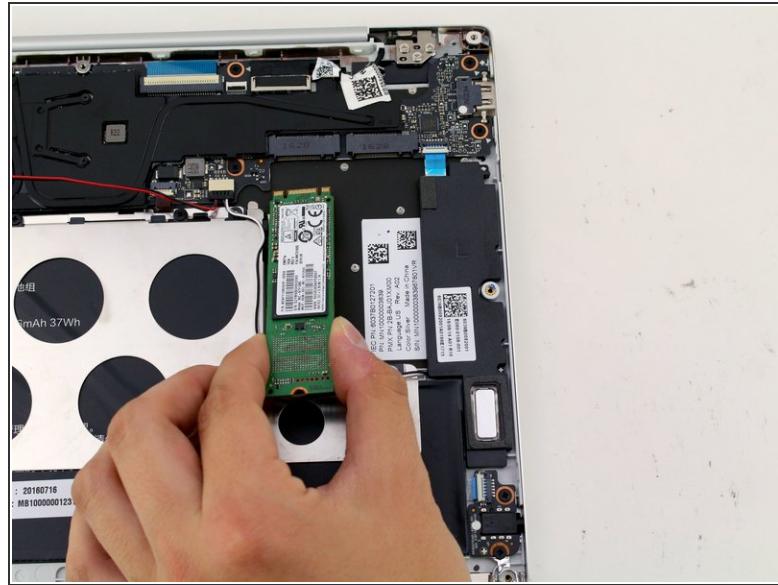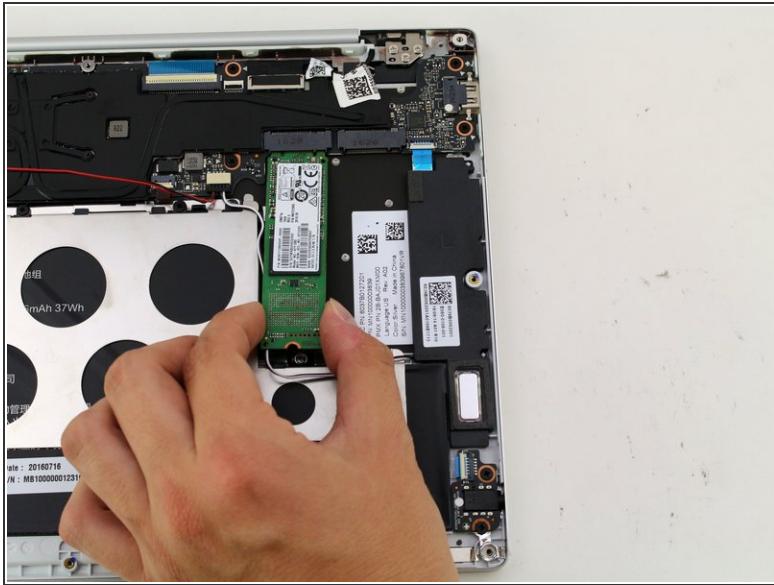


- Lift the SSD up from the device and gently pull the SSD from the laptop.

Step 9 — Battery

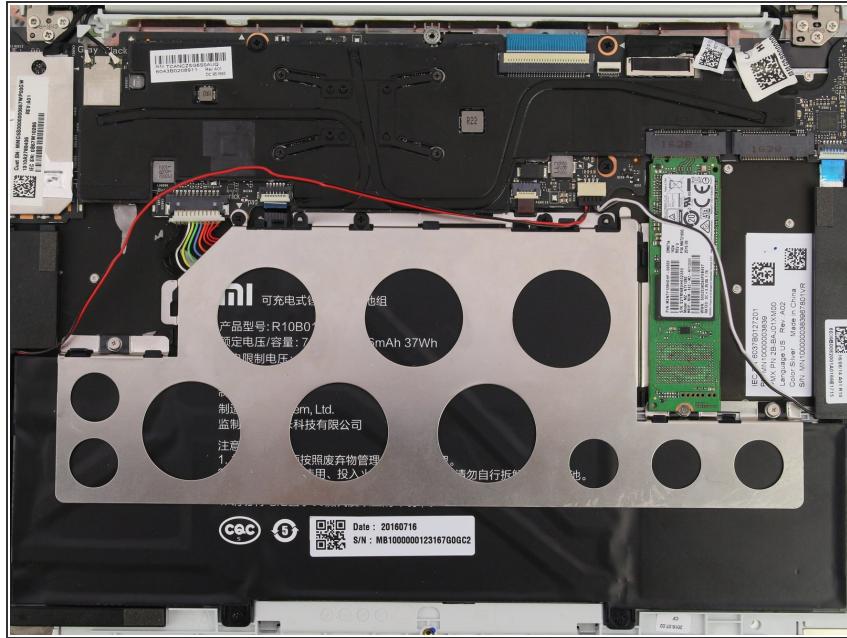

- Detach the red wire from the tabs on the perimeter of the metal bracket.


Step 10

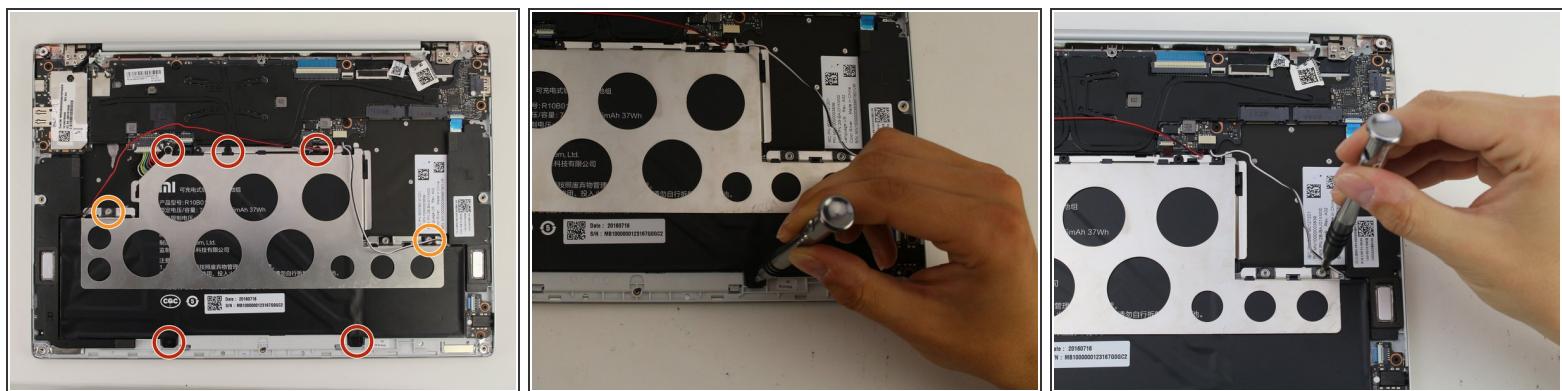

- Use a PH1 screwdriver to remove the five 2mm black screws.
- Remove two silver 1mm JIS #00 screws.

● There will be clear plastic spacers that come off with the silver screws.

Step 11

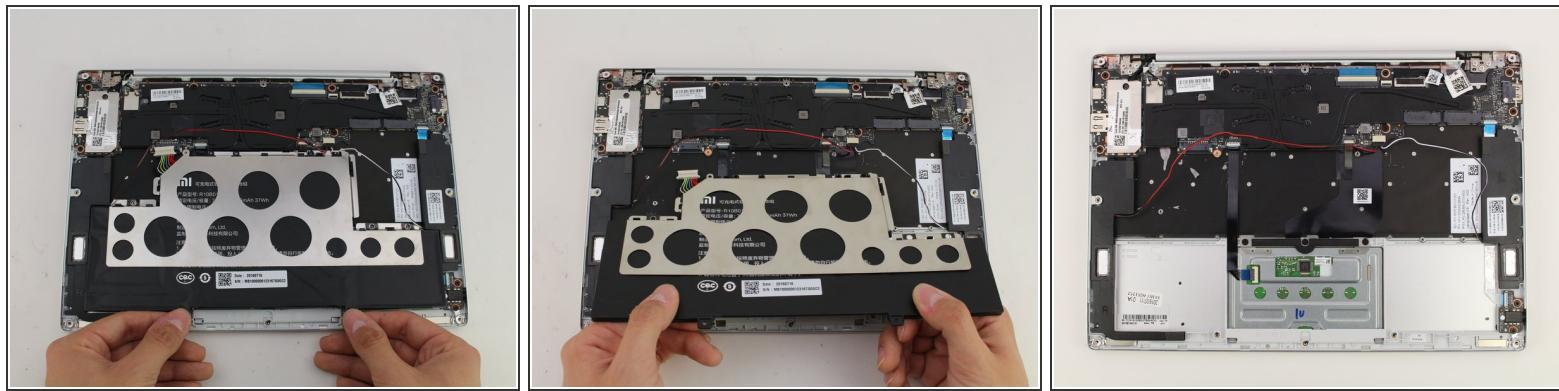

- Lift the battery up and pull out from the device.

- ⓘ The metal bracket will come out with the battery.

To reassemble your device, follow these instructions in reverse order.