


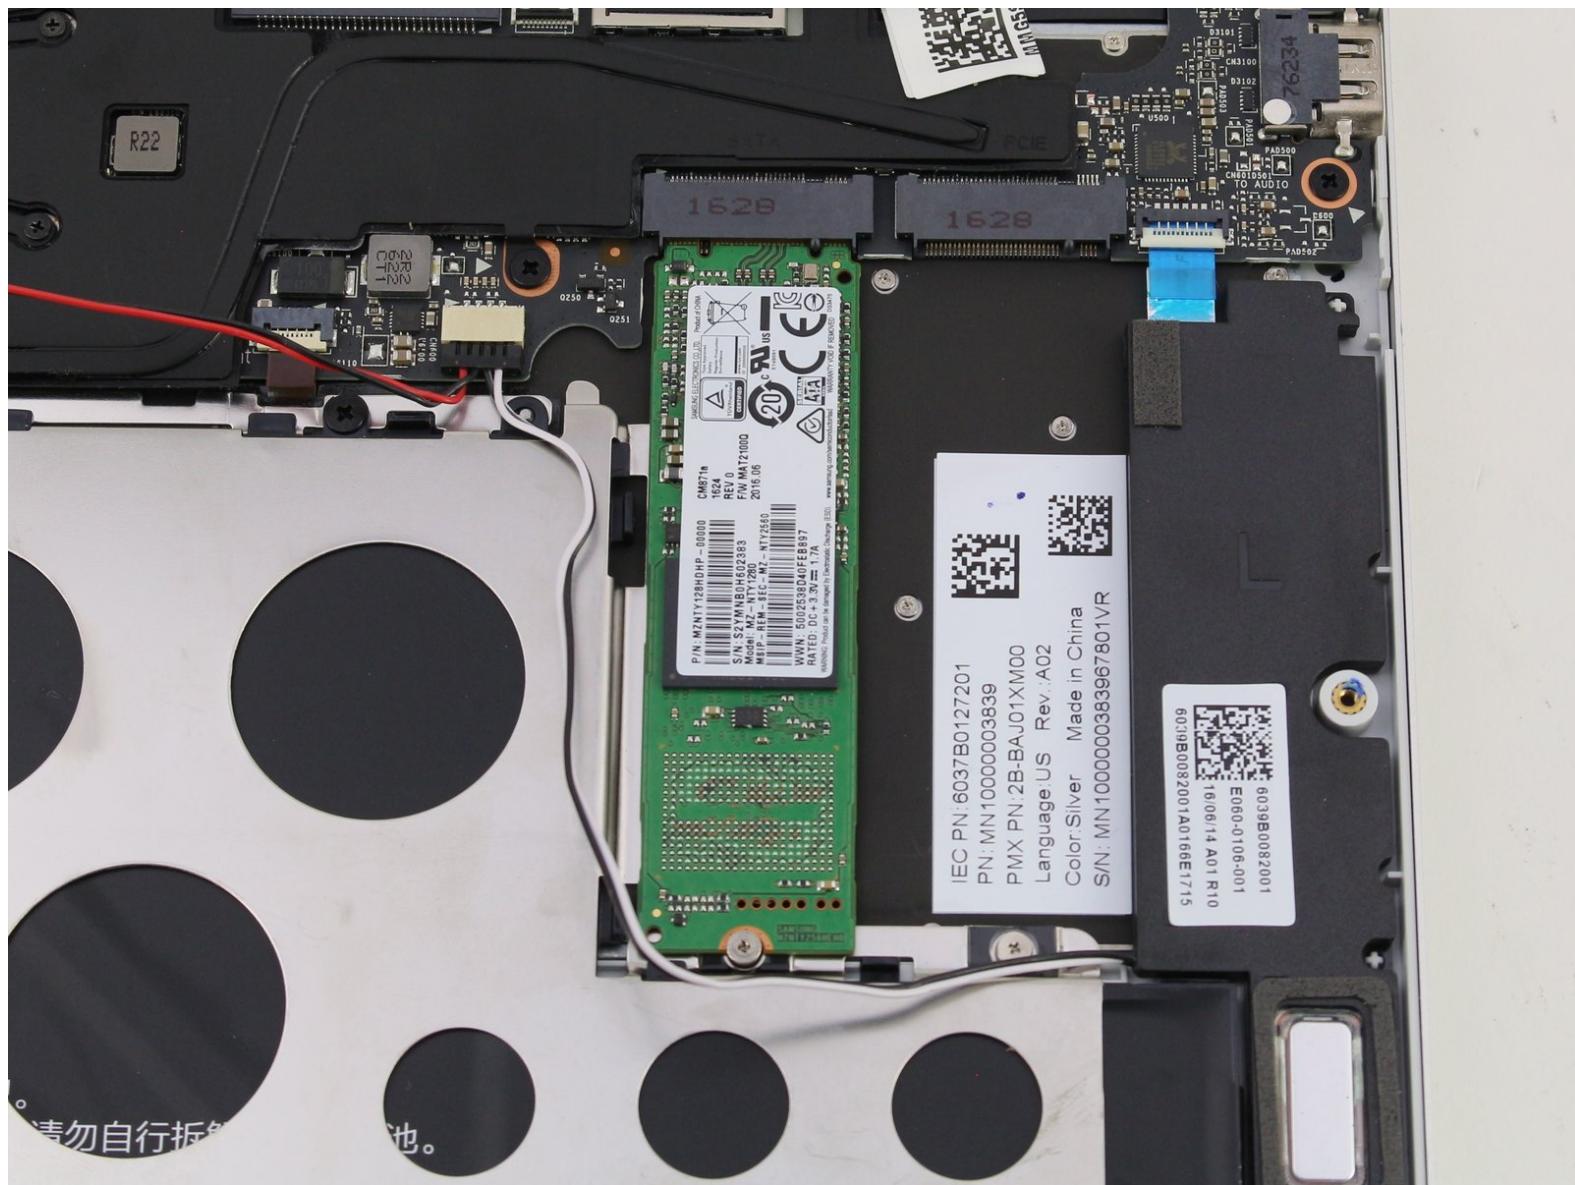

# Xiaomi Air 12 SSD Replacement

How to replace your Xiaomi Air 12 SSD.

Written By: Hannah Kwan



## INTRODUCTION

Use this guide to replace the SSD in your Xiaomi Air 12.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [JIS #00 Screwdriver](#) (1)

## Step 1 — Rear Casing




- Orient the computer so the Xiaomi logo is at the bottom of the device.

## Step 2

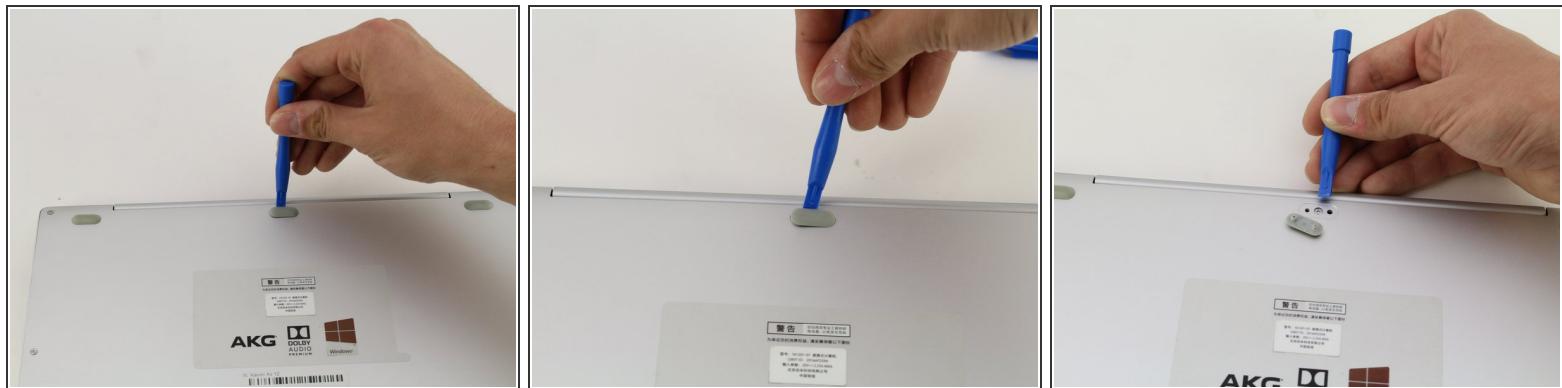

- Insert the plastic opening tool underneath the top-middle rubber covering and lift upwards to reveal the hidden screw.

## Step 3

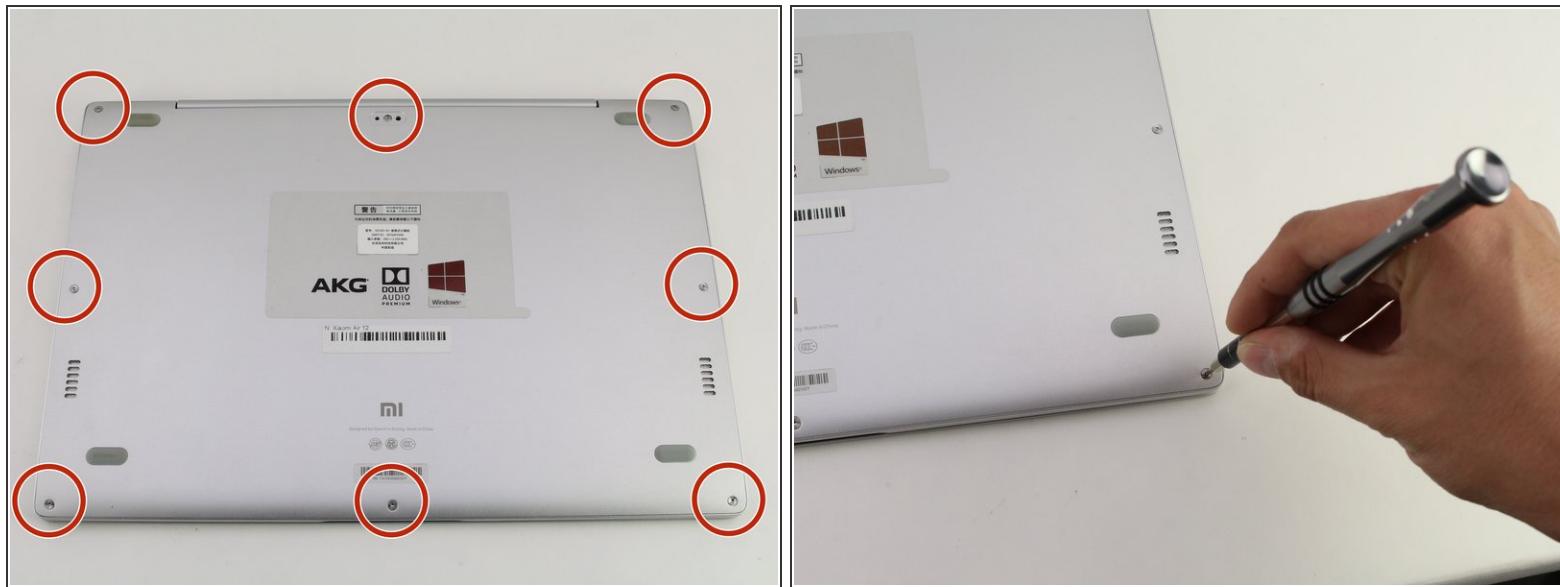

- Remove the eight 3 mm screws using the Torx T5 driver by inserting the screwdriver into each screw and rotating counterclockwise.

## Step 4



- Insert the plastic opening tool into each side of the computer and push the tool downwards to pop open the back cover.


ⓘ You will hear popping noises as you remove the cover.

## Step 5





- Remove the back of the laptop by gently lifting the casing upwards.

## Step 6 — SSD

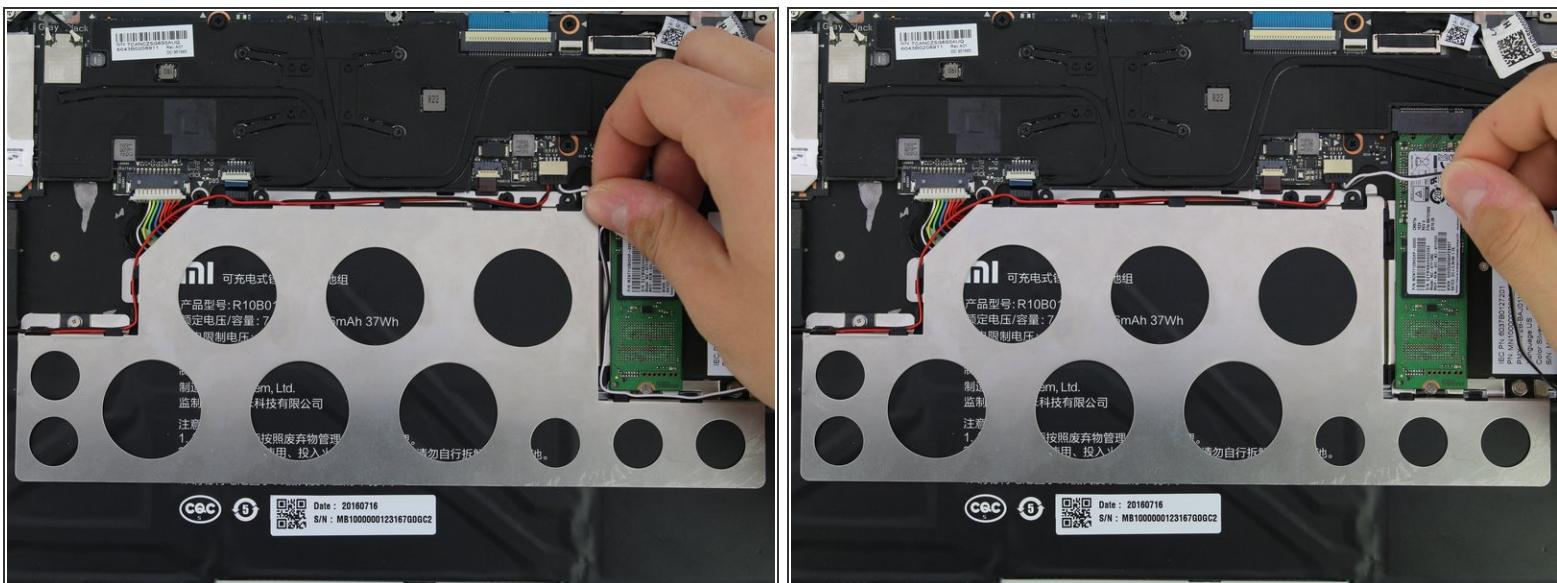



- Detach the white and black speaker wires by pulling them from the small black tabs along the perimeter of the metal bracket.

## Step 7

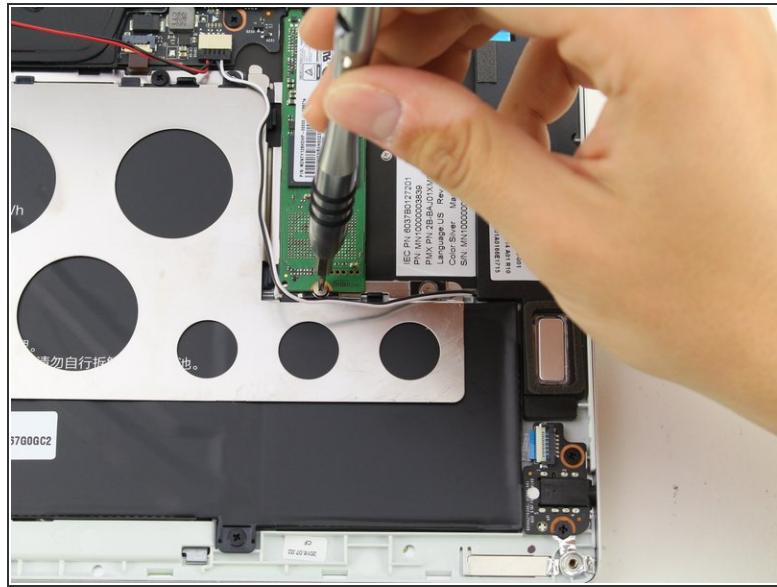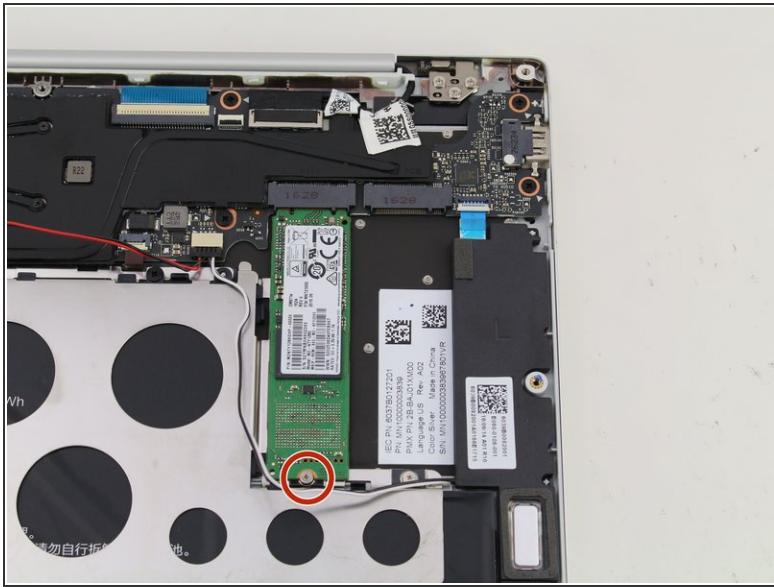

- Remove the 1.5mm screw using the JIS #00 screwdriver.

## Step 8

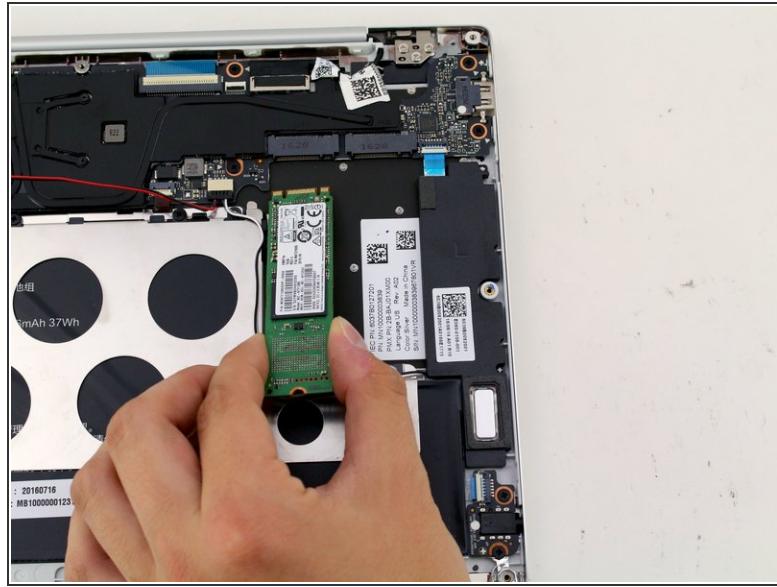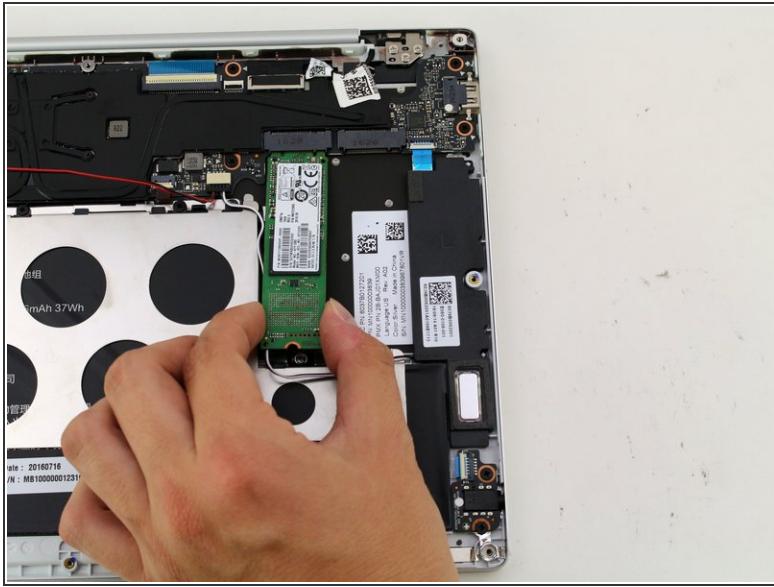

- Lift the SSD up from the device and gently pull the SSD from the laptop.

To reassemble your device, follow these instructions in reverse order.