



# Xiaomi Air 12 Speaker Replacement

How to replace your Xiaomi Air 12 speaker system.

Written By: Hannah Kwan



## INTRODUCTION

Use this guide to replace the speaker in your Xiaomi Air 12.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

## Step 1 — Rear Casing




- Orient the computer so the Xiaomi logo is at the bottom of the device.

## Step 2

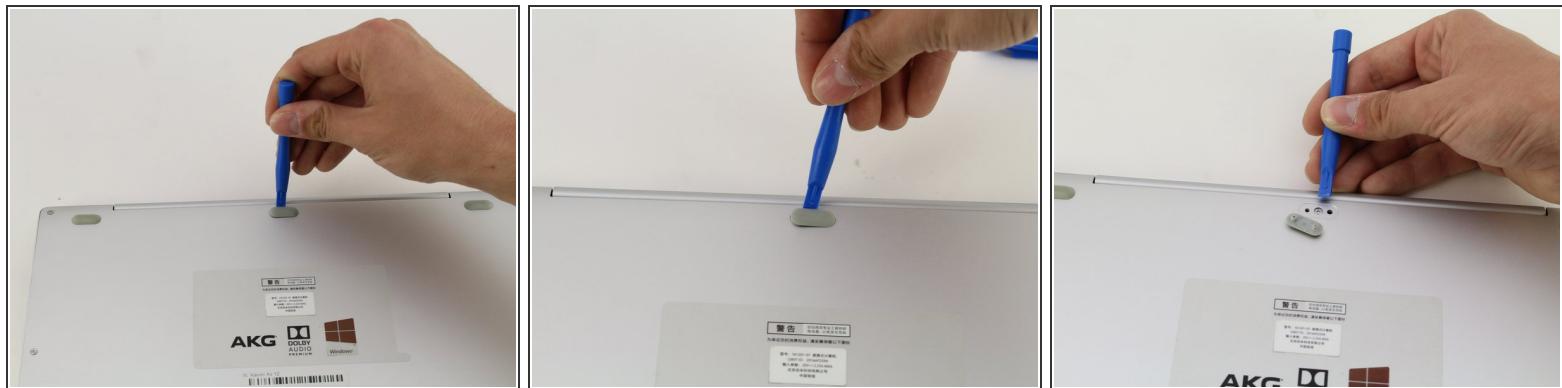

- Insert the plastic opening tool underneath the top-middle rubber covering and lift upwards to reveal the hidden screw.

## Step 3

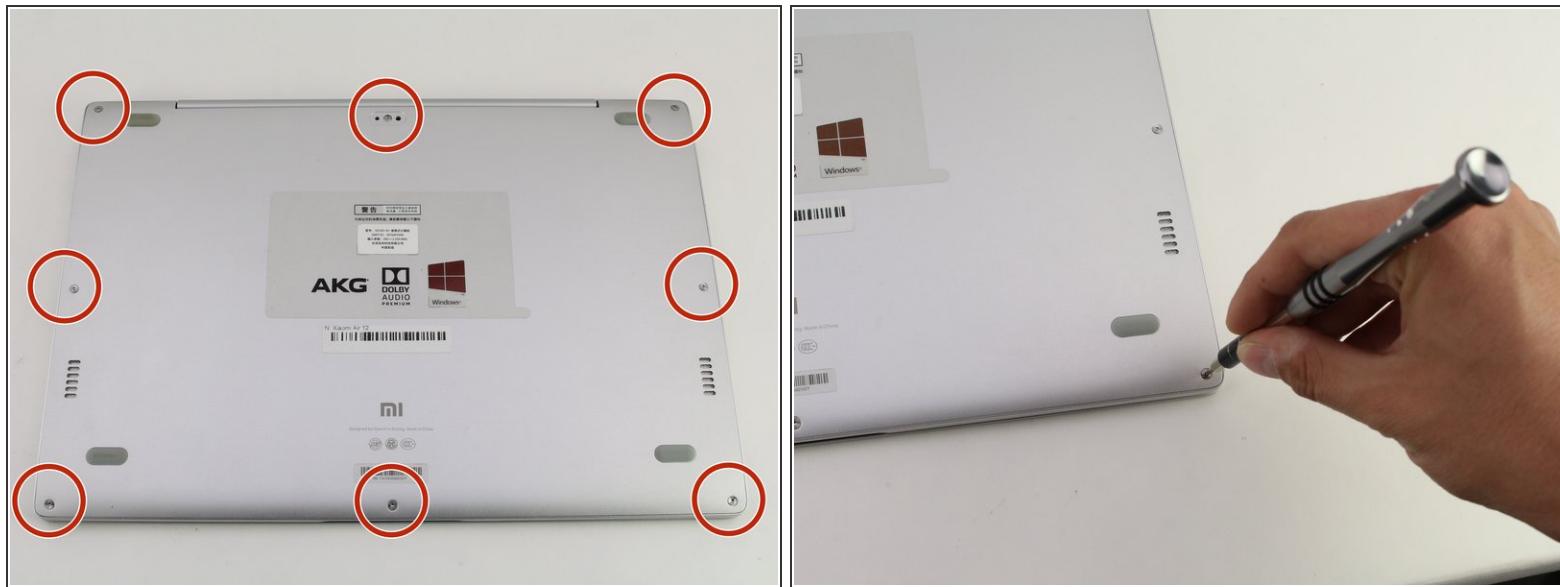

- Remove the eight 3 mm screws using the Torx T5 driver by inserting the screwdriver into each screw and rotating counterclockwise.

## Step 4



- Insert the plastic opening tool into each side of the computer and push the tool downwards to pop open the back cover.


ⓘ You will hear popping noises as you remove the cover.

## Step 5




- Remove the back of the laptop by gently lifting the casing upwards.

## Step 6 — Speaker

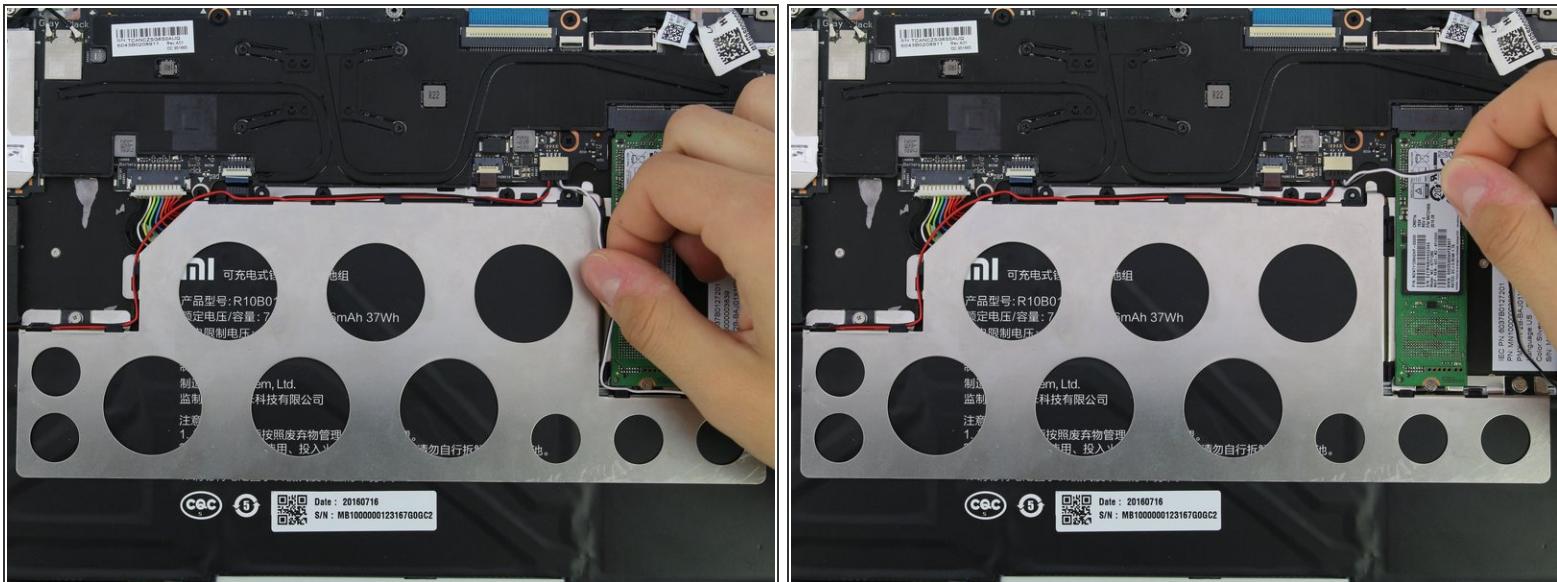


- Remove the white and black speaker wires from the black tabs by pulling upwards from the device.

## Step 7

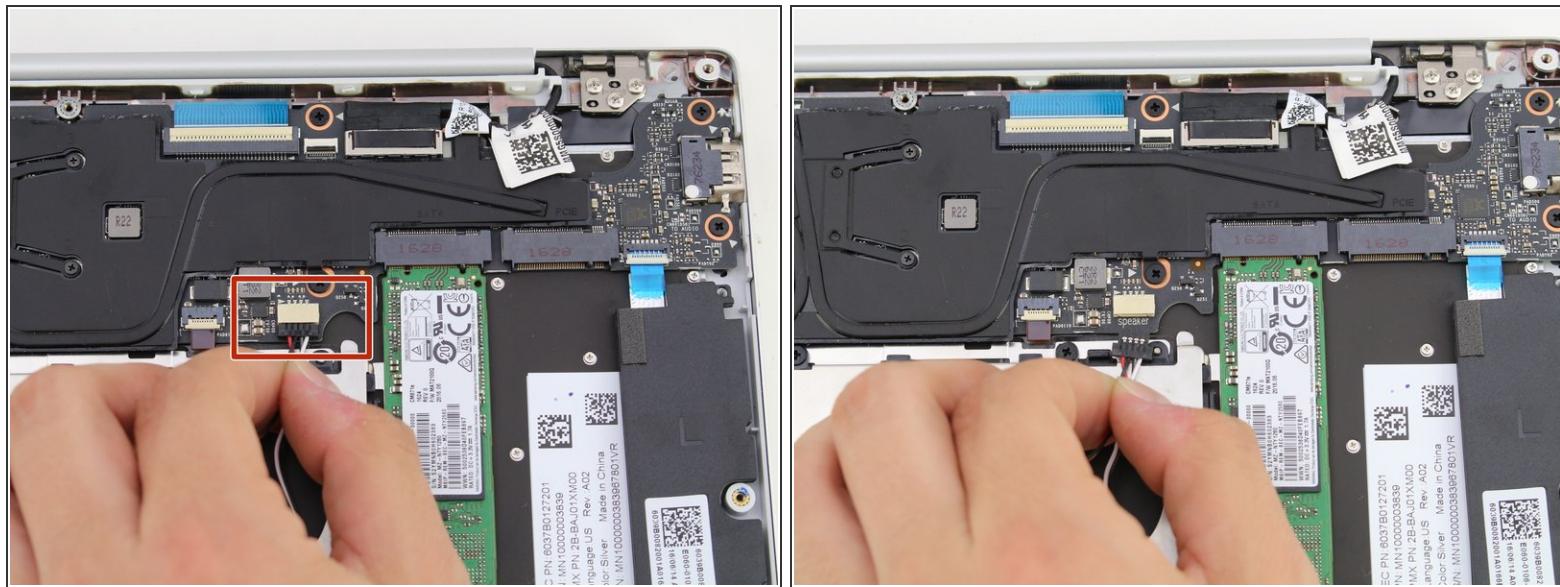

- Gently pull the speaker connector out from the connection point using your hand.

## Step 8

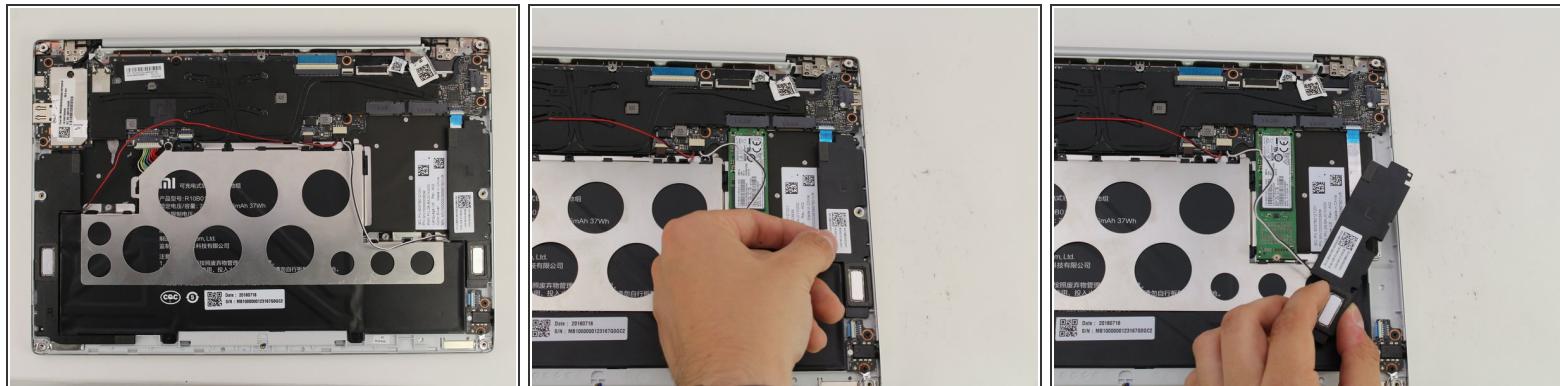

- Remove the left speaker module by pulling the panel up from the device.
- Repeat the same process for the right speaker module.

**i** Left and Right speaker modules are denoted by an "L" and "R" respectively.

**i** There will be a slight adhesive underneath the module.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-21 03:44:36 PM (MST).

