



Xiaomi Mi Pad Front Camera Replacement

Remove the front-facing 5 MP camera from your Xiaomi Mi Pad.

Written By: Rene Mendoza




INTRODUCTION

Use this guide to remove the front-facing camera from your Xiaomi Mi Pad.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Rear Case Assembly

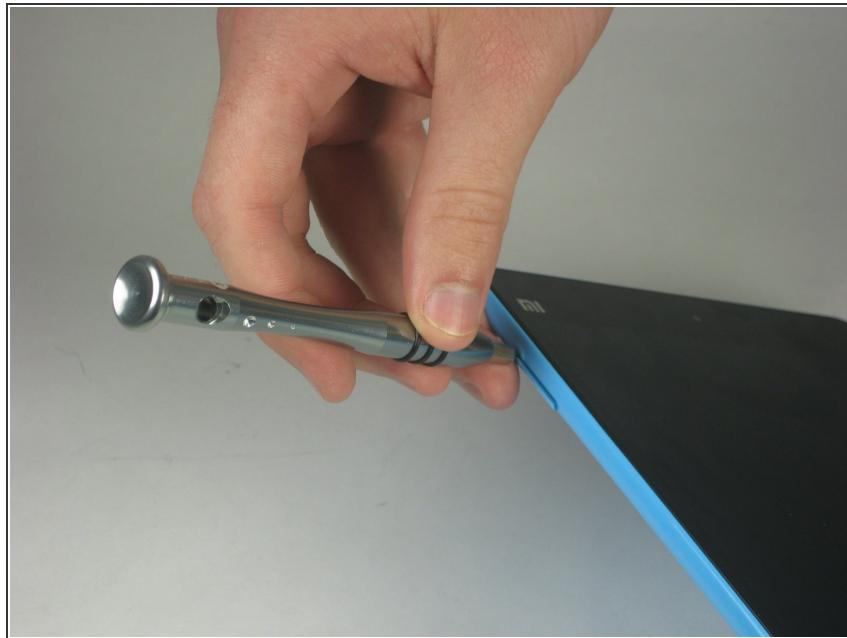

- Remove the micro SD card slot from the left side of the device using either the metal pin included with the device or a SIM card eject tool.

Step 2



- Use a plastic opening tool and/or opening pick to gently pry the back panel away from the device. Work your way around the device, slowly increasing the gap.

ⓘ The back panel has small clips and light adhesive that easily releases from the device.

Step 3 — Front Camera



- Remove the twelve 3.0 mm Phillips #000 screws on the upper cover of the device.

Step 4




- Remove the upper cover from the device.

Step 5



- Use a plastic opening tool to gently disconnect the front-facing camera from the motherboard.

Step 6

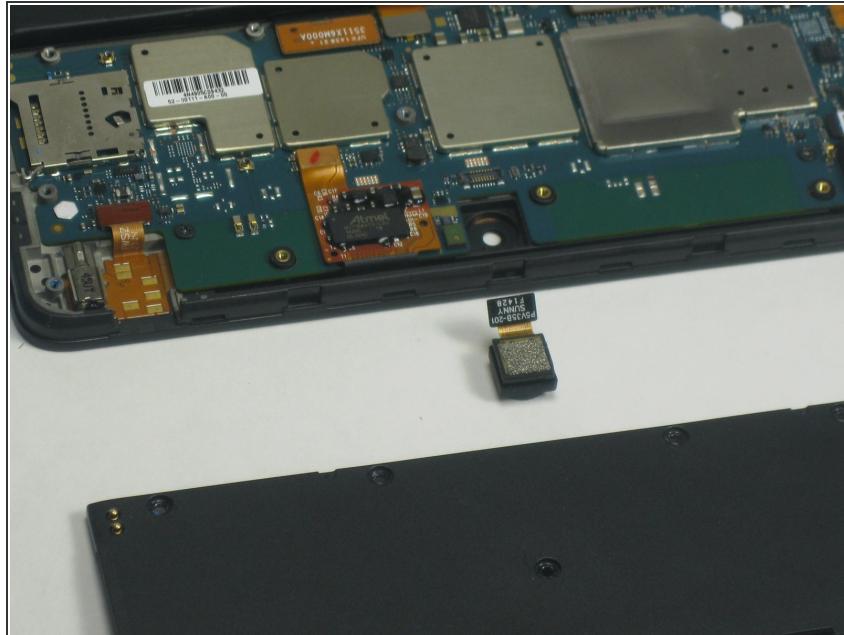

- Carefully remove the front camera from the device.

To reassemble your device, follow these instructions in reverse order.