



# Yamaha NS-AW190BL Damaged Wires Replacement

Use this guide to repair or replace damaged wires on the Yamaha NS-AW190BL.

Written By: Roshal Robince



## INTRODUCTION

This guide explains the method to repair or replace damaged wires on the Yamaha NS-AW190BL.

### TOOLS:

- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Rear Casing




- Remove the six Phillips Head 1.2mm screws on the front side of the speaker.

## Step 2




- Crack open both parts of the casing carefully.
- Using a plastic opening tool, wedge open the bottom of the speaker to separate the two parts of the speaker.

## Step 3

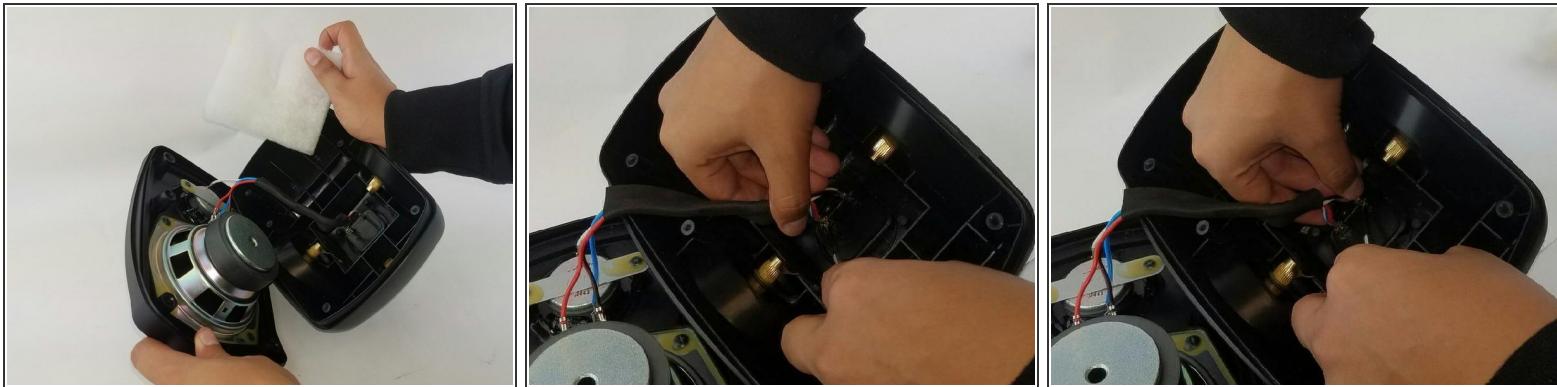


- Remove the cooling foam.
- Use a metal spudger to push the tab in on the red wire.
- Repeat the process for the blue wire.

## Step 4

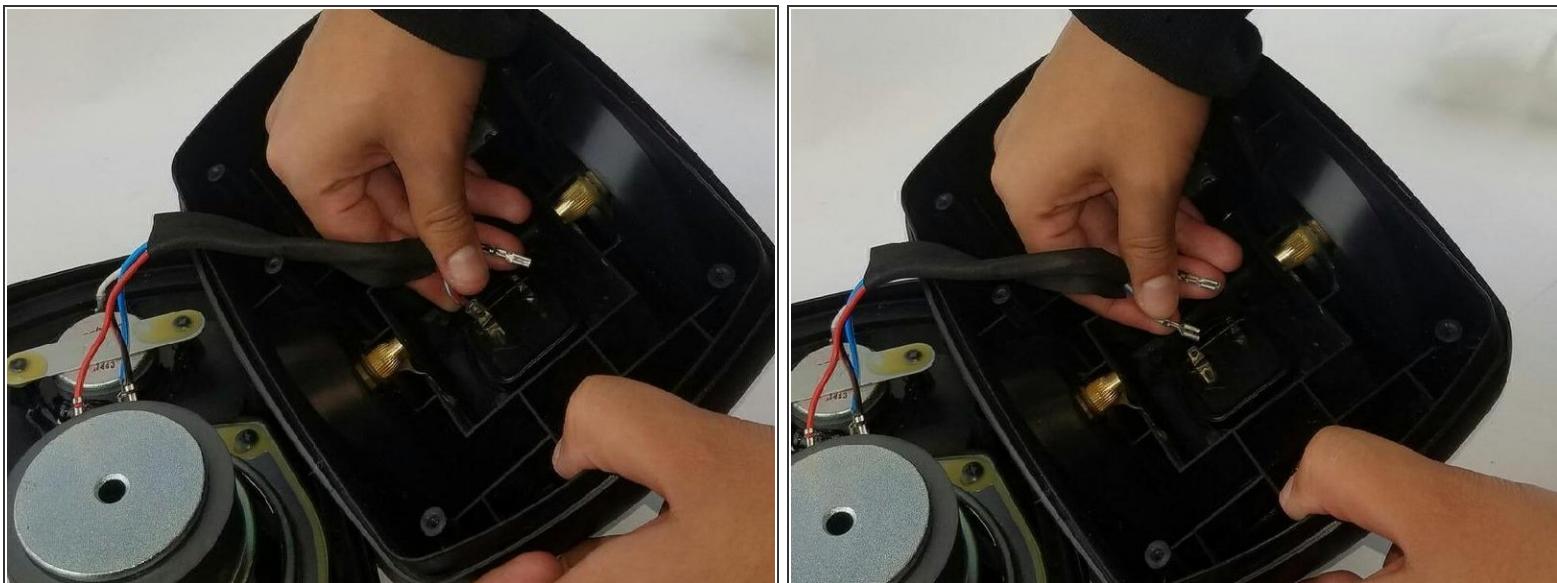

- The blue wire can now be removed from its connector.
- Remove the red wire to free the rear casing.

## Step 5 — Wiring

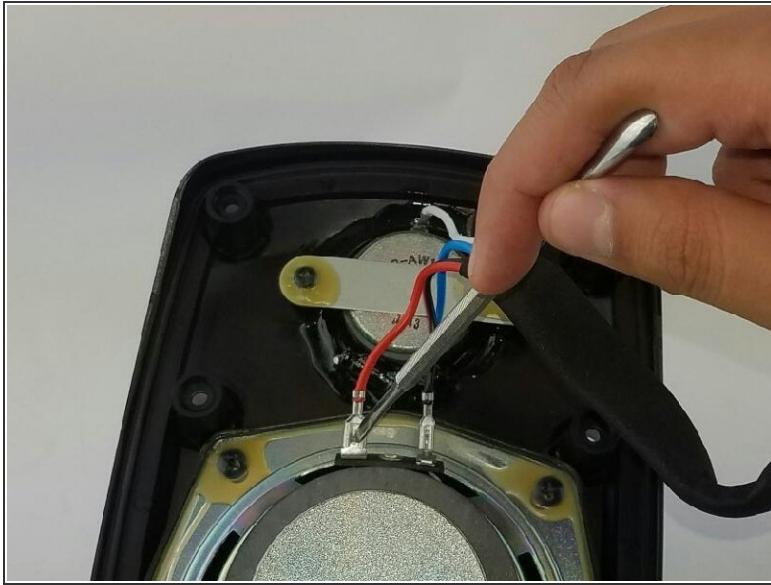

- Use the metal spudger to bend down the metal tabs that hold the wires to the terminals. The tabs are small and in between the grooves of the terminal.

## Step 6



- Remove the wires from the terminals.

## Step 7



- Use the metal spudger to bend the metal tabs that hold the connectors to the terminals.

## Step 8



- Remove the wires from the terminals. Then remove the entire wire assembly.

To reassemble your device, follow these instructions in reverse order.