



Yuneec Typhoon H Spring Clip Replacement

Replace your broken arm clip or spring clip to allow for arm movement again.

Written By: Claire Luce



INTRODUCTION

The guide instructs you to replace the spring clip or (also known as the arm clip) at the arm attachment on the Yuneec Typhoon H.

The spring clips usually get broken during a crash.

TOOLS:

- [Tweezers \(1\)](#)
- [JIS #00 Screwdriver \(1\)](#)

Step 1 — Spring Clip



- Using a JIS #00 screwdriver, unscrew the 3mm oval screw.
- *(i)* The oval screw is hard to remove once fully unscrewed, to remove the screw flip the drone upside down to have the screw fall out.

Step 2



- *(i)* For this step the arm must be bent.
- Remove the broken arm clip by pinching the metal top and then pull it out with an upward force.
- *(i)* The Blunt Nose Tweezers may be helpful in removing the arm clip.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-11 03:16:40 AM (MST).

