



ZD-N Plus Wireless Controller Repair D-Pad Replacement

This guide will assist in the removal and replacement of your ZD-N Plus Wireless Controller's directional pad.

Written By: Devin Matos



This document was generated on 2020-02-27 06:30:34 AM (MST).

INTRODUCTION

This guide is designed to assist in the replacement of the D-Pad for the ZD-N Plus Wireless Controller. Directional pads can be purchased at local electronics stores.

TOOLS:

- [JIS #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Panel




- Remove the seven 12mm JIS #00 screws that hold the back panel in place.

Step 2





- Lift up on the back panel of the ZD-N Plus to remove it from the rest of the controller.

Step 3 — Battery

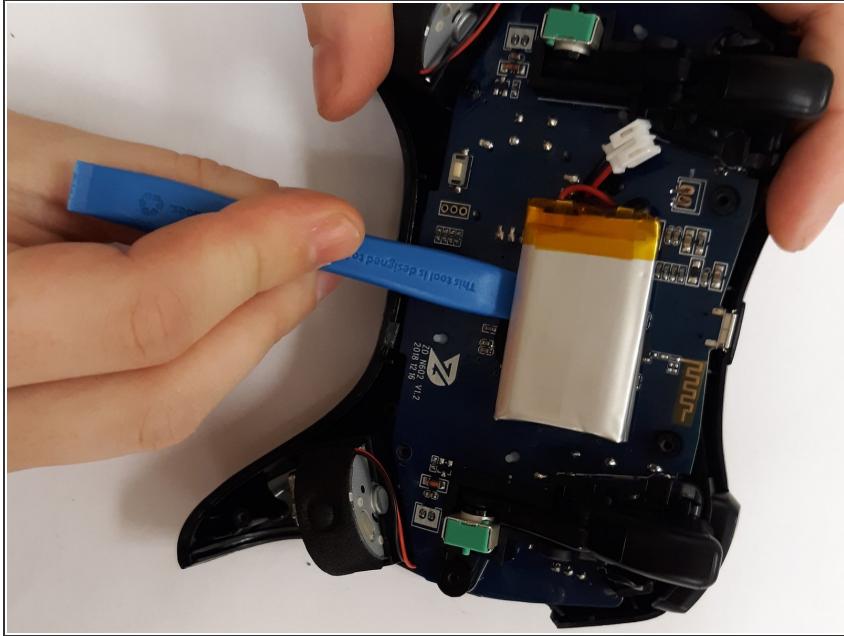



- Use an opening tool to pry the battery from its original position.
- *(i)* The battery is glued on, so this may take some effort.

Step 4

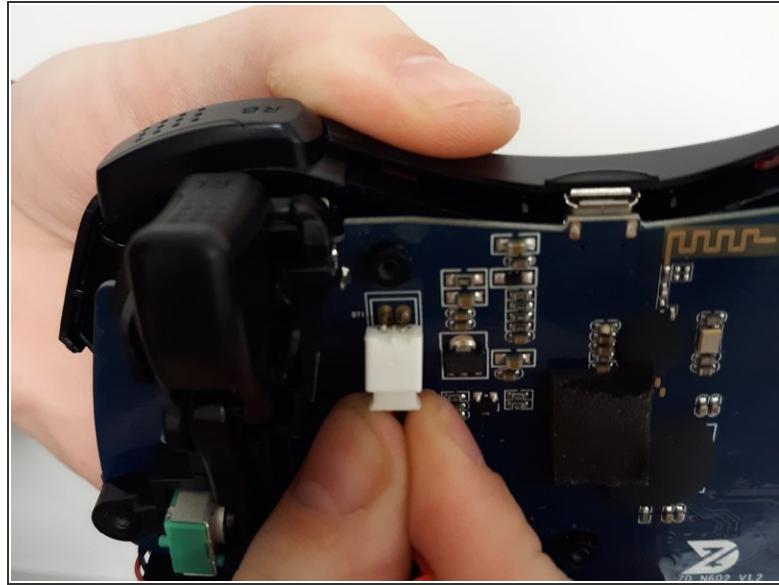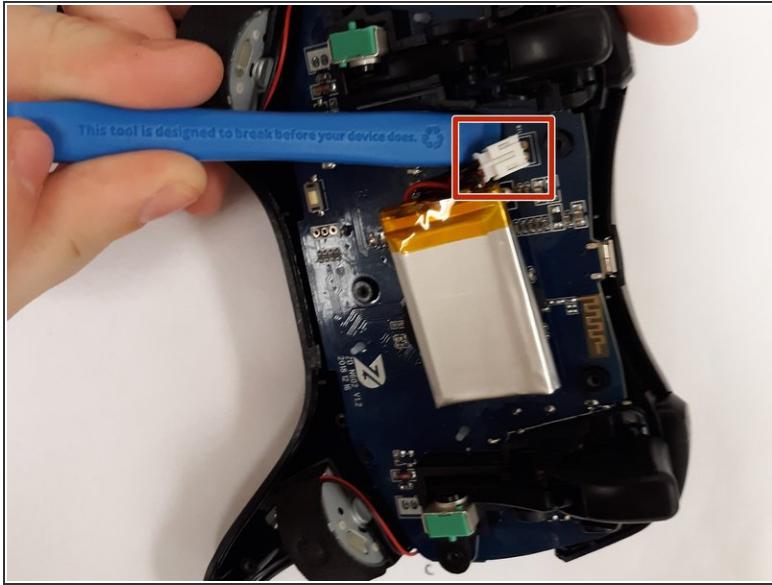



- Use an opening tool to pry the connector away from the two metallic prongs.
- *(i)* The parts are built to stay together, so this may take some effort.
- ⚠ Be careful to not warp the prongs in the process.

Step 5

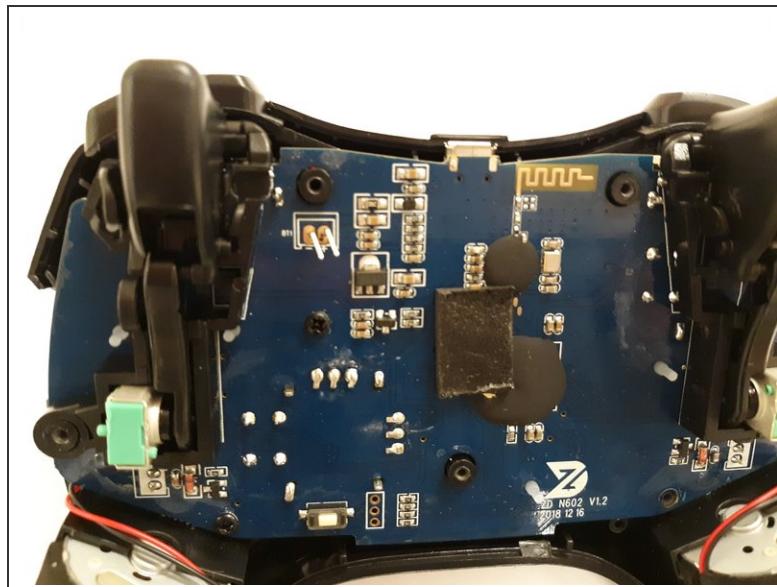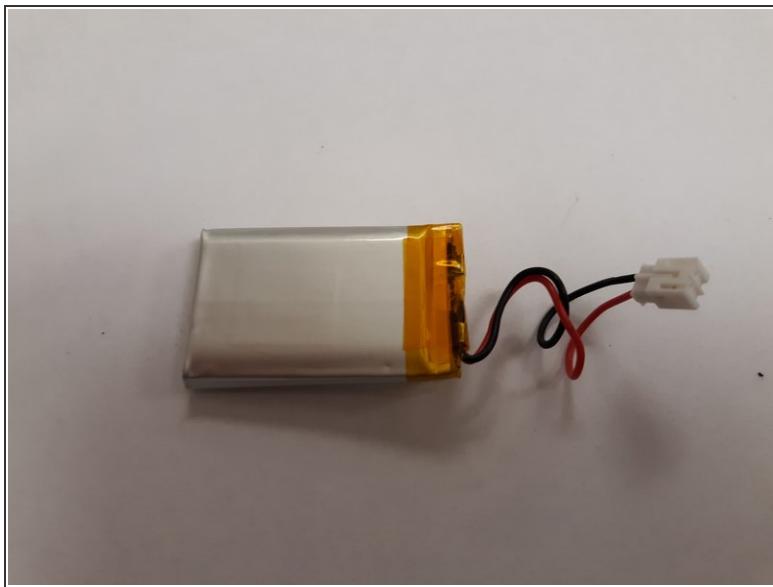


- Remove the battery from the controller.

Step 6 — Rumble Motor

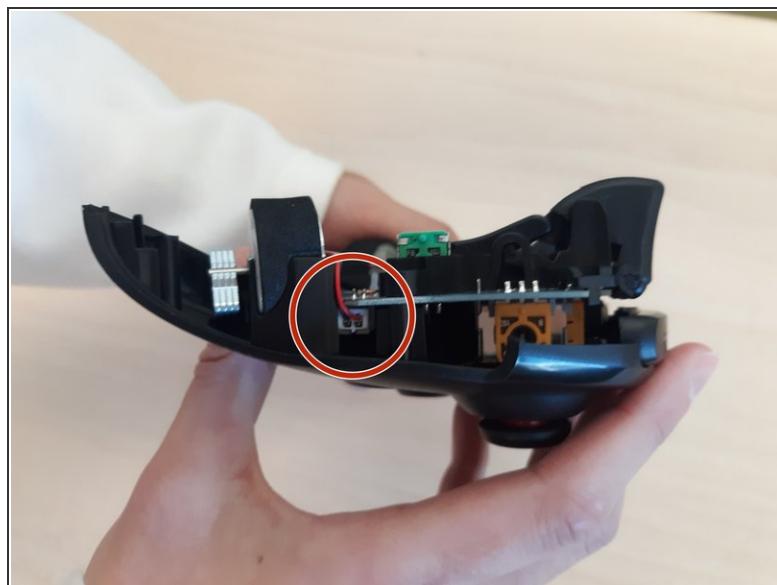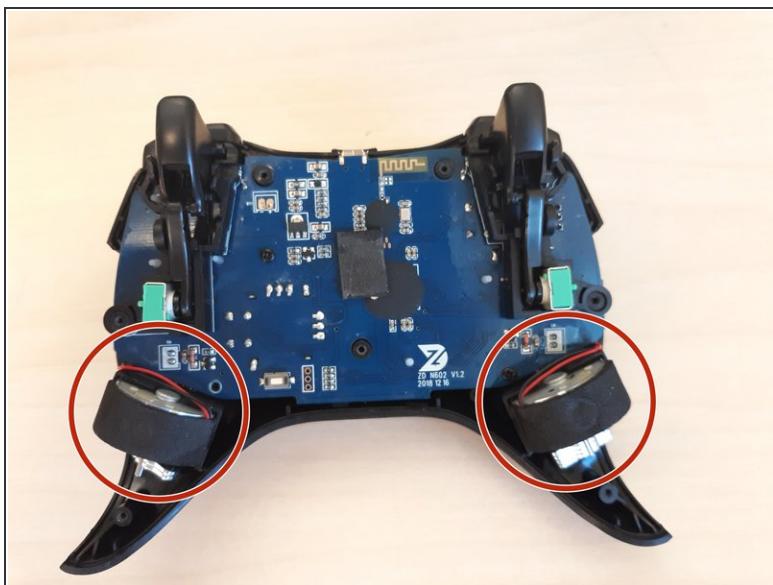

- Remove the electrical connector attaching each rumble motor to the controller.
- Lift up on the circular section of the rumble to remove it from the controller.

Step 7 — Motherboard

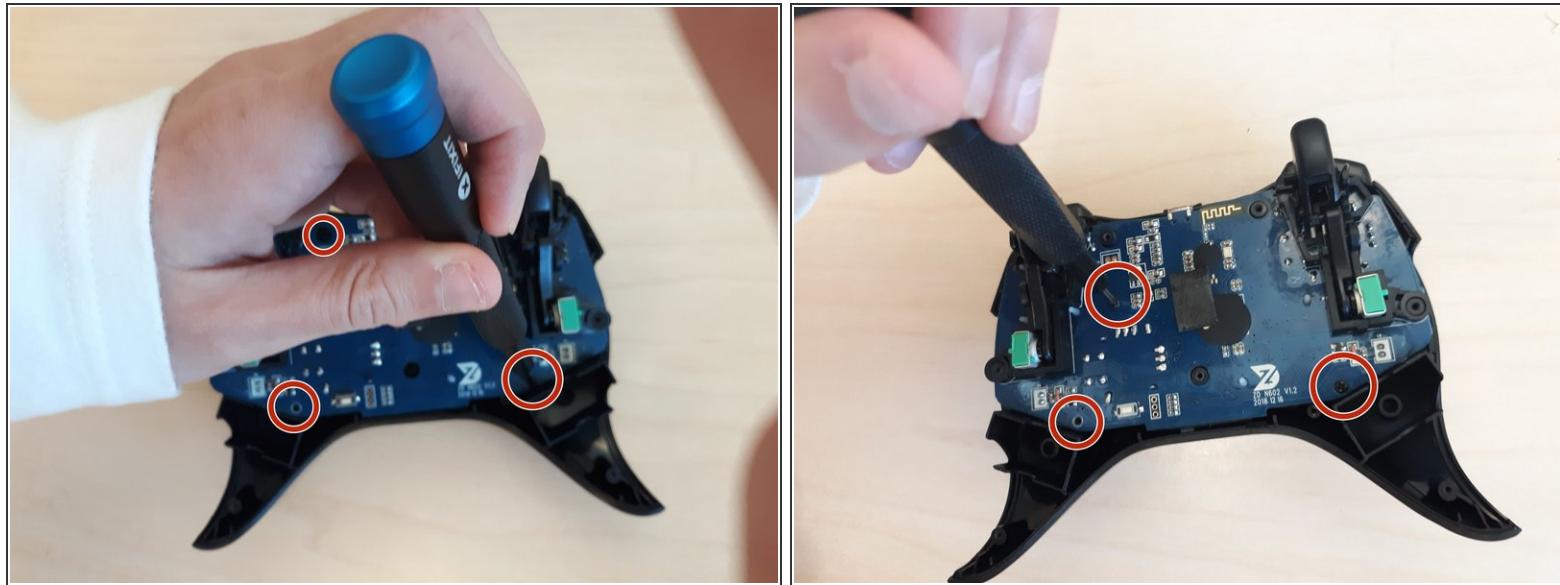

- Remove the three 1.2mm JIS #00 screws that hold the motherboard in place.

Step 8



- Lift the motherboard out of the controller.

Step 9 — D-Pad



- Simply remove the plastic piece of the directional pad. It is not glued in so it should come out easily.

To reassemble your device, follow these instructions in reverse order.