



# ZTE Avail 2 Battery Replacement

Prerequisite guide only

Written By: Samantha Smith



## Step 1 — Battery



 Before disassembling your ZTE Avail 2, be sure it is powered off.

- Remove the back cover using the notch at the bottom of the device.
- Pull the back cover from the front panel gently to remove it.

## Step 2



- Remove the battery by the notch in the back plate.

To reassemble your device, follow these instructions in reverse order.