



ZTE Jasper LTE Battery Replacement

How to remove the ZTE Jasper LTE battery and replace it.

Written By: Jeremy Douglass



INTRODUCTION

Battery replacement guide for ZTE jasper LTE. Follow the guide's procedure if the battery fails to charge.

TOOLS:

- Spudger (1)

Step 1 — Battery



- Insert the spudger into the bottom left corner of the phone.
- Use the spudger to loosen the back cover.

Step 2



- Insert the black spudger near the bottom left of the battery. There will be an opening to easily remove the battery.
- Continuing to use tool, prop up the battery and remove it.

To reassemble your device, follow these instructions in reverse order.