



ZTE Jasper LTE Speaker Replacement

How to replace speaker in an ZTE Jasper LTE.

Written By: Anthony Sou



INTRODUCTION

This guide shows you how to replace the speaker for the ZTE Jasper LTE phone. You might need to replace the speaker if no audio or sound is distorted.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery



- Insert the spudger into the bottom left corner of the phone.
- Use the spudger to loosen the back cover.

Step 2



- Insert the black spudger near the bottom left of the battery. There will be an opening to easily remove the battery.
- Continuing to use tool, prop up the battery and remove it.

Step 3 — Camera



- Remove nine 0.8mm Phillips #00 screws.

Step 4



- Remove the back cover by pulling upwards.
- Removing the back cover may take a bit of force.

Step 5



- Disconnect the gold component attached to the camera by pulling upwards using the tweezers.
- Remove the camera using the tweezers by gripping tightly around the camera and pulling upwards.

(i) Camera is attached to the motherboard with adhesive. As such, you may need to use light force to remove the camera.

Step 6 — Speaker



- Remove the speaker using the tweezers by gripping each side and pulling upwards.

(i) Speaker is attached to the back case with adhesive. As such, you may need to use light force to remove the speaker.

To reassemble your device, follow these instructions in reverse order.