



# ZTE Majesty Speaker Replacement

How to replace Replacing Speaker

Written By: Gustavo Hernandez



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

## Step 1 — Battery



- Place your phone in the palm of your hand.
- You will notice the groove and that the back detaches from the phone.

## Step 2



- Using either your finger or a plastic opening tool, pry the back off to reveal the battery.

## Step 3



- Pry the battery out of the groove in the phone with your finger.

## Step 4 — Speaker



- Remove the back of the phone by removing the 9 PH000 shown

## Step 5



- Pry the speaker as shown to remove.

To reassemble your device, follow these instructions in reverse order.