



# ZTE Telstra T95 SIM Card Replacement

You may have to replace your SIM card if you change carriers, phone number or if your card is damaged.


Written By: Jeesenia Rios



## INTRODUCTION

In this guide you will learn how to replace your SIM card. If your current SIM card is not functioning contact your service cellphone service provider to receive a replacement.

## Step 1 — Battery

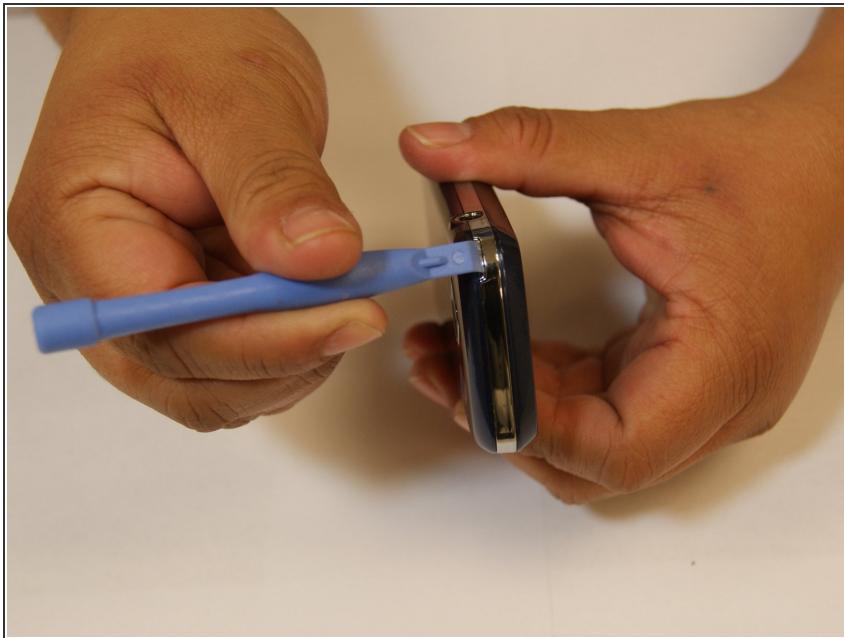


- Remove the back cover using a plastic opening tool. Insert it into each corner starting at the upper left of the back cover and pushing out.
- *(i)* You may also use your finger nail if you do not have a plastic opening tool at hand.

## Step 2



- Using a plastic opening tool, push out the battery by inserting it into the small groove at the top left corner of the battery and pushing out.
- The battery snaps out of place and you can remove it using your fingers.
- *(i)* When you are ready to insert a battery make sure the three copper teeth on the phone are aligned with the 3 copper dents on the battery.

## Step 3 — SIM Card

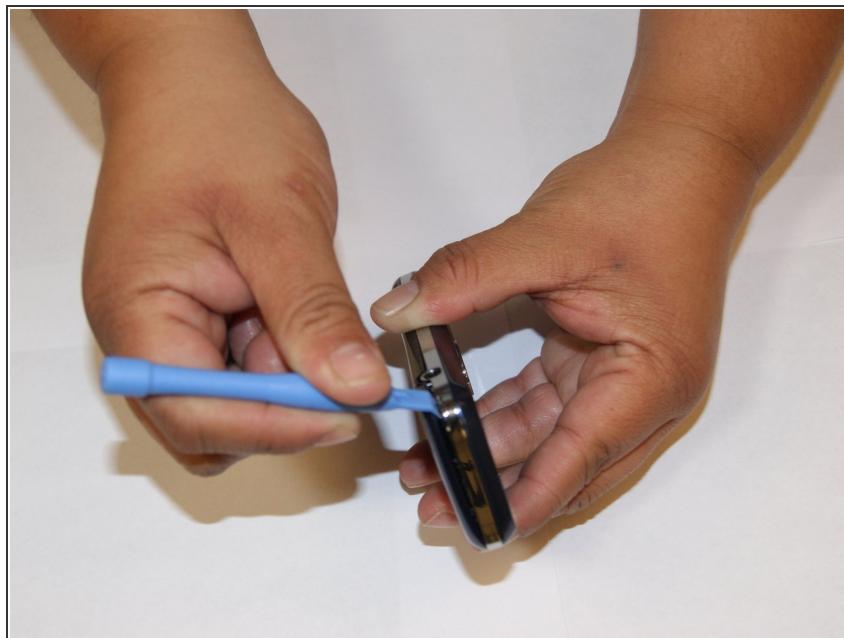

- Remove the back cover using a plastic opening tool. Insert it into each corner starting at the upper left of the back cover and pushing out.
- *(i)* You may also use your finger nail if you do not have a plastic opening tool at hand.

## Step 4



- Using your a plastic opening tool, push out the battery by inserting it into the small groove at the top left corner of the battery and pushing out.
- The battery snaps out of place and you can remove it using your fingers.

## Step 5



- Remove the SIM card by placing your index finger over it and sliding it out.

 When you are ready to re-insert the SIM card make sure the pink side facing up.

To reassemble your device, follow these instructions in reverse order.