




ZTE Tempo Front Speaker Replacement

The speaker has no sound.

Written By: omar

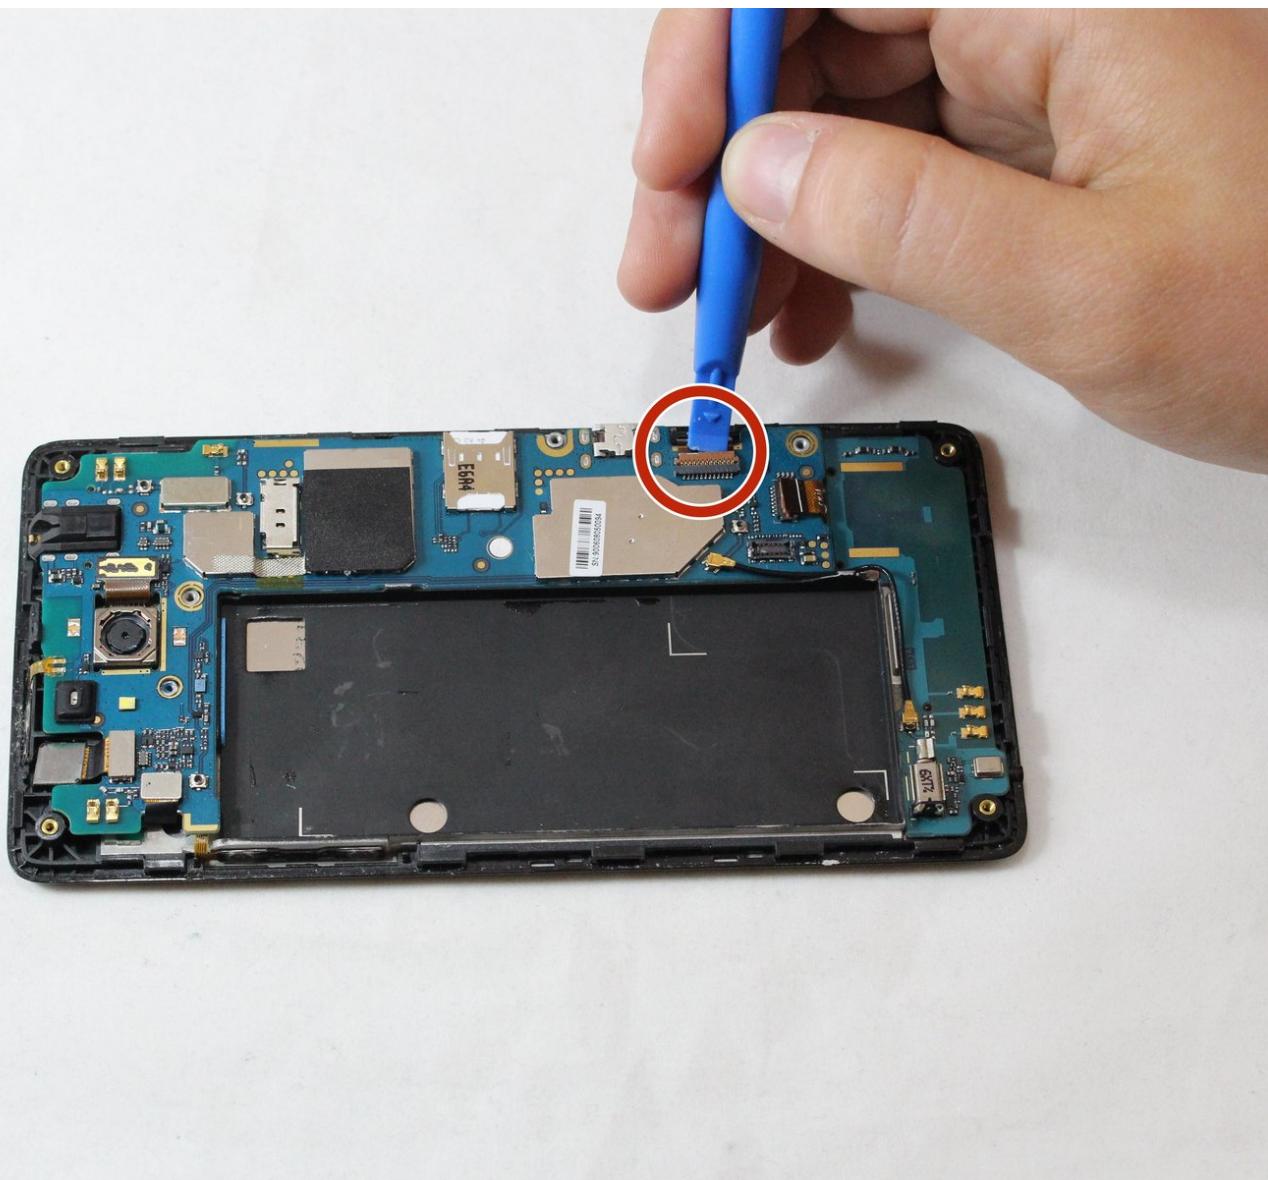


INTRODUCTION

The speaker has no sound. This guide will help to replace the speaker.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery

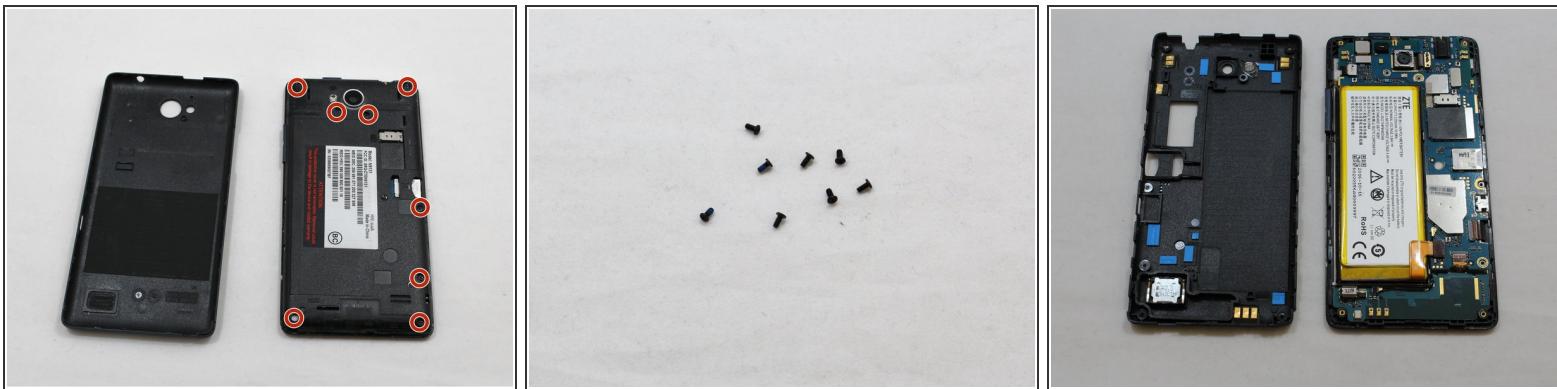

- Pry open the back case to get to the back cover.
- Remove eight 5mm screws with a PH0 screwdriver.
- Pry open the back cover with a plastic opening tool.
- Slide the plastic opening tool alongside the side seam twisting your hand forcefully to open the back cover.


i Pry open by finding an edge and forcing it open with the plastic opening tool.

Step 2




- Use a plastic opening tool to lift the press-fit connector up and disconnect the battery ribbon cable.
- Lift the battery up and remove it from the phone.

Step 3 — Front Speaker

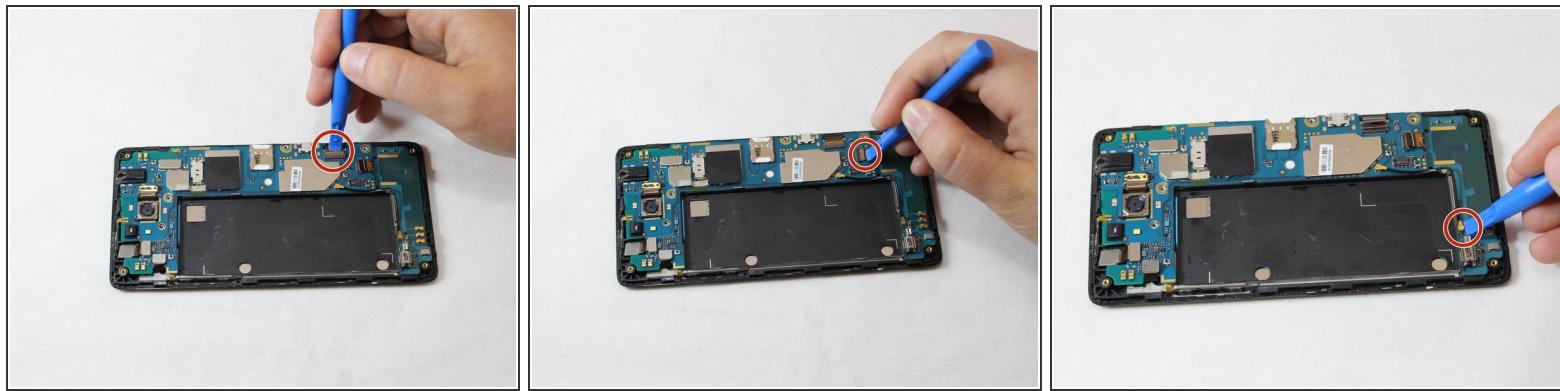

- Unplug wires with plastic opening tool by pulling wires to the side.

Step 4

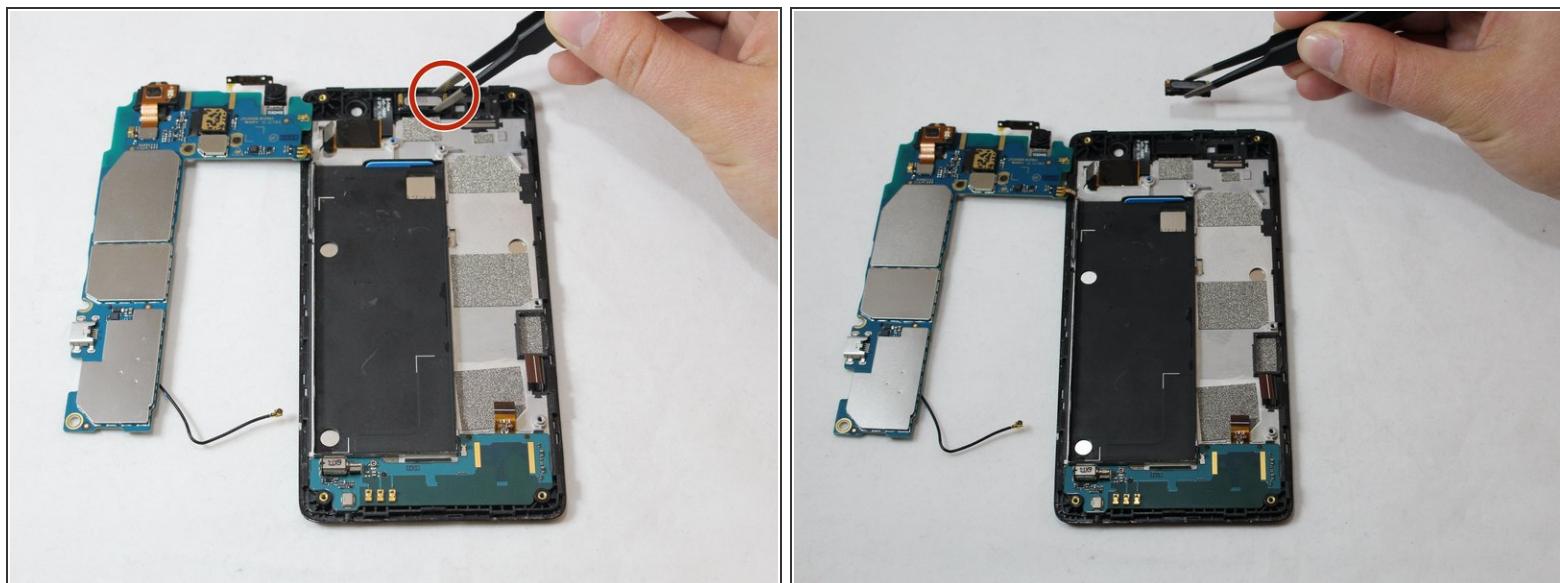

- Remove front speaker by using metal tweezers.

To reassemble your device, follow these instructions in reverse order.