



# ZTE Z667T Speaker Replacement

Speaker replacement guide for ZTE Z667T.

Written By: Michael Lidbetter




## INTRODUCTION

This guide shows how to replace the speaker for ZTE Z667T.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Speaker

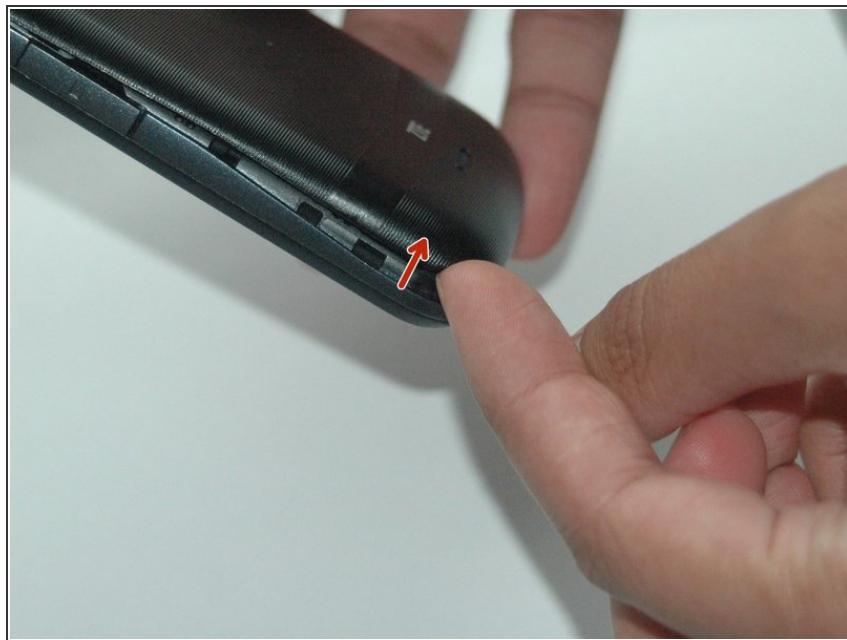

- Gently insert your fingernail into the bottom left crevice of the back cover and lift up.

## Step 2



- Remove the battery by inserting your fingernail at the top of the battery and lift up.

## Step 3



- Using a Phillips #000 screwdriver, remove the five screws located on the back case.


## Step 4



- Gently pry open the back case using the plastic opening tool.

**i** Pry open in multiple locations to avoid damage.

## Step 5

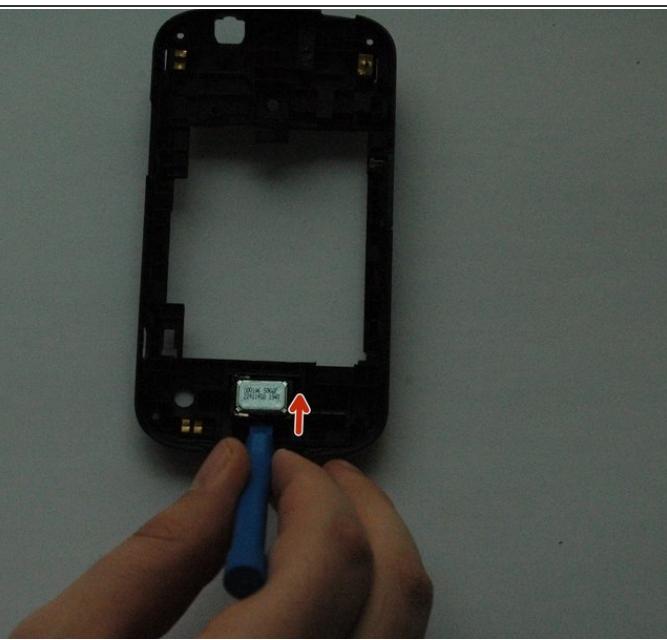

- Using the plastic opening tool, gently lift the speaker out of the back case.

To reassemble your device, follow these instructions in reverse order.