



Zoomer Dino Boomer Back Button Replacement

If the back button on Zoomer Dino Boomer breaks or stops working, this guide can be used to replace the button.

Written By: Lauren Mannix



This document was generated on 2019-09-22 02:27:57 PM (MST).

INTRODUCTION

This guide involves taking apart the Zoomer Dino Boomer in order to disconnect the sensor button from the main circuit board for replacement.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — Back Cover



ⓘ Power off Zoomer Dino Boomer before disassembly.

- Remove the eight 9.3mm Phillips #1 screws.


Step 2



- Turn dinosaur over and hold upright.
- Use the spudger to pry apart the back cover from the remainder of the Zoomer Dino Boomer.

⚠ Be gentle while removing the back cover. The back cover of the Zoomer Dino Boomer is still connected to the electronic system by a wire.

Step 3

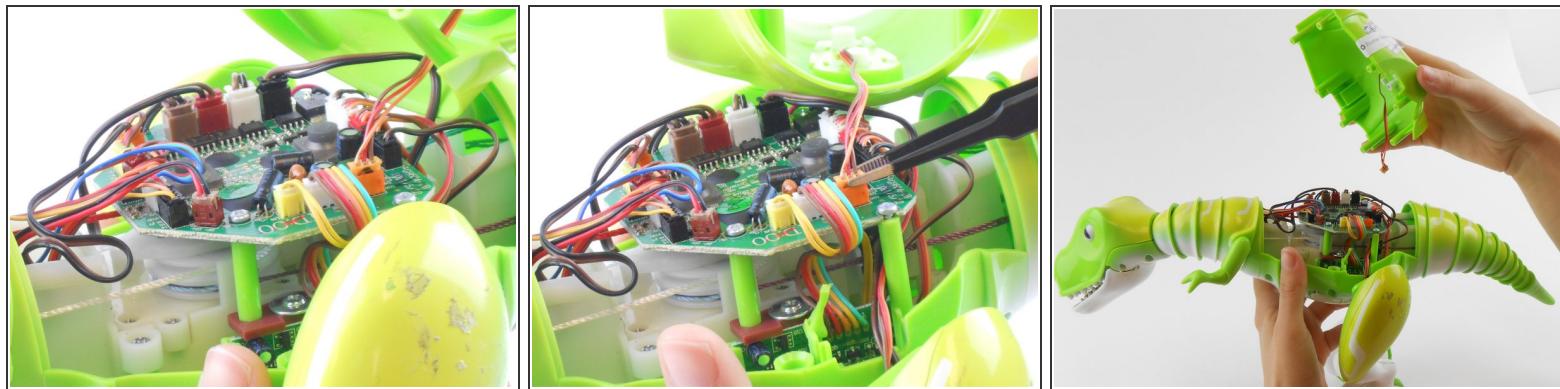


- Disconnect the wire that connects the back cover of the dino to the main circuit board by carefully pulling on the orange wire connector with tweezers.
- Remove back cover.

(i) If you are having difficulty removing the connector from its socket, push in the small tabs on the side of the connector with the tweezers. This step may take some work.


 Do not damage the wires or circuit board.

Step 4 — Back Button

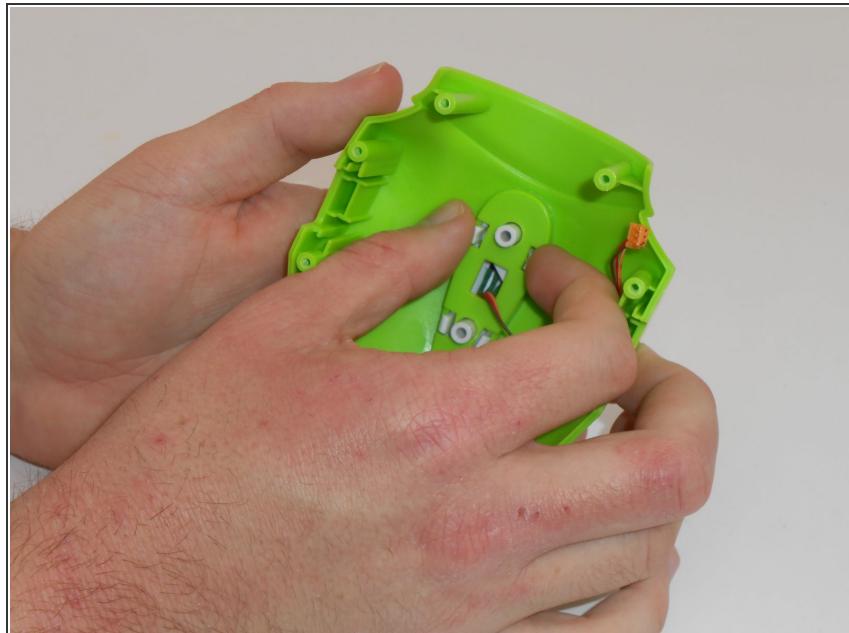


- Where the button is largest, squeeze the two white tabs together.

Step 5

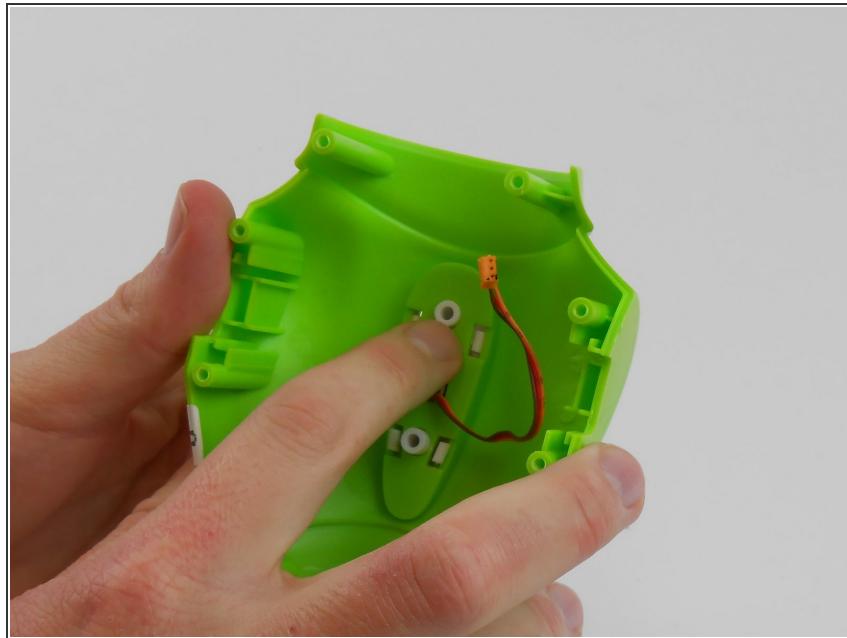

- Push in the white circular piece between these tabs as far as it will go.

Step 6

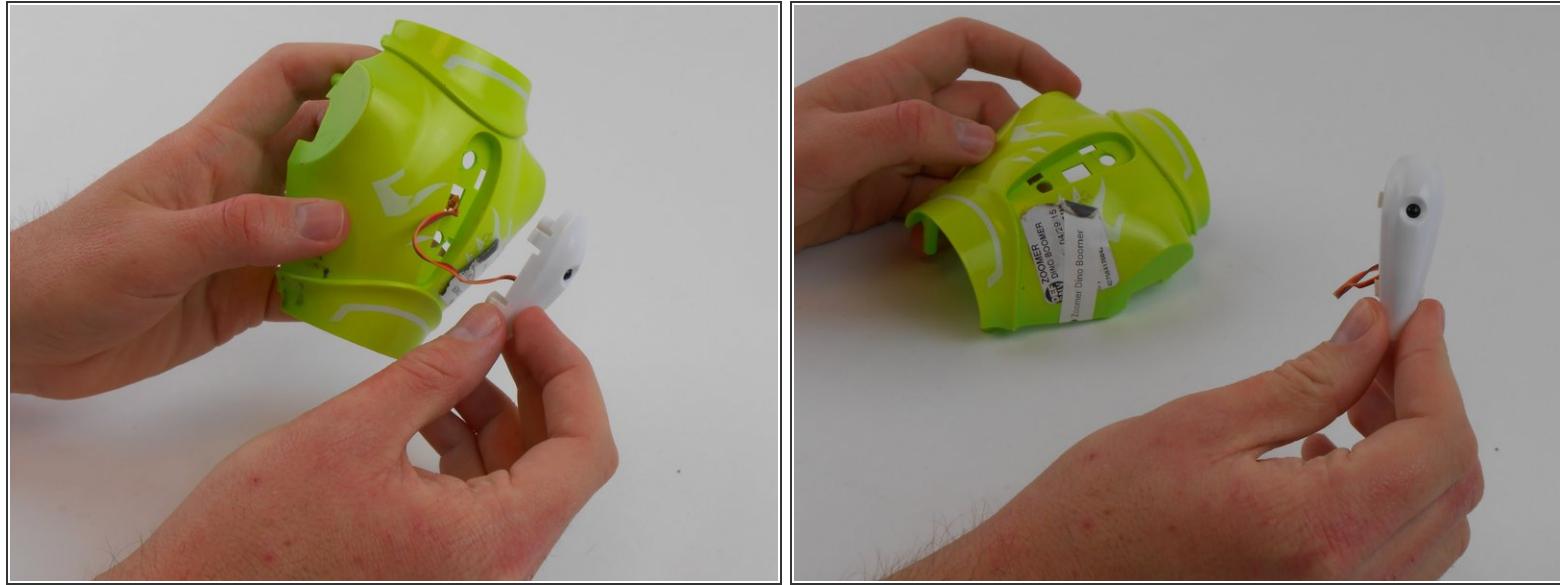

- Where the button is smallest, squeeze the two white tabs together and press the circular tab in-between them until the button comes loose.
- Remove the back button.

To reassemble your device, follow these instructions in reverse order.