



Zyxel firewall usg 50 Disassembly

Removal guide for ZyXEL firewall model USG 50

Written By: Eneider Colina




INTRODUCTION

Dismantling guide

TOOLS:


- New Item (1)

Step 1 — Removing the screws

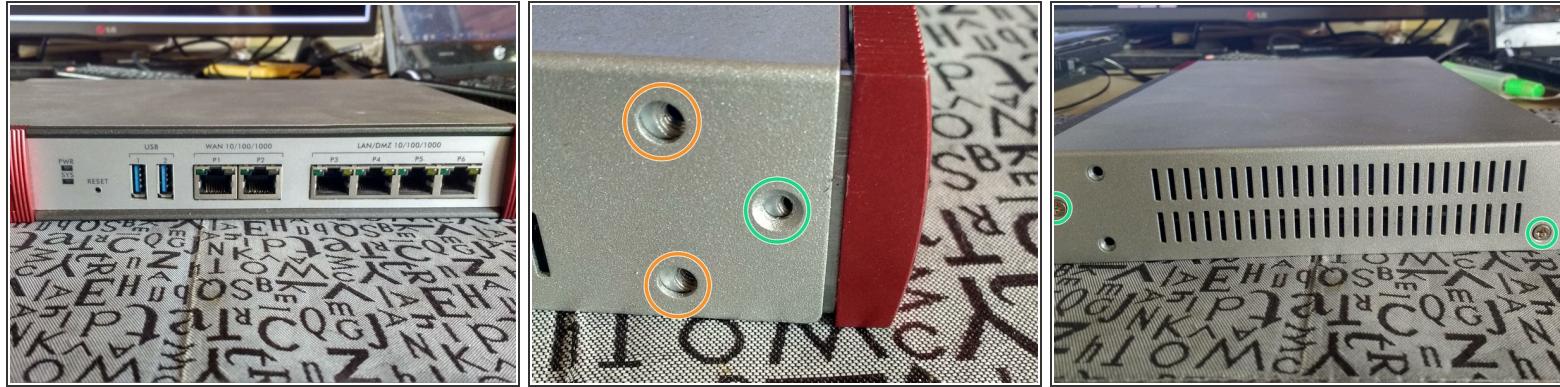

- Screws
- Frame kit for the rack (ears)

Step 2 — Removing DB9 connector

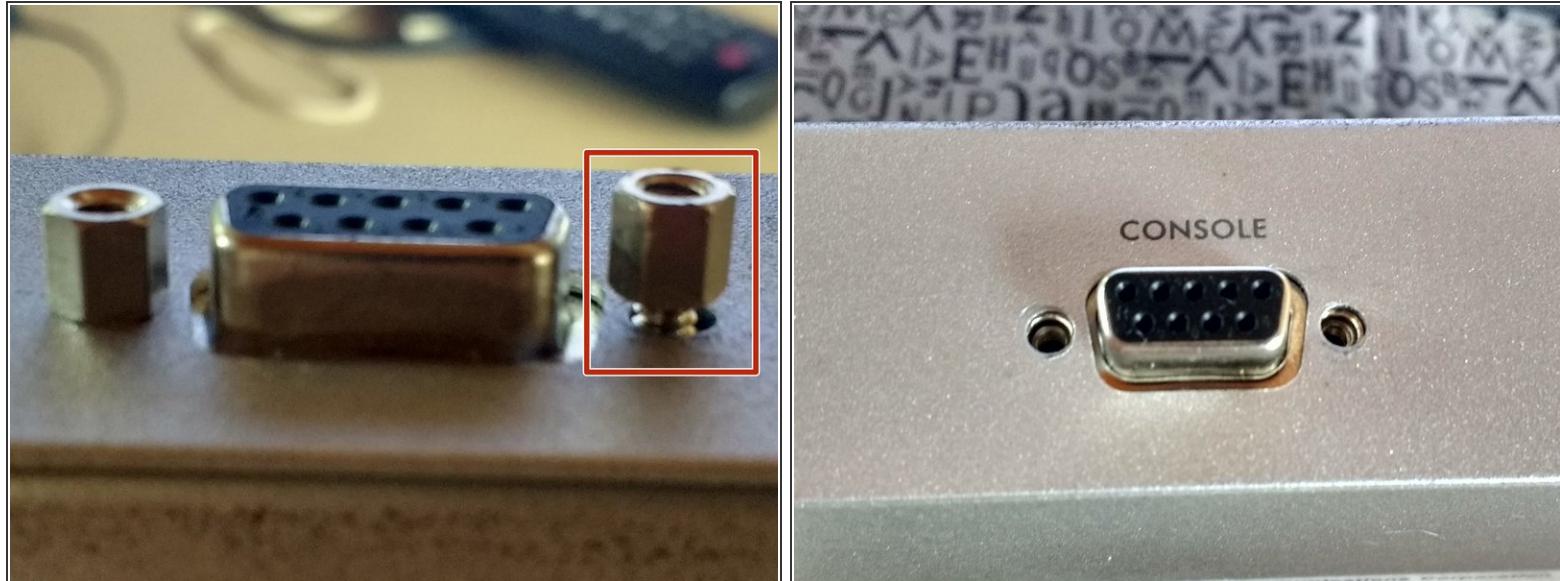

- To remove the cover it is necessary to disconnect the DB9 connector

Step 3 — Removing the lid



Zyxel Communications Corporation
Model Number : ZyWALL USG 50
Ethernet

- The lid comes out when sliding

Step 4 — Motherboard



- To remove the motherboard it is necessary to remove the 6 screws that fix it to the chassis
- If the device does not save the time, you can replace the battery

ⓘ CR2032 3 Volt Lithium

Step 5 — Chasis



- The rubbers prevent the plate from contacting the chassis.

To reassemble your device, follow these instructions in reverse order.