




hp envy m6-k025dx HHD Replacement

how to replace the HHD if missing or broken.

Written By: manuel

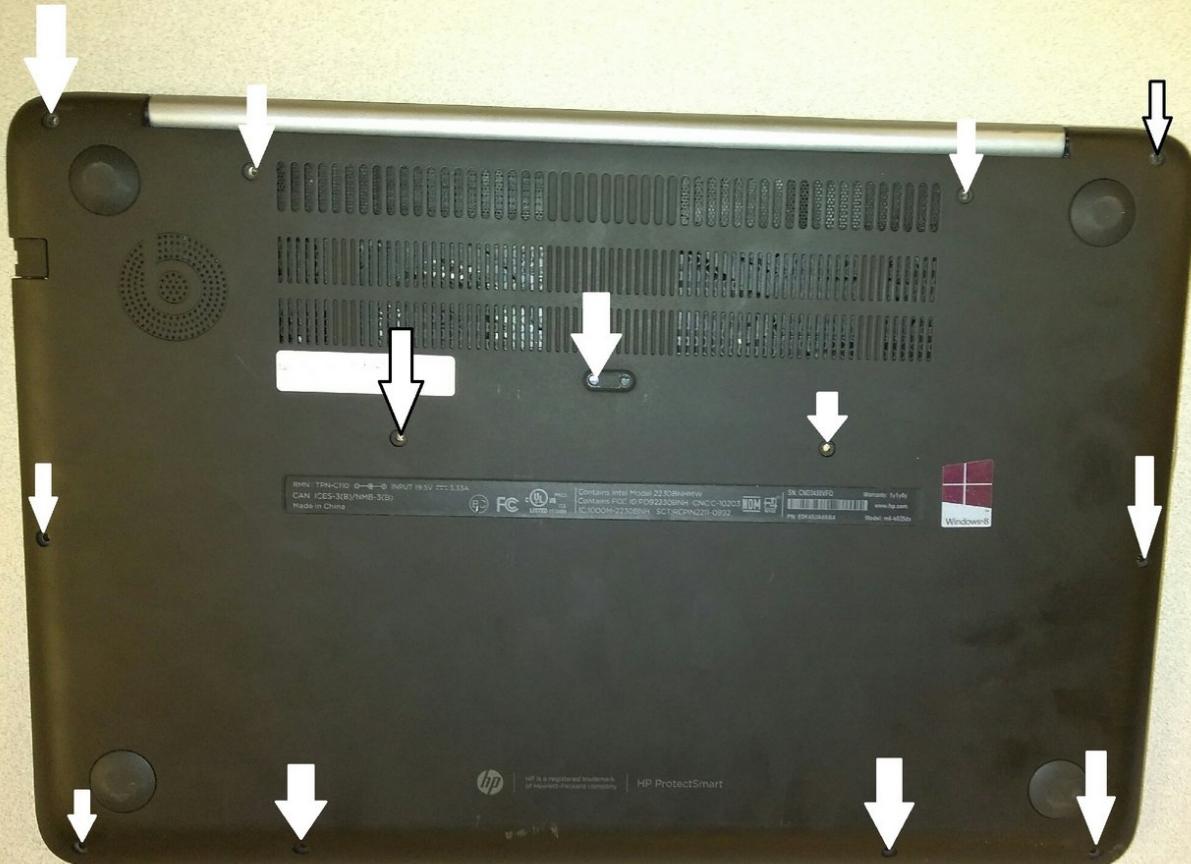

 **TOOLS:**

- 1 x PH0 screw bit (1)
- iFixit Opening Tools (1)
- Phillips PH000 Screwdriver (1)

 **PARTS:**


- HDD/SSD (1)

Step 1 — back panel




- remove the 12 screws on the back panel

Step 2 — remove back panel

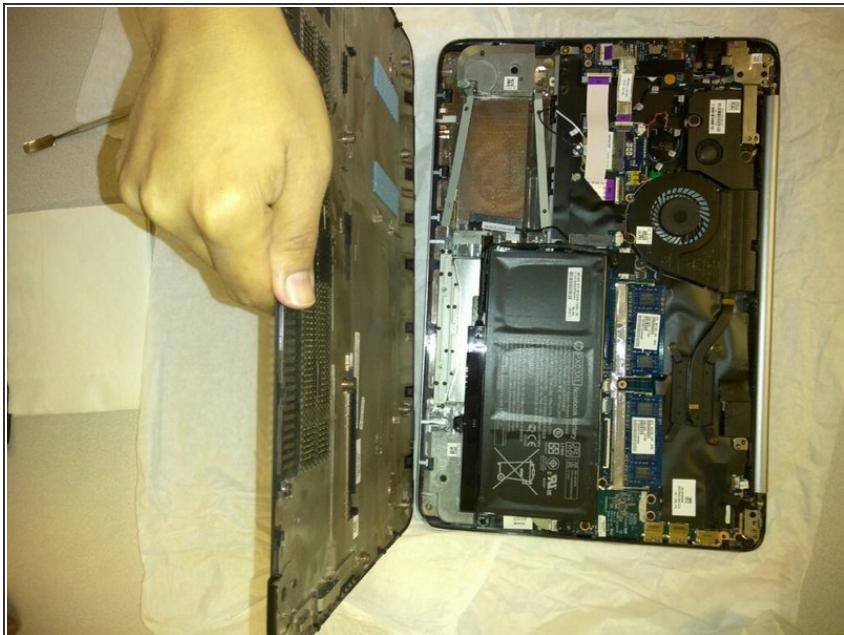


- using the pry tool lift the corners to unclip the back panel

Step 3 — removing HHD

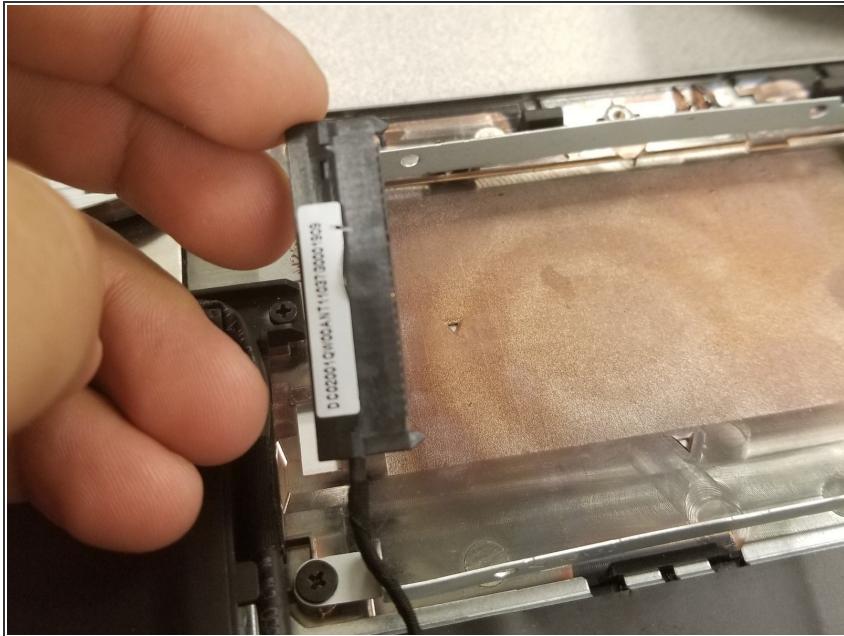

- remove the wire harness

Step 4 — removing HHD

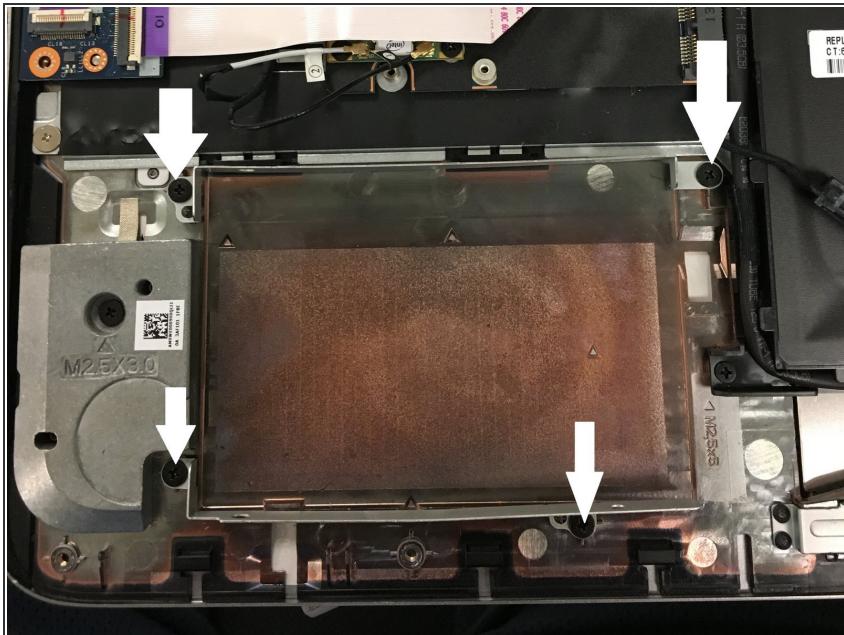

- unscrew the four screws that hold the HHD in place and replace it.

To reassemble your device, follow these instructions in reverse order.