



# iBook G4 12" 1.33 GHz Battery Replacement

Written By: Walter Galan



## INTRODUCTION

Changing the battery is easy -- all you need is a coin.

### TOOLS:

- [Coin \(1\)](#)

### PARTS:

- [iBook G3 or G4 12" Replacement Battery \(New\) \(1\)](#)

## Step 1 — Battery



- Lay your iBook upside down on a flat surface.
- Use a coin to rotate the battery locking screw 90 degrees clockwise.
- Lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.